



OWNER'S MANUAL

2' x 4'  
**BEAN BAG TOSS**  
**PREMIUM SET**

VIVA SOL. Translated: "Long live the Sun"  
 And long live all the fun you can have  
 under it. Viva Sol creates memorable  
 outdoor experiences by combining  
 craftsmanship with gamesmanship.



Check out our website to get more information and exciting news on other **VIVA SOL** Products.

**www.LONGLIVESUN.com**

Product Info - Playing Tips - News & Events - Replacement Parts

## GAME INSTRUCTIONS:

1. Detach the metal legs **P2** from the plastic clips.
2. Insert legs in the holes at each corner of the Board **P1** with the taller portion of the leg towards the back of the board. See **Figure 2**.
3. Carefully flip the board over as shown in **Figure 3** and repeat steps for second board.

**NOTE:** After use store all the bean bags back in the pouch and legs back in plastic clips as shown in **Figure 1**.

**NOTE:** This product can be played outdoors but must be stored indoors.

### Replacement Parts List for Bean Bag Toss Set.

Part #	Description	Qty.
VS5000-P1	WOODEN TARGET	2
VS5000-P2	METAL LEGS	4
VS5000-P3	BEAN BAG BLUE	4
VS5000-P4	BEAN BAG GREEN	4

### STORAGE POSITION

Figure 1



### ASSEMBLED POSITION

Figure 2



### PLAY POSITION

Figure 3



## GAME RULES

- The Boxes Are Placed 30 Feet Apart From The Center Of The Hole To The Center Of The Other Hole.
- The game can be played with either 2 or 4 players.
- Each team has 4 bags to throw.
- When 4 players are playing, one member from each team stands at both ends of the boxes.
- Each player must throw from behind the front of the box. This is the foul line. The player must not pass the foul line or the player's throw does not count and the bag is removed.
- Each team alternates shots beginning with the team that scored the last point.

## SCORING

- Points are scored when a player has a bag on the board or in the hole.
- Only one team can score points per round because points cancel each other out.
- A bag put on the board = 1 point
- A bag put in the hole = 3 points
- The maximum amount of points scored in a single round is 12 points. (4 bags from the same team in the hole) an example of cancellation of points is if one team has 1 bag in the hole and 3 bags on the board and the other team has 2 bags in the hole and none on the board.  $3 + 1 + 1 + 1 = 3 + 3 + 0 + 0$ . if this were to happen in a game the resulting round would be called a wash and the first team to throw in the last round would throw again in the next round.
- The game is over when one team scores 21 points, but the winning team must win by 2 points.
- A bag that hits another players bag or any other bag is legal and still in play. if a player throws a bag and the result is that it hits the other players bag in the hole, the bag in the hole counts as such. if a player knocks another players bag off of the board, that bag stays off of the board.
- A bag that hits the ground for any reason is considered dead. if a bag bounces and lands on the board it is dead and must be removed from the board before play may continue.

## 90-Day Limited Warranty

This consumer warranty extends to the original consumer purchase of any ESCALADE® SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of ninety (90) days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE® SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above ninety (90) day warranty period, ESCALADE® SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-866-873-3528 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706 - Attn: Warranty Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE® SPORTS strongly recommends that the Product is insured for value prior to mailing.

**WARRANTY DISCLAIMERS:** ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE NINETY (90) DAY WARRANTY PERIOD. ESCALADE® SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.