


CLEANING AND CARE

Outdoor Fireplace

Model No. WAD1050SP

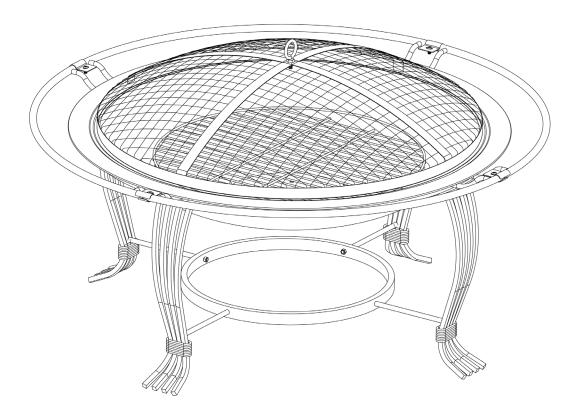

ALWAYS refer to owner's manual for all warnings, safety information, operating instructions, care instructions and troubleshooting.

Cleaning and Care

A CAUTION:

- All cleaning and maintenance should be done when appliance is cool (about 45 minutes) and with the fuel supply removed.
- 2. DO NOT clean any part of this appliance in a self-cleaning oven. The extreme heat will damage the finish.

Inspecting

This outdoor fireplace should be inspected on a regular basis to ensure product safety and longer product life.

- ▲ CAUTION: Do NOT attempt to inspect this outdoor fireplace until the fire is COMPLETELY out and the fireplace has cooled.
- 1. Check handles to make sure they are secure.
- 2. Check components for any signs of damage or rust.
- 3. If damage to any component is detected, do NOT operate until repairs are completed.

Cleaning

This outdoor fireplace should be cleaned on a regular basis to ensure product safety and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

- ▲ CAUTION: Do NOT attempt to clean this outdoor fireplace until the fire is COMPLETELY out and the fireplace has cooled.
- A CAUTION: Do NOT use oven cleaner or abrasive cleaners as they will damage this product.
- **⚠** CAUTION: Do NOT clean any part of this outdoor fireplace in a self-cleaning oven as it may damage the finish.
- 1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
- For hard to clean stains, use a citrus-based degreaser and a nylon scrubbing brush.
- 3. Rinse clean with water.
- 4. Remove built-up creosote from components with a chimney cleaning product.

Tip: Keeping the outdoor fireplace covered when cooled and not in use will help protect it from the elements

Storage

- ▲ CAUTION: Do NOT move or store this outdoor fireplace until the fire is COMPLETELY out and the fireplace has cooled.
- 1. Once the fire is out, embers are cold and outdoor fireplace is cool to the touch, remove and properly dispose of the ashes.
- 2. Store the outdoor fireplace assembled in a cool, dry location away from children and pets.