


17. This unit is designed for 'pulse action' use only. Avoid using it continuously for periods over 1 min.
18. Check bowl for presence of foreign objects before operating.
19. To avoid fire hazards do not operate in the presence of explosive or flammable fumes.
20. Do not use appliance except as intended.

CAUTION: DO NOT IMMERSE IN WATER.

**SAVE THESE INSTRUCTIONS
THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!**

PARTS & FEATURES

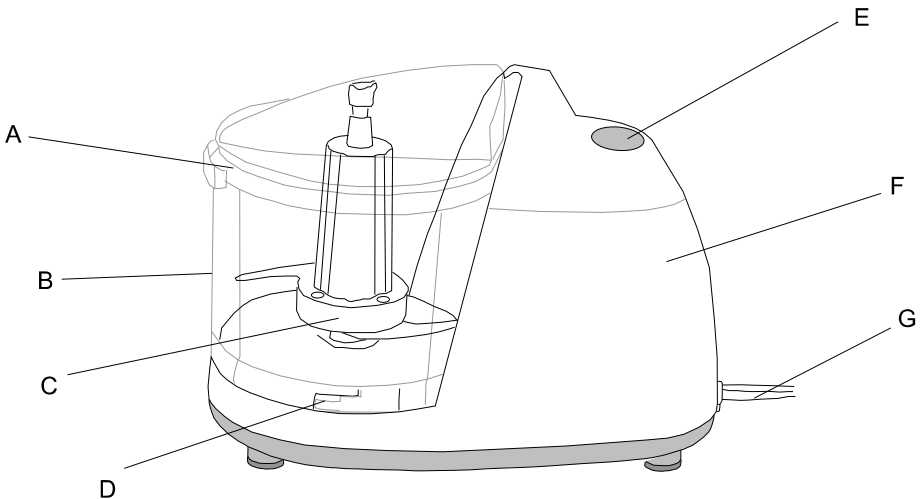

- A) **Clear Locking Lid:** The lid is to be used with the cutting blades for chopping, mincing and dicing.
- B) **Clear Chopping Cup:** 1.5 cup capacity.
- C) **Chopping Blade:** The cutting blade is used for chopping, mincing and dicing and can only be used with the cover in place.
- D) **Locking Latch:** This slot in the base allows the tab cover to slide into the interlock. This ensures that all parts are positioned correctly. Your food chopper will not operate if the parts are not positioned correctly.
- E) **Power Pulse Button:** The pulse button controls the power of your food chopper. It works intermittently to process your ingredients.
- F) **Base:** The base contains the motor of your food chopper and should **NEVER** be immersed in water.
- G) **Power Cord**

NOTE: For safety, this unit has an interlocking system. The unit will not operate unless the extended tab on the cover is correctly locked in within the base Locking Latch slot on the bottom of the Base. Do not attempt to start