




Instruction Manual

Sku # 1002433009
Model: BRHO710003TH2

IMPORTANT: Please read this instruction carefully before assembly and save it for reference.

1. Place the cement block into the wooden pot. Insert the bottom tree trunk into the cement block. Insert the tree top into the bottom tree section. Connect the light string plugs as shown in the diagram, making sure the connectors are inserted in the correct orientation and polarity.

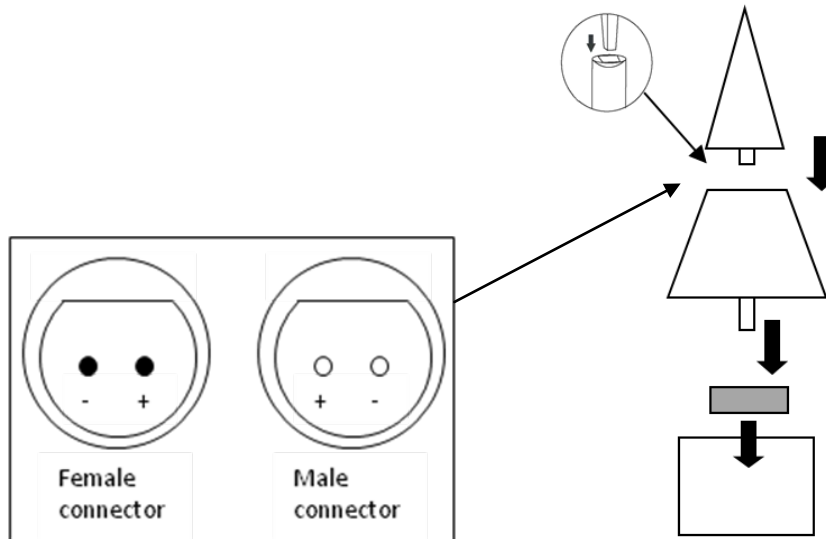

2. Shape the branches by working from the bottom of the tree upwards. Gently pull down the branches. Straighten the branches and fan out the tips.
3. After shaping the tree, step back and take an overall look. Shift branches to fill any gaps. Slightly upsweep all branch tips for a uniform look.
4. Open the lid of the battery box by releasing the locks. Insert 4 AA batteries* into the compartment, making sure that the batteries are in the correct orientation. Close the lid with the tabs.
5. Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn off and on in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.
6. Replace batteries when the lights become dim. Remove batteries from unit when it is not in use.

* Use 1.5V AA batteries or equivalent. Batteries not included.

STORAGE INSTRUCTIONS

1. Press the switch on the battery box to the "OFF" position. Remove the batteries from the battery box.
2. Remove all decorations from the tree.
3. Disconnect the light string connector between the two tree sections.
4. Carefully lift off the top tree section from the bottom tree section. Carefully lift off the bottom tree section from the cement block.
5. Store in original carton. Do not store in a damp area or in an area where the temperature exceeds 40°C (104°F).

TROUBLESHOOTING INSTRUCTIONS

If the lights do not work:

1. In cold temperatures, lithium AA batteries must be used. Otherwise, the life-span of the batteries will be greatly reduced, or the lights will not turn on at all.
2. Ensure the batteries are new and are inserted correctly into the battery box.
3. If a bulb is not working, replace the faulty bulb as shown in the figures below. Use the replacement bulbs provided.



CAUTIONS:

1. Read all instructions and warning tags carefully.
2. This porch tree is for indoor and covered entry use. Do not place in uncovered area where there is prolonged exposure to sunlight or where rain/snow accumulates on the garland for compatibility.
3. Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
4. Do not use candles on the porch tree.
5. Do not install near fountains, bathtubs, sinks, or other wet areas.
6. Remove batteries from product at end of season before storing to avoid battery leakage and corrosion.
7. This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.
8. For festive use only, not intended for consecutive use over 90 days each season.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
12. Do not dispose batteries in fire or other similar sources of heat.
13. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or equivalent.

Note: For festive use only, not intended for consecutive use over 90 days each season.

**SAVE THESE INSTRUCTIONS
FOR FUTURE USE**

MADE IN CHINA