

Please Read This Before You Start

The Motion-Activated Porch Light uses both a **MOTION** sensor and a **PHOTO** sensor. The photo sensor prevents the light from being activated during daylight hours or when other light sources are present.

When batteries are installed the light will come on and the electronic circuitry will set. The light will turn off when the process has completed.

If the light does not turn off after battery installation and initial circuitry set, we recommend testing the unit by placing it in dark room away from any possible heat and light sources. If operating normally, the light should turn off after 30-45 seconds if no motion is present. Light should turn back on when motion is again detected. If light does not function properly please see Troubleshooting below or contact us for further assistance.

Manual Operation

This light operates by sensor only. It does not have an on/off switch. However the light may be turned off by rotating the sensor toward the wall (mounting surface) so that it is covered by the light casing. The battery door will be visible, but the sensor will not. In this position, the sensor will not be able to detect motion and will not activate the light. Return to normal position when operation by sensor is desired.

PLEASE READ THE ENCLOSED INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT.

Troubleshooting

No mounting plate

- Remove the mounting plate as per the diagram in the instructions.

Light will not turn off

- Test the light as instructed above.

Light will not turn on

- Check to make certain that your batteries are fresh.
- Check the alignment (polarity) of the batteries.
- Check to make certain that the battery holder has been properly installed and the contacts properly aligned.

Moisture in the battery case

- Check to make certain that the battery door has been securely closed to ensure a tight fit against the rubber seal.