

# PORTABLE AIR CONDITIONER



## ~~OWNER'S MANUAL~~ **OWNER'S MANUAL**

ENGLISH & ESPAÑOL



**Model:**  
**MPG-08CRN1-BH9**  
**MPG-10CRN1-BH9**

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your air conditioner. Before operating this product, please read the instructions carefully and save this manual for future use.



## Tarjeta de Registracion de Producto

Es sencillo! Cumple y envia su Tarjeta de Registracion de Producto hoy!

Nombre

Dirección

Ciudad  Estado  Código postal

Teléfono (Opcional)  /  -

Dirección de E-mail (Opcional)

Donde Comprado

Numero de Modelo                      Numero de Serie                      Mes                      Dia                      Año

REV 11/04                                      Fecha de la compra

**Porfavor devuelve su Tarjeta de Registracion de Producto hoy!**



## Product Registration Card

It's simple! Complete and mail your Product Registration Card today!

Name

Address

City  State  Zip

Phone (Optional)  /  -

E-mail Address (Optional)

Where Purchased

Model Number                      Serial Number                      Month                      Day                      Year

REV 11/04                                      Date of Purchase

**Please return your Product Registration Card today!**

MIDEA AMERICA CORP  
PRODUCT REGISTRATION CENTER  
10305 NW 41ST ST STE 221  
DORAL FL 33178-2976



PLACE  
STAMP  
HERE

Postage  
Required.  
Post Office will  
not deliver  
without proper  
postage.



## Product Warranty Card Tarjeta de Garantia de Producto

### Air conditioner warranty

Your product is protected by this warranty:  
Your appliance is warranted by Midea. Any obligations for services and parts under this warranty must be performed by Midea Consumer Services or an authorized Midea servicer  
To contact a Customer Service Representative, Call Midea TOLL FREE

**1-866-64-MIDEA®**

### Garantia

Su producto está protegido por esta garantía:  
Su producto está garantizado por Midea. Cualquier obligación de proporcionar servicio o repuestos establecida en esta garantía deberá ser cumplida por los Servicios al consumidor de Midea o por un representante autorizado de Midea.  
Para comunicarse con un Representante de Servicio al Cliente, tenga la bondad de llamar por teléfono sin cargo alguno a Midea, al número:

**1-866-64-MIDEA®**

# CONTENTS

---

## **SAFETY PRECAUTIONS**

Always do this.....	2
Never do this.....	2
Operating condition.....	2
Electrical information .....	3

## **IDENTIFICATION OF PARTS**

Accessories .....	3
Names of parts.....	4

## **AIR CONDITIONER FEATURES**

Electronic control operating instructions .....	5
---	---

## **OPERATING INSTRUCTIONS**

Operating instructions .....	7
------------------------------	---

## **INSTALLATION INSTRUCTIONS**

Location .....	9
Window kit installation .....	9
Exhaust hose installation .....	12

## **CARE AND MAINTENANCE**

Care and maintenance .....	13
----------------------------	----

## **TROUBLESHOOTING TIPS**

Trouble shooting .....	14
------------------------	----

### **NOTE**

The rating data indicated on the energy label is based on the testing condition of installing the un-extended air exhaust duct without adaptor ( The duct and the adaptor are listed in the accessories chart of the Instruction Manual ).



## SAFETY PRECAUTIONS

### Safety rules

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.

#### ! Always do this

- Your air conditioner should be used in such a way that it is protected from moisture. e.g. condensation, splashed water, etc. Do not place or store your air conditioner where it can fall or be pulled into water or any other liquid. Unplug immediately.
- Always transport your air conditioner in a vertical position and stand on a stable, level surface during use.
- Turn off the product when not in use.
- Always contact a qualified person to carry out repairs. If the supply cord is damaged it must be repaired by a qualified repairer.
- Keep an air path of at least 30cm all around the unit from walls, furniture and curtains.
- If the air conditioner is knocked over during use, turn off the unit and unplug from the mains supply immediately.

#### ⊘ Never do this

- Do not operate your air conditioner in a wet room such as a bathroom or laundry room.
- Do not touch the unit with wet or damp hands or when barefoot.
- Do not press the buttons on the control panel with anything other than your fingers.
- Do not remove any fixed covers. Never use this appliance if it is not working properly, or if it has been dropped or damaged.
- Never use the plug to start and stop the unit.
- Always use the switch on the control panel.
- Do not cover or obstruct the inlet or outlet grilles.
- Do not use hazardous chemicals to clean or come into contact with the unit. Do not use the unit in the presence of inflammable substances or vapour such as alcohol, insecticides, petrol, etc.
- Do not allow children to operate the unit unsupervised.
- Do not use this product for functions other than those described in this instruction manual.

#### Energy Save

- Use the unit in the recommended room size.
- Locate the unit where furniture cannot obstruct the air flow.
- Keep blinds/curtains closed during the sunniest part of the day.
- Keep the filters clean.
- Keep doors and windows closed to keep cool air in and warm air out.

### Operating condition

- The air conditioner must be operated within the temperature range indicated below:

MODE	ROOM TEMPERATURE
COOL	17°C~32°C / 62°F~92°F
DRY	13°C~32°C / 54°F~92°F

### Suggested tools for window kit installation

1. Screwdriver (medium size Phillips)
2. Tape measure or ruler
3. Knife or scissors
4. Saw (In the event that the window kit needs to be cut down in size because the window is too narrow for direct installation)

## IDENTIFICATION OF PARTS


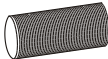




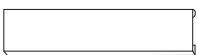




### For your safety

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Avoid fire hazard or electric shock. Do not use an extension cord or an adaptor plug. Do not remove any prong from the power cord.

### **▲ WARNING** Electrical Information

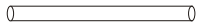- Be sure the electrical service is adequate for the model you have chosen. This information can be found on the serial plate, which is located on the side of the cabinet and behind the grille.
- Be sure the air conditioner is properly grounded. To minimize shock and fire hazards, proper grounding is important. The power cord is equipped with a three-prong grounding plug for protection against shock hazards.
- Your air conditioner must be used in a properly grounded wall receptacle. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install the proper receptacle.
- Ensure the receptacle is accessible after the unit installation.

### Accessories

PARTS :	PARTS NAME :	PARTS NUMBER:	QUANTITY :
	Air Outlet Tie-in	<b>201125690025</b>	1
	Air Outlet Pipe	<b>201125190097</b>	1
	Adaptor (for temporary duct mounting)	<b>201125690024</b>	1
	Band (For bundling the power cord )	<b>201125080113</b>	1
	Drain Hose(Continuous drainage)	<b>201125190006</b>	1
	Window Slider Kit II	<b>201125090002</b>	1
	Window Slider Kit I	<b>201125090001</b>	1
	Foam	<b>202125090082</b>	1
	Foam	<b>202125090090</b>	2
	Remote Controller	<b>2033550A3129</b>	1
	Battery	<b>202319900034</b>	2

- Check all the accessories are included in the package and please refer to the installation instructions for their usage.

**NAMES OF PARTS**



Before Using This Air Conditioner, be Sure To Check The Back Of The Unit To Make Sure That The Lower Drain Plug Is Security In Place .  
See Fig.2 13

**FRONT VIEW**

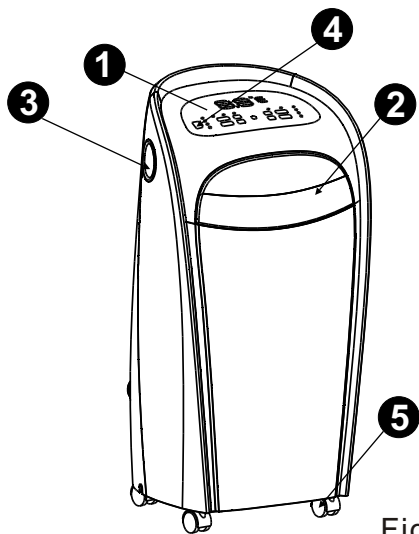


Fig.1

- 1 Operation Panel
- 2 Horizontal Louver Blade
- 3 Carrying Handle (both sides)
- 4 Remote signal receptor
- 5 Caster

**REAR VIEW**

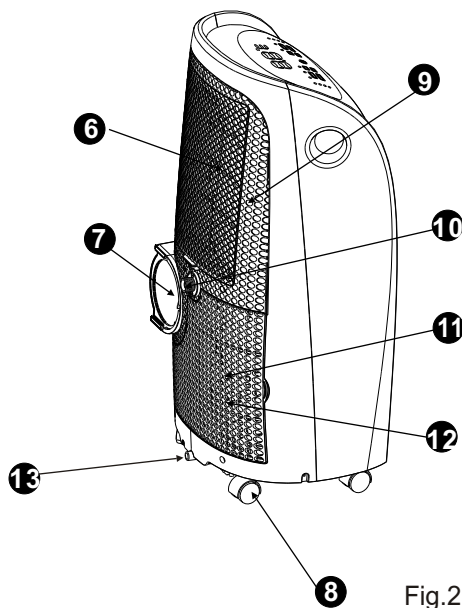


Fig.2

- 6 Upper Air Filter (Behind the grille)
- 7 Air Outlet
- 8 Caster
- 9 Air intake
- 10 Drain Outlet
- 11 Air intake
- 12 Lower Air Filter (Behind the grille)
- 13 Bottom drain plug

## AIR CONDITIONER FEATURES

### ELECTRONIC CONTROL OPERATING INSTRUCTIONS

Before you begin, thoroughly familiarize yourself with the control panel and remote controller and all functions, then follow the symbol for the functions you desire.

**The unit can be controlled by the unit control panel alone or with the remote controller .**

### OPERATION PANEL OF THE AIR CONDITIONER

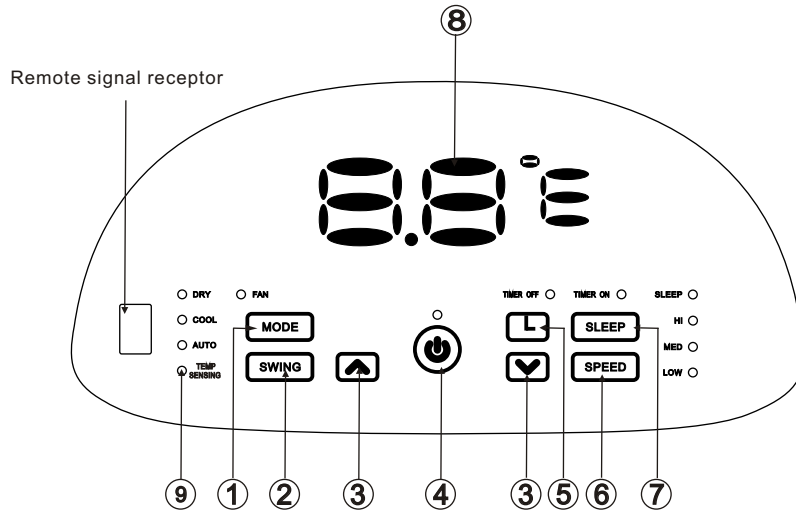


Fig.3

#### ① MODE select button

- To choose operating mode, press the MODE button. Each time you press the button, a mode is selected in a sequence that goes from Auto, Cool, Dry, Fan. The indicator light beside will be illuminated and remained on once the mode is selected.

#### To operate on Auto feature:

- In this mode, the fan speed can not be adjusted, it starts automatically at a speed according to the room temperature. If the room does not get too warm, it will stay at Low speed.

#### To operate on Fan Only:

- Use this function only when cooling is not desired, such as for room air circulation. You can choose any fan speed you prefer.
- During this function, the display will show the actual room temperature, not the set temperature as in the cooling mode.

#### ② SWING button

Use the SWING button to initiate the airflow direction setting operation (This button is available only when the unit is on).

1. Press the **SWING** button, the swing feature is activated.
2. Press the **SWING** button again to stop the movement.

#### ③ UP ( ^ ) and DOWN ( v ) button

Used to adjust (increase / decrease) temperature settings (1°C/1°F increments) in a range of 17°C (62°F) to 30°C (86°F) or the TIMER setting in a range of 0~24hrs. The control is capable of displaying temperature in degrees Fahrenheit or degrees Celsius. To convert from one to the other, press and hold the Up and Down buttons at the same time for 3 seconds.

#### ④ POWER button

Power switch on/off.

## AIR CONDITIONER FEATURES

---

### ⑤ TIMER button

- When the unit is on, first press the Timer button, the indicator light above word TIMER OFF illuminates. It indicates the Auto Stop program is initiated.
- When the unit is off, first press the Timer button, the indicator light above word TIMER ON illuminates. It indicates the Auto Start program is initiated.
- Press or hold the UP arrow or DOWN arrow to change the Auto time by 0.5 hour increments, up to 10 hours, then at 1 hour increments up to 24 hours. The control will count down the time remaining until start.
- The selected time will register in 5 seconds and the system will automatically revert back to display the previous temperature setting.
- Turning the unit ON or OFF at any time or adjusting the timer setting to 0.0 will cancel the Auto Start/Stop function.
- When LED display window displays code of E1, E2, P1 or the Auto Start / Stop function will also be cancelled.

### ⑥ SPEED button

Used to select the Fan Speed in four steps-Low, Med, High or Auto (No indicator light illuminates). Each time the button is pressed, the fan speed mode is shifted.

### ⑦ SLEEP button

In this mode, the selected temperature will increase (cooling) by 1°C/2°F 30 minutes. The temperature will then increase (cooling) by another 1°C / 2°F after an additional 30 minutes.

This new temperature will maintain for 7 hours before it returns to the originally selected temperature.

The Sleep mode program can be cancelled at any time during operation by again pressing the SLEEP button, or turning off the unit, or pressing the MODE or FAN button. This feature is unavailable under FAN or DRY mode.

### ⑧ LED Display

-Shows the set temperature in " °C" or " °F" and the Auto-timer settings. While on DRY and FAN modes, it shows the room temperature.

#### **Error codes:**

- E1-** Room temperature sensor error- Unplug the unit and plug it back in. If error repeats, call for service.
- E2-** Evaporator temperature sensor error- Unplug the unit and plug it back in. If error repeats, call for service.
- E4-** Display panel communication error- Unplug the unit and plug it back in. If error repeats, call for service.
- P1-** Bottom tray is full - Connect the drain hose and drain the collected water away. If error repeats, call for service.

**NOTE:** When more than one errors occur, the priority of the code display order is: E4--E2--E1--P1.

### ⑨ TEMP SENSING indicator

*The remote control serves as a remote thermostat allowing for the precise temperature control at its location.*

To activate the Temp Sensing feature, point the remote control towards the unit and press the TEMP SENSING button. The remote display is actual temperature at its location. The remote control will send signal to the air conditioner every 3 minutes interval. If the unit does not receive the Temp Sensing signal during any 7 minutes interval, the TEMP SENSING indicator light turns off to indicate the Temp Sensing mode has ended.

The actual temperature can be displayed at the unit by pressing the Fan Only mode. When in the Cool mode, the unit display indicates the set temperature.

## **OPERATING INSTRUCTIONS**

### **1 COOLING OPERATION**

- Press the "MODE" button several times until the "COOL" indicator light comes on.
- Press the UP and DOWN buttons "▲" or "▼" to select your desired room temperature. The temperature can be set within a range of 17°C-30°C/62°F-86°F.
- Press the "FAN " button to choose the fan speed.

### **2 DRY OPERATION (DEHUMIDIFY)**

- Press the "MODE" button until the "DRY" indicator light comes on.
- Under this mode, you cannot select a fan speed or adjust the temperature. The fan motor operates at LOW speed.
- Keep windows and doors closed for the best dehumidifying effect.
- The duct can be removed when in DRY mode.

### **3 FAN OPERATION**

- Press the "MODE" button until the "FAN " indicator light comes on.
- Press the "FAN " button to choose the fan speed. The temperature can not be adjusted.
- The duct can be removed when in FAN mode.

### **4 AUTO OPERATION**

- Press the "MODE" button until the "AUTO " indicator light comes on.
- Under this mode, you can not select a fan speed. The fan motor operates at Auto fan speed. The temperature can be set within a range of 17°C-30°C/62°F-86°F.

### **5 TIMER OPERATION**

The AUTO-TIMER feature offers a unique option to pre-set the on and off times of the unit via a 0.5 hr to 24hr timer.

**Note:** The Mode, Fan Speed and Temperature settings must be selected prior to using the Auto-Timer function.

#### **1) Timer-Off setting.**

Please be aware that in order for the Timer-Off function to work properly, the unit must be powered on.

Example: If at 8:00 pm the Timer-Off is set at 2.0, then the unit will automatically power off and stop cooling at 10:00 p.m. or after 2 hours have elapsed.

- a) Push the Timer-Off button: - The display will indicate the number of hours until the unit shuts off.
- b) Press or hold the Timer-Off button until the display window indicates the number of hours that is desired for the unit to continue running.
- c) After a 5 second delay, the display will switch back from the time increment to the desired temperature setting

#### **2) Timer-On setting.**

Please be aware that in order for the Timer-On function to work properly, the unit must be powered off.

Example: If at 10:00 am the Timer-On is set to 0.5, then the unit will automatically power on and start cooling at 10:30 am or after 30 minutes have elapsed.

- a) Press or hold the Timer-On button: - The display will indicate the number of hours until the unit turns on.
- b) Press or hold the Timer-On until the display window indicates the number of hours that should elapse before the unit turns on.
- c) After a 5 second delay, the display will switch back from the time increment to the desired temperature setting.

## OPERATING INSTRUCTIONS

### 3) Timer-On & Timer-off setting.

The unit also allows for the on and off times to be selected simultaneously.

Note: - The unit must be powered off prior to setting this function.

Example: If at 7:00 am the Timer-On timer is set at 2.5, and the Timer-Off timer is set at 10 then the unit will automatically power on and start cooling at 9:30 am and continue to cool until 5:00 p.m. at with time it will stop cooling and power off.

- Start by following the instructions for Timer-On as described above (2), then immediately select the Timer-Off time as described above (1). Do not press the power button during the process or the settings will be canceled.
- After a 5 second delay, the display will switch back from the time increment to the desired temperature setting.

### 4) Timer-Off & Timer-on setting.

The unit also allows for the off and on times to be selected simultaneously.

Note: - The unit must be powered on prior to setting this function.

Example: If at 8:00 am the Timer-Off timer is set at 2.5, and the Timer-On timer is set at 8 then the unit will automatically power off and stop operation at 10:30 am and start to operate at 4:00 p.m. After this time it will continue to operate.

- Start by following the instructions for Timer-Off as described above (1), then immediately select the Timer-On time as described above (2). Do not press the power button during the process or the settings will be canceled.
- After a 5 second delay, the display will switch back from the time increment to the desired temperature setting.

### IMPORTANT:

- The time will be registered in 5 seconds period (after pressing the UP/DOWN button), so you should continue pressing the button until the desired time is established. Otherwise you must repeat the steps again.




## 6 WATER DRAINAGE:

### During dehumidifying mode:

- Remove the drain plug from the back of the unit, attach a section of drain hose (included with this unit) to the hole. Place the open end of the hose directly over the drain area in your basement floor or in a water container (see Fig.4 & 5).
- You can also install the drain connector (5/8" universal female mender) with 3/4" hose (locally purchased by consumer) for garden hose use.


### NOTE:

- When the water level of the bottom tray reaches a predetermined level, the unit beeps 8 times, the digital display area shows "P1" and the unit stops operation. Carefully move the unit to a drain location, remove the bottom drain plug and let the water drain away (Fig.6). Restart the machine until the "P1" symbol disappears. If the error repeats, call for service.

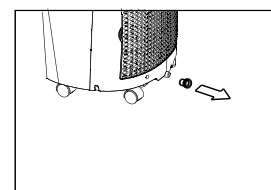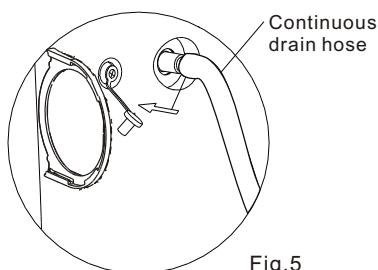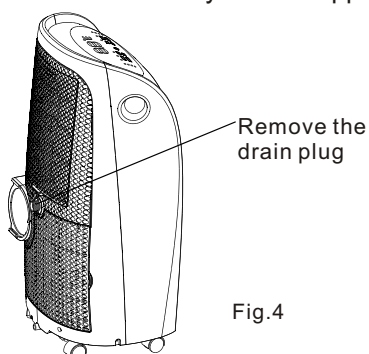




# INSTALLATION INSTRUCTIONS

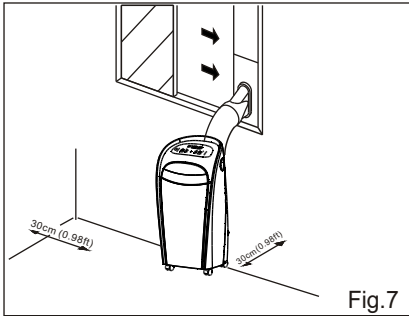

## INSTALLATION INSTRUCTIONS

### Location


- The air conditioner should be placed on a firm foundation to minimize noise and vibration. For safe and secure positioning, place the unit on a smooth, level floor strong enough to support the unit.
- The unit has casters to aid placement, but it should only be rolled on smooth, flat surfaces. Use caution when rolling on carpet surfaces. Do not attempt to roll the unit over objects.
- The unit must be placed within reach of a properly rated grounded socket.
- Never place any obstacles around the air inlet or outlet of the unit.
- Allow at least 30cm(0.98ft) of space from the wall for efficient air-conditioning.
- Do not use an extension cord.

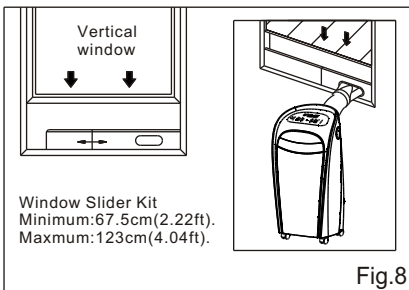

### Window kit Installation

Your window kit has been designed to fit most standard "Vertical" and "horizontal" window applications, However, it may be necessary for you to improvise/modify some aspects of the installation procedures for certain types of window. Please refer to Fig. 8& Fig.9 for minimum and maximum window openings.

**Note:** If the window opening is less than the mentioned minimum length of the window slider kit, cut that one with holes in it short to fit for the window opening. Never cut out the hole in window slider kit.

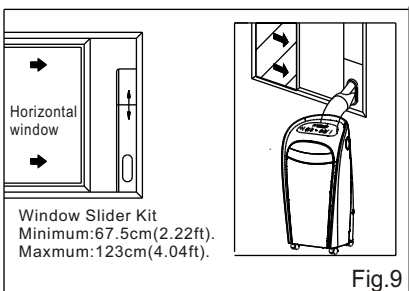



# INSTALLATION INSTRUCTIONS

## Installation in double-hung sash windows

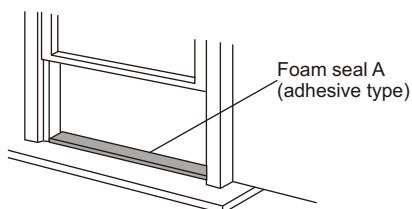


Fig.10

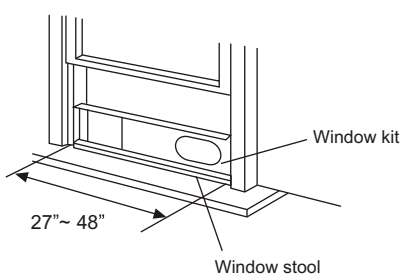


Fig.11

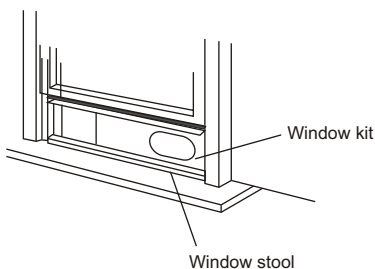


Fig.12

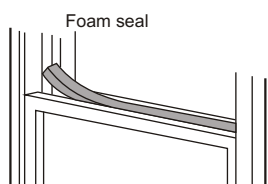


Fig.13

1. Cut the foam seal(adhesive type) to the proper length and attach it to the window stool. Fig.10

2. Attach the window slider kit to the window stool. Adjust the length of the window slider kit according to the width of window, shorten the adjustable window kit if the width of window is less than 27 inches.

Open the window sash and place the window slider kit on the window stool. Fig.11

3. Cut the foam seal(adhesive type) to the proper length and attach it on the top of the window. Shown as in Fig.12

4. Close the window sash securely against the window.

5. Cut the foam seal to an appropriate length and sealing the open gap between the top window sash and outer window sash. Shown as in Fig.13.

## Installation in a sliding sash windows

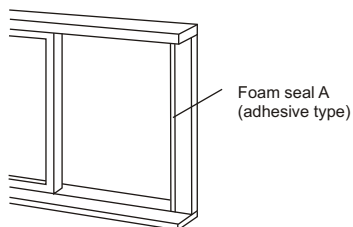


Fig.14

1. Cut the foam seal(adhesive type) to the proper length and attach it to the window frame. See Fig.14.

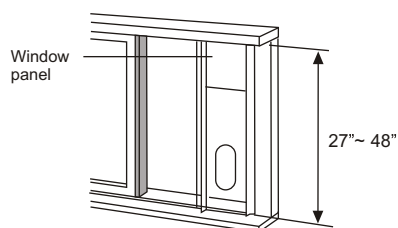


Fig.15

2. Attach the window slider kit to the window stool. Adjust the length of the window slider kit according to the width of window, shorten the adjustable window kit if the width of window is less than 27 inches. Open the window sash and place the window slider kit on the window stool. See Fig.15.

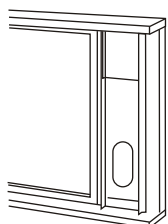


Fig.16

3. Cut the foam seal(adhesive type) to the proper length and attach it on the top of the window. Shown as in Fig.16.

4. Close the sliding sash securely against the window.

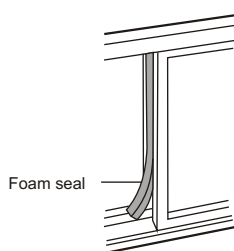


Fig.17

5. Cut the foam seal to an appropriate length and sealing the open gap between the top window sash and outer window sash. Shown as in Fig.17.

# INSTALLATION INSTRUCTIONS

 


Fig.18

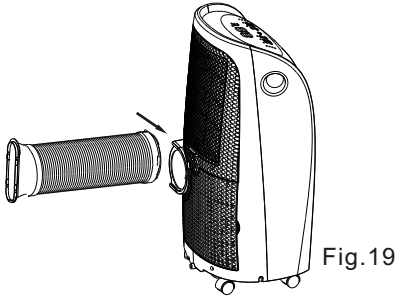


Fig.19

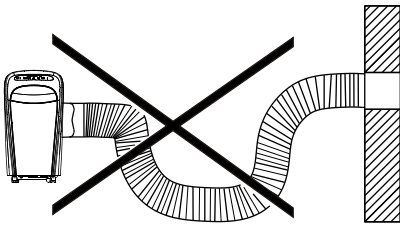


Fig.20

## Exhaust hose installation:

The exhaust hose and adaptor must be installed or removed in accordance with the usage mode.

COOL mode	Install
FAN or DEHUMIDIFY mode	Remove

1. Install the window Exhaust adaptor (flat mouth) onto the exhaust hose as shown in Fig.18. Refer to the previous pages for window kit installation.
2. Install the flexible Exhaust hose as depicted in Fig.19 .



### NOTE:

- The duct can be compressed or extended moderately according to the installation requirement, but it is desirable to keep the duct length to a minimum.

### IMPORTANT:

DO NOT OVER BEND THE DUCT (SEE Fig.20)

### CARE AND MAINTENANCE

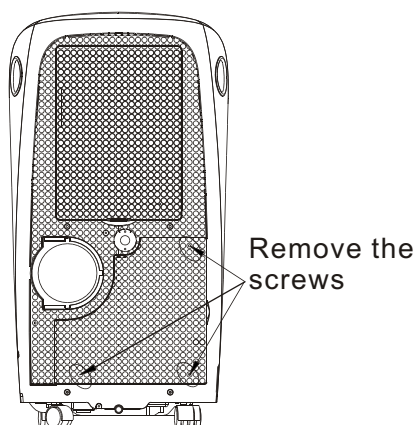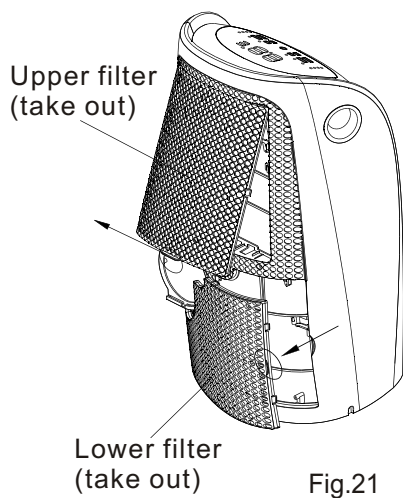

#### IMPORTANT:

- 1) Be sure to unplug the unit before cleaning or servicing.
- 2) Do not use gasoline, thinner or other chemicals to clean the unit.
- 3) Do not wash the unit directly under a tap or using a hose. It may cause electrical danger.
- 4) If the power cord is damaged, it should be repaired by manufacturer or its agent.

#### 1. Air filter

- Clean the air filter at least once two weeks to prevent inferior fan operation because of dust.
- Removal  
This unit has two filter. Grasp the upper filter tab and take it out along the arrow direction as shown in Fig.21. Remove the lower filter by loosening the screws(Fig 22), then grasp the filter tab and take it out along the arrow direction as shown in Fig.21.
- Cleaning  
Wash the air filter by immersing it gently in warm water (about 40°C/104°F) with a neutral detergent. Rinse the filter and dry it in a shady place.
- Mounting  
Install the upper air filter after cleaning and install the lower filter by using the screw.

**NOTE:** The grill and the air filter are connected and can not be separated.

#### 2. Unit enclosure

- Use a lint-free cloth soaked with neutral detergent to clean the unit enclosure. Finished by a dry clean cloth.

#### 3. Unit idle for a long time

- Remove the rubber plug at the back of the unit and attach a hose to drain outlet. Place the open end of the hose directly over the drain area in your basement floor (See Fig.4 & 5).
- Remove the plug from the bottom drain outlet, all the water in the bottom tray would drain out (See Fig.6).
- Keep the appliance running on FAN mode for half a day in a warm room to dry the appliance inside and prevent mold forming.
- Stop the appliance and unplug it, wrap the cord and bundle it with the tape. Remove the batteries from the remote controller.
- Clean the air filter and reinstall it.
- Disconnect the exhaust hose, keep it safety.

## **TROUBLESHOOTING TIPS**

---

### **TROUBLE SHOOTING**

<b>TROUBLES</b>	<b>POSSIBLE CAUSES</b>	<b>SUGGEST REMEDIES</b>
<b>1. Unit does not Start when Pressing on/off Button</b>	- P1 appears in the display window	Drain the water in the bottom tray.
	- Room temperature is lower than the set temperature.(Cooling mode)	Reset the temperature.
<b>2. Not cool enough</b>	- The windows or doors in the room are not closed.	Make sure all the windows and doors are closed.
	- There are heat sources inside the room.	Remove the heat sources if possible.
	- Exhaust air duct is not connected or blocked.	Connect the duct and make sure it can function properly.
	- Temperature setting is too high.	Decrease the set temperature.
	- Air filter is blocked by dust.	Clean the air filter.
<b>3. Noisy or vibration</b>	- The ground is not level or not flat enough.	Place the unit on a flat, level ground if possible.
<b>4. Gurgling sound</b>	- The sound comes from the flowing of the refrigerant inside the air-conditioner.	It is normal.

## Air Conditioner Warranty

Your product is protected by this warranty:

Warranty service must be obtained from Midea Consumer Services or an authorized Midea servicer.

	WARRANTY PERIOD	MIDEA, THROUGH ITS AUTHORIZED SERVICERS, WILL:	THE CONSUMER WILL BE RESPONSIBLE FOR:
FULL ONE-YEAR WARRANTY	One year from original purchase date	Pay all costs for repairing or replacing parts of this appliance which prove to be defective in materials or workmanship.	Costs of service calls that are listed under <b>NORMAL RESPONSIBILITIES OF THE CONSUMER*</b>
LIMITED 2ND-5TH YEAR WARRANTY (sealed system)	Second through fifth years from original purchase date	Repair or replace any parts in the Sealed Refrigeration System (compressor, condenser, evaporator and tubing) proves to be defective in materials workmanship.	Diagnostic, removal, transportation and reinstallation costs required because of service.  Costs for labor, parts and transportation other than with respect to the Sealed Refrigeration System.

Midea replacement parts shall be used and will be warranted only for the period remaining on the original warranty.

### NORMAL RESPONSIBILITIES OF THE CONSUMER\*

This warranty applies only to products in ordinary household use, and the consumer is responsible for the items listed below:

1. Proper use of the appliance in accordance with instructions provided with the product.
2. Proper installation by an authorized service professional in accordance with instructions provided with the appliance and in accordance with all local plumbing, electrical and / or gas codes.
3. Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loosen connections or defects in house wiring.
4. Expenses for making the appliance accessible for servicing.
5. Damages to finish after installation.

### EXCLUSIONS

This warranty does not cover the following:

- 1) Failure caused by damage to the unit while in your possession (other than damage caused by defect or malfunction), by its improper installation, or by unreasonable use of the unit, including without limitation, failure to provide reasonable and necessary maintenance or to follow the written Installation and Operating Instructions.
- 2) Damages caused by services performed by persons other than authorized Midea servicers; use of parts other than Midea replacement parts; obtained from persons other than such Midea customer service; or external causes such as abuse, misuse, inadequate power supply or acts of God.
- 3) If the unit is put to commercial, business, rental, or other use or application other than for consumer use, we make no warranties, express or implied, including but not limited to, any implied warranty of merchantability or fitness for particular use or purpose.
- 4) Products without original serial numbers or products that have serial numbers which have been altered or cannot be readily determined.

Note: Some states do not allow the exclusion or limitation of incidental or consequential damages. So this limitation or exclusion may not apply to you.

### IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate payment record.

The date on the bill established the warranty period should service be required.

If service is performed, it is your best interest to obtain and keep all receipts.

This written warranty gives you specific legal rights. You may also have other rights that vary from state to state.

Service under this warranty must be obtained by following these steps, in order:

1. Contact Midea Consumer Services or an authorized Midea servicer at 1 866 64 MIDEA.
2. If there is a question as to where to obtain service, contact our consumer relations Department.

**CP001IU-G**  
**202000192144**  
**20091029**