

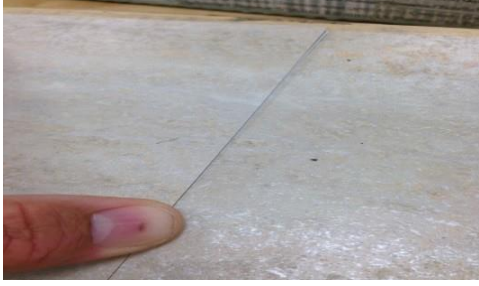
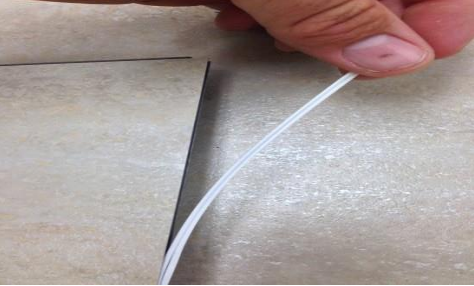




# Allure Ultra with SimpleFit® End Joint

<h2>Correct</h2>	<h2>Incorrect</h2>
<ul style="list-style-type: none"><li data-bbox="224 464 695 583">• Cutting through the Simplefit® Locking Strip first before cutting across a full plank/tile</li></ul>  <ul style="list-style-type: none"><li data-bbox="224 915 756 1125">• Locking long tongue into groove and slide at a low angle until first inch of the SimpleFit® Locking Strip touches the short groove edge of previously installed plank/tile</li></ul>  <ul style="list-style-type: none"><li data-bbox="224 1457 760 1562">• Pressing the SimpleFit® Locking Strip joint into place using your finger until lock is completely engaged</li></ul> 	<ul style="list-style-type: none"><li data-bbox="808 464 1252 531">• Removing the white SimpleFit® Locking Strip</li></ul>  <ul style="list-style-type: none"><li data-bbox="808 915 1320 1020">• Overlapping the SimpleFit® Locking Strip over the previously installed plank/tile</li></ul>  <ul style="list-style-type: none"><li data-bbox="808 1423 1336 1562">• Proceeding with the installation if the SimpleFit® Locking Strip is damaged during locking or tapping. Always remove and replace using a new piece</li></ul> 

## Correct

- Tapping the top of SimpleFit® Locking Strip using a light rubber mallet to ensure the plank/tile is resting flat on the floor with no gaps



- Using a tapping block down the long side of the plank/tile to ensure a gap-free installation



## Incorrect

- Using a regular hammer to tap in the SimpleFit® Locking Strip as this will damage the product



- Tapping the product in from the short side as this will cause damage to the Simplefit® Locking Strip



*If you have any problems or questions, please call our Customer Help Line at 1-866-843-8453*