

4 OPERATION (BASIC)

BB-800 Control Panel



Adjust the water pressure and warm air dryer temperature.



Adjust the water and seat temperature (3 levels).





Adjust the oscillation function and nozzle position (5 levels).



Power Saving mode button.

BB-1000 Remote Control

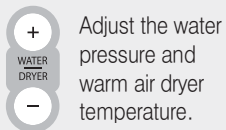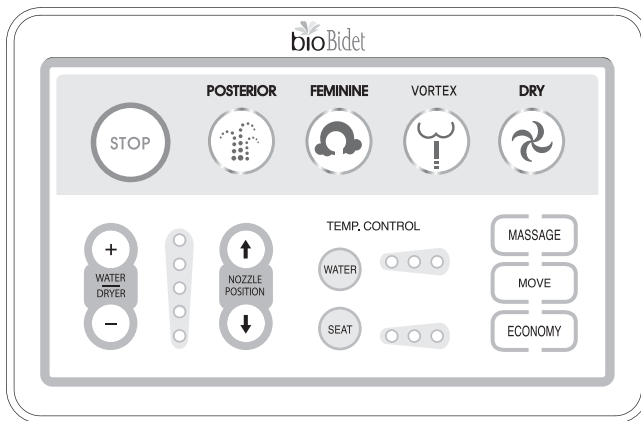

Adjust the water pressure and warm air dryer temperature.



Adjust the oscillation function and nozzle position (5 levels).




Adjust the water and seat temperature (3 levels).



Power Saving mode button.

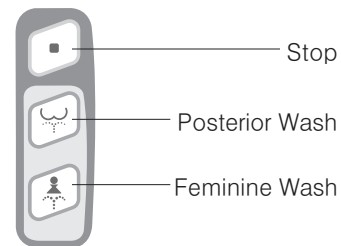

Simple Operation Panel



- When you sit on this product, please sit down on the central position in order to activate the sensor.
- After an extended wash, allow water to be reheated for 3 minutes.

5 OPERATION (DETAILS)

1 PREPARATION

- Check for any water leaks.
- Plug the unit into the proper power source and the LED power light will start flashing.
- Wait until the LED power light stops flashing and becomes solid red.
- The water tank will be filled after pushing a “Wash” ( or ) button.
- When the water tank is filling the buzzer “Beeps” continuously, after the water tank is full the buzzer will end with “One Solid Beep”.

2 OPERATION

● SIT DOWN ON THE SEAT


- When you sit down on the seat, the ORANGE LED lamp on the control panel will light up.
- When the digital sensor on the seat is activated, the operation LED window on the main unit will light “Occupied sensor” and simultaneously, the deodorizer fan will start to work. (BB-900 / 1000 Models)
- See page 11 for details about changing the seat or water temperature.

● STOP


- Press this button to stop all operation.

● CLEANSING

• CLEANSING 1. (Posterior Wash)

- 1– Press “Posterior Wash” (). Automatically, the nozzle comes out and sprays warm water to posterior.
- 2– Additional functions during your Posterior Wash experience are available. See Oscillation, pg.12 and Massage, pg. 13 for details.

• CLEANSING 2. (Feminine Wash)

- 1– Press “Feminine Wash” (). Automatically, the nozzle comes out and sprays warm water to feminine area.
- 2– Additional functions during your Feminine Wash experience are available. See Oscillation, pg.12 and Massage, pg. 13 for details.

• CLEANSING 3. (Turbo Wash / Vortex Wash)

- 1– Press “Turbo Wash” or “Vortex Wash”, the nozzle spray is more or focused to produce the effect of strong wash, to help stimulate bowel movement.
- 2– Press “Water pressure – High & Low button” to adjust the water pressure.



Observe at all times

CAUTION

DO NOT ALLOW CHILDREN TO USE THE **TURBO WASH** or **VORTEX WASH** FUNCTION! SUPERVISION IS STRONGLY RECOMMENDED FOR THE ELDERLY OR OTHER PERSONS THAT MAY HAVE LIMITATIONS IN BODY MOVEMENT, ILLNESS OR DISABILITIES!

CLEANSING cont.

• CLEANSING 3. (Turbo Wash or Vortex Wash)



- 1- Press "Turbo Wash" or "Vortex Wash" continuously for 3 to 5 seconds. Automatically, the water nozzle comes out and sprays a warm stream of water to the posterior center of the rectum.
- 2- If necessary, adjust "Position" of water stream with the (↑/↓) buttons.
- 3- Press "Water pressure High & Low button" (+/-) to adjust the water pressure to your desired comfort.
- 4- Press the "STOP" (STOP) button when you feel your abdomen is full or wait until the "Turbo Wash" or "Vortex Wash" function stops, approximately 1 minutes.
- 5- You will shortly feel the urge to push the water out of your colon, push the water and feces out as thoroughly as you can.
- 6- Relax for a few minutes and be sure you feel your colon is empty and then use the "Posterior Wash" and "Air Dry" function to finish.



WARM AIR DRYER

- 1- Press "Dry" (DRY), warm, dry air is gently directed to washed area for about 3 minutes.
 - 2- You may adjust the warm air temperature by pressing High (+) and Low (-) buttons.
- ※This product memorizes the air temperature of prior use.

 
WATER PRESSURE ADJUSTMENT

- After sitting down on the this product, the LED lamp (○○○○○) for water pressure on the Power Control will light at third or middle level (○○●●●)
- Press high (+), or low (-) to adjust the pressure of the water spray to your desired comfort level


WARM WATER TEMPERATURE AND SEAT TEMPERATURE ADJUSTMENT

- The temperature of water and seat are adjustable to the desired level by pressing the "WATER" (WATER) and "SEAT" (SEAT) button.

WATER TEMPERATURE



SEAT TEMPERATURE

 

5 OPERATION (DETAILS)


● NOZZLE POSITION ADJUSTMENT

- Nozzle position is adjustable to the desired position by pressing “Front” () or “Rear” () button from 1 to 5 positions.
After using this product, the nozzle will return to position 3.

● DEODORIZER

(BB-1000 Model Only)

- The deodorizer fan is activated when this product is occupied. When finished, the fan will stop after 1 minute.
- Air current for the deodorizer has 4 adjustable levels. While pressing the “STOP” () button, press the “WATER” () button to the desired air current level. See diagram:

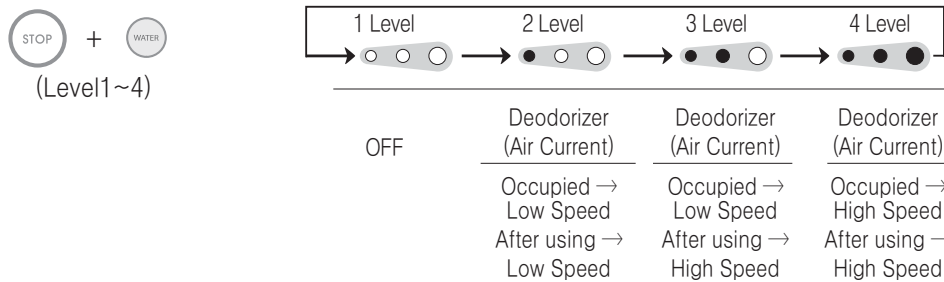

● OSCILLATION (Nozzle Movement Function)

- When using Posterior or Feminine Washing functions, pressing the “MOVE” (,) button will provide a short-motion, front to back oscillating spray for a much wider cleansing experience. Note: This function will not work during the “Turbo Wash” or “Vortex Wash” function.
- You may change the position of the Oscillating spray by pressing the “MOVE” (,) button again and “Front” () or “Rear” () buttons simultaneously.
- Push the “MOVE” (,) button again and the oscillation motion will stop automatically.

Auto-Setting of Oscillation Feature

- You can set this function to automatically oscillate whenever the seat is occupied and the Posterior or Feminine washes are in operation.

Step 1: Do not sit on the this product.

Step 2: Press the “MOVE” (,) button for 3 seconds or until you hear a single Chime.

Step 3: Sit on the this product and proceed with Posterior or Feminine Wash.







Note: In the automatic setting, you may still adjust the position of the Oscillating spray by pressing the “Front” () or “Rear” () buttons.

Canceling the Automatic Oscillation function

Step 1: Do not sit on the this product.

Step 2: Press the “MOVE” (,) button for 3 seconds or until you hear a double Chime.

● MASSAGE (Rhythm Wash)

- When using the Posterior Wash or Feminine Wash functions, pressing the “MASSAGE” ( , ) button will provide a pulsation spray.
- You may change the pressure of the spray by pressing the “High” () button or “Low” () buttons.
- Push the “MASSAGE” ( , ) button again and the pulsating action will stop automatically.



Auto-Setting of Massage Feature

- You can set this function to automatically pulsate whenever the seat is occupied and the Posterior or Feminine washes are in operation.

Step 1: Do not sit on the this product.

Step 2: Press the “MASSAGE” ( , ) button for 3 seconds or until you hear a single Chime.

Step 3: Sit on the this product and proceed with Posterior or Feminine Wash.

Note: In the automatic setting, you may still adjust the pressure of the pulsating spray by pressing the “high” () or “low” () functions.

Canceling the Automatic Oscillation function

Step 1: Do not sit on the this product.

Step 2: Press the “MASSAGE” ( , ) button for 3 seconds or until you hear a double Chime.

● ECONOMY (Energy Save Mode)

- The ENERGY SAVER is not on when the LED light is off.
- Press button once to choose “ECONOMY 1”
- Press button again to choose “ECONOMY 2”
- Press button third time to turn “ECONOMY” off

*The ECONOMY 1 : the water temperature will be kept at 90°F (32°C)







*The ECONOMY 2 (SMART MODE) : this will lower the water temperature to 90°F (32°C) when it is not being used, and raise the water temperature back to normal level during the time of use.

It takes about 5 days for the unit to “learn”, and “remember”, the usage pattern of the user(s)

● NOZZLE CLEANING (Automatically)

- This product has an automatic nozzle self-cleaning function that cleans the nozzle before and after each use.

● NOZZLE CLEANING (Manual)







- Nozzle can be cleaned manually by pressing “Posterior Wash” ( / ) button for 3 seconds without being occupied on the seat and nozzle will come out without spraying water. After cleaning the nozzle, Press “Stop” ( , ) button to return nozzle to stand-by mode.
( ,  : in Simple Operation panel –Remote Model)


● CHIME SOUND ON/OFF SET

- While sitting on the this product, press “MOVE” ( , ) button for 3 seconds and you can hear the chime sound change to ON or OFF. (Remote model doesn't have off function, BB-1000)

8 MAINTENANCE

● CLEANING THE NOZZLE

- When the “Posterior Wash ( / )” button is pressed for 3 seconds without occupying the seat, the nozzle can be cleaned with a soft toothbrush.
- ( : in Simple Operation panel –Remote Model)
- After cleaning the nozzle, push the “Stop ( , )” button once again, and the nozzle retracts itself.
- ( : in Simple Operation panel –Remote Model)

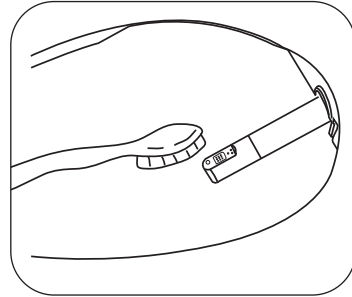



● CLEANING THE BODY OF UNIT

- When you clean this product, do not use thinner, benzene or toilet bowl cleaner. It may cause damage to the surface of unit.
- Use a wet cloth when you clean this product.
- Do not spray water directly on to this product.
- When you clean this product, disconnect the power plug.


● CLEANING THE STRAINER

This product will not operate properly if the strainer is clogged. Please clean the strainer regularly.

- 1) Close the water shut off valve.
- 2) Flush the toilet to empty the water reservoir.
- 3) Unscrew the water filter nut.
- 4) Clean the strainer with a small brush or water.
- 5) Re-screw the water filter nut.
- 6) Open the water shut off valve.

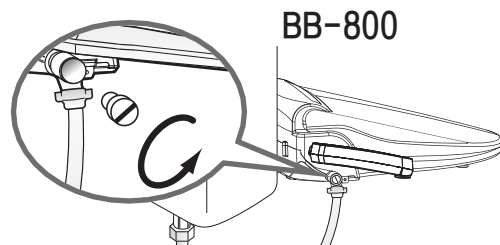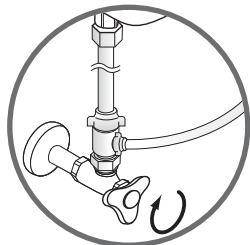

BB-800

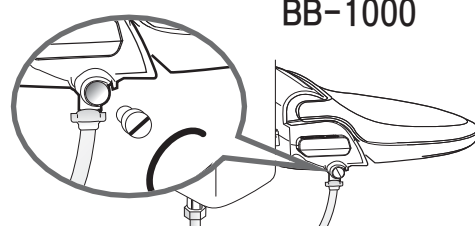



BB-1000

9 WATER DRAINING

● DRAINING THE WARM WATER TANK IN THE UNIT

If you do not intend to use this product for 14 days or longer, drain the water from this product's warm water tank.

- 1) Disconnect the power plug.
- 2) Close the water shut off valve.
- 3) Press the drain lever until the water is completely drained from water tank.
- 4) To re-supply water after draining, open the water shut off valve.

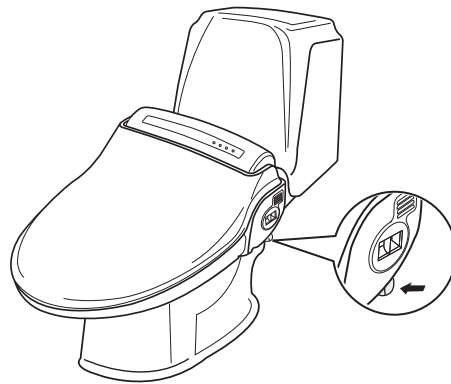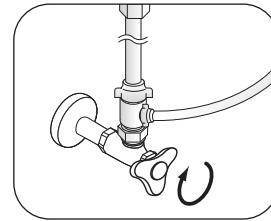

Do not drink the drained water.
Do not insert finger into the drain hole.
Before draining, unplug the power cord and wait 30 minutes until the unit has cooled down.

MAINTENANCE FOR WINTER SEASON

- 1 Check the power cord if it is plugged in or not.
- 2 Keep the water temperature on "Middle or High Level" to prevent water from freezing.
- 3 If you do not intend to use the unit for 14 days or longer, disconnect the power plug and drain the water.