


# PROGRAMMING

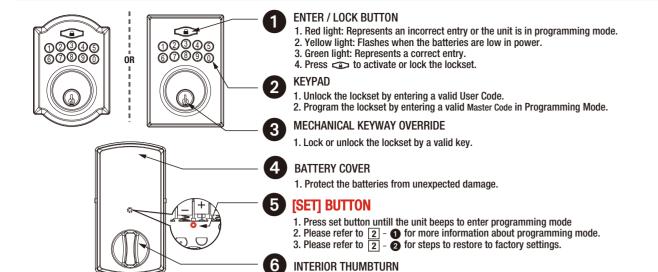






1. Lock or unlock the lockset manually.



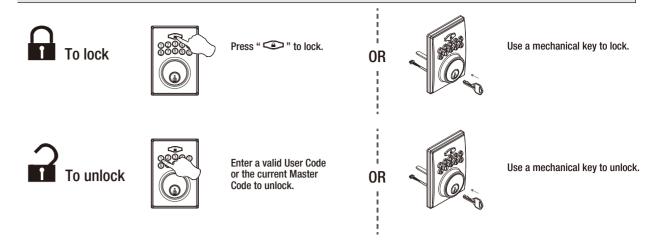

A Keypad is temporarily disabled for 1 minute after 4 consecutive incorrect entries.

2 PROGRAMMING

#### 1 HOW TO PROGRAM THE LOCKSET BY FUNCTION CODES (Programming Mode)


1 HOW TO PROGRAM THE LOCKSET BY FUNCTION CODES (Programming Mode) • Programming Mode will automatically time out after 10 seconds of inactivity. • If you make a mistake during programming, press the interior SET BUTTON (as shown in above diagram) to leave Programming Mode and start over								
BASIC SETTINGS	Change the existing Master Code	<ul> <li>A Master Code can be used to program or unlock the lock.</li> <li>The preset Master Code is 123456.</li> <li>Please change the Master Code before operating the lock.</li> </ul>	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press 1 0 • + Enter New Master Code (6 digits) +	
	Add user code(s)	The unit can store up to 10 customized User Codes (4-6 digits long).	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press 2 0 + Enter New User Code (4-6 digits) + Add another code	
	Delete individual user or single-entry code(s)	<ul> <li>Delete one or more codes at a time, including User Codes or Single- entry Codes.</li> <li>Users/Single-entry codes cannot be retrieved after they are deleted.</li> </ul>	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press (3) (0) (2) + Enter unwanted User Code (4-6 digits) + (2) + Delete another code	
	Delete all user / single-entry codes	<ul> <li>Delete ALL User Codes at once.</li> <li>Use the existing Master Code (6 digits) to unlock the unit after the deletion of User/Single-entry Codes.</li> </ul>	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	$Press \ \textcircled{4} \ \textcircled{0} \ \textcircled{a} \ \blacklozenge \ \textcircled{b}$	
		The single-entry user code can be used for only one successful entry					Enter Now Single entry Code (A digita) b	
ADVANCED Settings	Add single-entry code(s)	<ul> <li>The single-entry user code can be used for only one successful entry and will be invalid when the lockset is locked again.</li> <li>The unit can store up to 5 single-entry user codes (4 digits long).</li> </ul>	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press (2) (1) (1) + Enter New Single-entry Code (4 digits) + Add another code	
	Vacation mode	<ul> <li>Disabled by default.</li> <li>When Vacation Mode is enabled, only the current Master Code (6 digits) can unlock the lock.</li> <li>The stored User / Single-entry Codes will be re-activated once the Vacation Mode is disabled.</li> </ul>	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press $(5)$ $(0)$ $(1)$	
	Volume Control	The beeper can be turned off if desired. Beeps will still sound during programming.	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press $(6)$ $(0)$ $(1)$	
	Auto-lock function	<ul> <li>Disabled by default.</li> <li>When enabled, the lock will automatically re-lock after unlocking (Default: 10 seconds).</li> </ul>	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press $(8)$ $(0)$ $(1)$	
	Auto-lock delay timer	<ul> <li>Auto-lock timer can be set from 10 to 99 seconds according to your demand.</li> </ul>	Press and hold the [SET] button until the unit beeps, then release the [SET] button	+	Enter current Master Code (6 digits) then press	+	Press (7) (0) (1) + Enter new digits (10 - 99 seconds) + (1)	

· Programming Mode will automatically time out after 10 seconds of inactivity.



This will erase all stored information, including the current Master Code and existing User Codes.



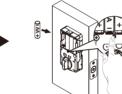

Press and hold SET button while inserting the battery back. Hold the set button until a long beep is heard followed by a short beep.



Enter the default Master Code (123456) to complete the bolt direction setting.

Change the Master Code before operating the lock.

#### TROUBLESHOOTING 3

**INSTALLATION** 

QUESTIONS	ANSWERS	QUESTIONS	ANSWERS		
A.The latch does not operate correctly after installation.			<ol> <li>The batteries are low on power if the battery indicator keeps flashing. Please replace with four new batteries for the best performance. (Alkaline Batteries Only).</li> <li>Please refer to 2 • 1 in the guide to enable the Auto-Lock function.</li> </ol>		
<ul> <li>B. Feel a bump while turning the thumbturn or the key?</li> <li>1. Please execute lock &amp; unlock function to allow the motor to reposition itself again.</li> <li>2. The battery is low if the battery indicator light keeps flashing. Please replace with four new batteries. Hold the set button until long beep over.</li> <li>3. Please restore to factory setting and enter the default Master Code to set up the lock.</li> </ul>		H. Lockset is not able to unlock / lock by keypad.	<ol> <li>Make sure you have entered the correct User Code.</li> <li>The battery is low if the battery indicator light keeps flashing. Please replace with four new batteries.</li> <li>Make sure the cable is firmly connected.</li> <li>Check the cable for any damage that may have occurred during installation.</li> <li>Make sure the batteries are properly installed. (Alkaline batteries only)</li> </ol>		
C. Fail to set up the lock.	<ol> <li>Please make sure the lock is installed correctly.</li> <li>Please install the fresh batteries and make sure the cable is connected correctly.</li> </ol>		<ol> <li>6. Check the strike plate to make sure it is properly aligned and clear so the bolt can freely move in the hole.</li> </ol>		
2 OPERATION		I. Lockset is unable to reset.	<ol> <li>Please refer to 2 - 2 in the user guide to restore factory settings and reprogram all codes. Hold the set button until long beep over.</li> <li>The battery is low if the battery indicator light keeps flashing. Please replace with four new batteries. Hold the set button until long beep over.</li> </ol>		
QUESTIONS	ANSWERS	J. How to operate the lockset	1. Press any button to activate the lockset back light.		
A. Battery indicator keeps flashing.	1. The batteries are getting low, please replace with four new batteries for the best performance (alkaline batteries only ).	in darkness? K. The red indicator is still on	1. Check if [SET] button is jammed.		
B. Keypad not responding.	<ol> <li>Make sure the batteries are installed properly.</li> <li>The batteries are getting low if the battery indicator keeps flashing. please replace with four new batteries for the best performance (alkaline batteries only).</li> <li>Make sure the cable is well-connected to the port, and was not damaged during installation.</li> <li>Please make sure the lock has been set up and complete the bolt direction determination.</li> </ol>	after setting is completed. L. The lockset locks when I enter my code and unlocks when I press the	<ol> <li>Re-install the batteries.</li> <li>Un-install the interior and exterior assemblies. Before re-installation, please follow these guidelines:         <ol> <li>Make sure the bolt is in the retracted position.</li> <li>Do not have any key in the cylinder durring installation.</li> <li>Make sure the torque blade is inserted horizontally.</li> <li>Reset the unit to factory settings and reprogram the Master Code and user codes.</li> </ol> </li> </ol>		
C. Master Code can not be changed.	1. Please refer to 2 - 2 in the user guide to restore factory setting and reprogram all codes.				
D. What should I do if wrong code was entered?	1. Press  button once and continue to input code according to regular procedures.	M. I cannot remove my key unless it is in the locked position.	<ol> <li>Un-install the interior and exterior assemblies. Before re-installation, please follow these guidelines:         <ol> <li>Make sure the bolt is in the retracted position.</li> <li>Do not have any key in lock cylinder.</li> <li>Make sure the torque blade is inserted horizontally.</li> </ol> </li> </ol>		
E. Can not delete all User Codes.	<ol> <li>Make sure the whole code entering process is completed within 10 seconds, otherwise the unit will time out.</li> <li>Make sure the Master Code has been entered correctly.</li> </ol>	ponton			
F. Can not add a new User Code.	<ol> <li>Make sure the whole code entering process is completed within 10 seconds, otherwise the unit will time out.</li> <li>Make sure the Master Code has been entered correctly.</li> <li>The new User Code will not be accepted when the capacity is full. Try to delete any or some existing User Codes and then add new one(s) again. A User Code must be at least 4 to 6 digits.</li> </ol>	If the lock appears to be dama	ged or does not operate properly, please contact customer service for further assistance.		

### ACCESS CODE LIST

4

#### FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

### IC REGULATIONS

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

## After changing your Master Code, do not pass your Master Code to anyone else.

MASTER CODE (6 digits)

WRITE YOUR MASTER CODE HERE FOR EASY ACCESS

Name	User Code (4-6 digits)							