





Read the assembly instructions carefully!



Caution! Hot! Use gloves! Children have to stay away of the fireplace!



Use the fireplace only outside!



Don't move the fireplace while using!

Use only lighting facilities: EN 1860-3!



- Intended for outdoor use. Never use indoors.
- Do not use at unventilated places!
- Keep away from all combustible materials, e.g. gasoline and other flammable liquids.
- Do only use on a smooth, non-combustible base.
- Set away from the house, balcony, garage, etc...
- Keep children and pets away from the fireplace.
- Do not overfill the fire bowl and do not burn leaves or trash.
- Act with the same caution as with an open fire.
- Extinguish the fire completely before leaving.
- Caution, hot! The fire bowl and the contained ashes can stay hot for a long time.
- Don't let the fireplace unattended.
- Discard the cold ashes properly.

\Lambda Cleaning and maintenance:

- Do NOT use on wood or other combustible surfaces, such as dry grass, leaves or straw.
- Do NOT use next to heat-sensitive plants, furniture or other objects.
- Do NOT set up or use near flammable objects.
- Do NOT extinguish the fire in the bowl with water. The steam may otherwise raise dangerously hot ash.
- After use, clean the fire bowl with a soft cloth. Do not use a wire brush.
- After using the fire bowl can rust. Rub this after use with an oiled cloth on. The fire bowl should be completely cleaned and dried after use. Do always cover the fireplace to avoid rust. We are not responsible for weather-related corrosion.

PLANNING ASSEMBLY

Unpack all parts from the packaging and ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product. Contact the Customer Service Team at (866) 728-6187.

PACKAGE CONTENTS

Teileliste							
Part Quantity	Description	Figure	Į	Part	Quantity	Description	Figure
A 1x	Base			С	1x	Spark hood	
B 1x	Fire bowl	\bigcirc		D	1x	Charcoal grid	
Montage				Ε	1x	Poking stick	

Montage

