

**Panel Installation:**

- Set panel into the brackets on the first pre-set post (Fig. 6).
- Place the next post (with brackets) in the hole on the opposite end of the panel without any concrete in the hole.
- Level and plumb post and panel (Fig. 7).
- Ensure posts are flush against panel. Secure all screws into the panel in the center bracket slots (Fig. 8).
- Add concrete to second post hole according to manufacturer's instructions.
- Attach post tops to posts (Fig. 8).
- Repeat install process for other panels.

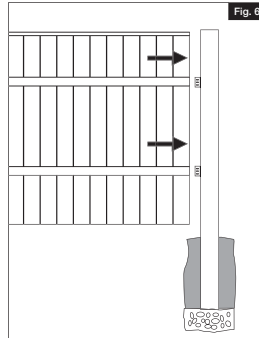


Fig. 6

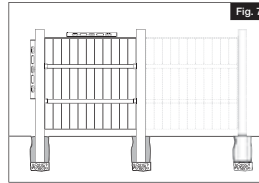


Fig. 7

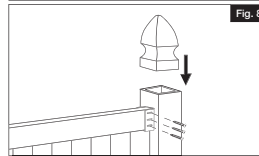


Fig. 8

**Transferable Limited Lifetime Warranty**

What is covered: Barrette Outdoor Living warrants vinyl and aluminum products to include; vinyl and aluminum fence, vinyl and aluminum railing and plastic lattice against defects or workmanship for as long as you own your home. Barrette Outdoor Living will at its option replace the product in question with new product of the same or equivalent value at no charge. Barrette Outdoor Living warrants these products against peeling, flaking, splintering, corrosion, rusting or abnormal discoloration under normal use. This warranty extends to the original purchaser or transferee as specified herein on the products noted above. Separate and distinct warranties for hardware and other products are not covered under this warranty.

What this warranty does not cover: This limited warranty does not cover damage resulting from accident, unreasonable use, neglect, alteration, improper service, improper installation, acts of God or any other causes not arising out of defects in materials or workmanship. Additionally, this warranty does not cover costs of installation, removal, reinstallation or surface mold and mildew created by excessive environmental conditions. Any service or repair provided outside the scope of this limited warranty shall be at Barrette Outdoor Living's rate and terms then in effect.

What do we do to correct the problems? Should your Barrette Outdoor Living product prove defective under warranty, reference the website or call the phone number listed below. Your problem will be assigned a tracking number and an authorized Barrette Outdoor Living representative will contact you to arrange a convenient time to schedule an onsite inspection, or request pictures, if need be. If after inspection product is deemed to be manufacturer defect we will make arrangements to rectify the issue. You must have proof of your purchase in order for the problem to be corrected.

Transferee Coverage: Warranty coverage will be extended to one transferee on the above listed products with the following limitations. Transferee must obtain an original or copy of the initial sales receipt (with proof of date) from the previous owner(s). Additionally, if fence is purchased from a builder or installer, documentation must be supplied that names the product installed on property and date of transfer.

THIS WARRANTY IS IN LIEU OF ALL CONDITIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED CONDITIONS OR WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THE PART OF BARRETTE OR ITS LICENSORS, SOME STATES DO NOT ALLOW THE EXCLUSIONS OF IMPLIED WARRANTIES OR LIMITATIONS OF HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. IF THE PRODUCT IS DEFECTIVE PER THE ABOVE COVERAGES, YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. BARRETTE AND ITS LICENSORS SHALL NOT BE LIABLE FOR ANY DAMAGES, LOSS OF USE, LOSS OF PROFITS OR INTERRUPTION OF BUSINESS WHETHER SUCH ALLEGED DAMAGES ARE BASED IN WARRANTY, TORT, CONTRACT, OR INDEMNITY. SOME STATES DO NOT ALLOW THE EXCLUSION OF LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. This warranty is valid only in the United States and Canada.

For any specific questions about the Barrette Outdoor Living Warranty please contact Barrette Outdoor Living by visiting our website [www.barretteoutdoorliving.com](http://www.barretteoutdoorliving.com) calling 1-800-336-2383.

To begin your warranty coverage and register your product visit: [www.freedomproduct.com](http://www.freedomproduct.com). Retain manual and your dated sales slip for future reference or warranty claims.



## Aluminum Rail Bracket Kit



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

**WARNING:**

- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the gate or individual.
- Not pool code approved.


**NOTICE:**

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store, for assistance or replacement parts call: 1-800-336-2383.

 
 

Please read the instructions completely before assembling. Retain manual and your dated sales slip for future reference or warranty claims.

**1 Fence Location:**

Mark the fence location using string and line stakes (Fig. 1).

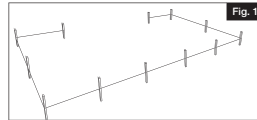**2 Post Location:**

Measure the width of the fence panel (X) plus  $\frac{3}{8}$ " for brackets. Then measure the width of the post (Y) (Fig. 2). Add these measurements together. This is the on-center measurement for post hole location (Fig. 3).

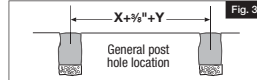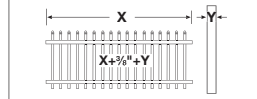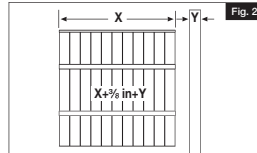**3 Post Installation:**


Dig the first two post holes. Hole size should be dug based on the following determination: Depth is determined by your local frost line measurements plus 6" for gravel/filler (Fig. 4). Width is determined by the post size. See chart for measurements:

**Diameters based on post size:**

10" for 5" x 5" post

8" for 4" x 4" post

Insert 6" of gravel/filler into the bottom of both holes and then set both posts into the ground and level them.

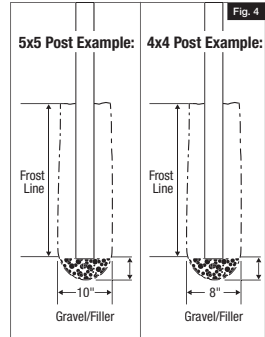

Add wet or dry concrete mix according to manufacturer's instructions to the top of both post holes.

After setting first fence section, proceed systematically with post, panel, post, etc.

**4 Rail Bracket Location:**

Measure the distance from the bottom of the panel to the bottom of the lower horizontal rail (X) and add 2" (ground clearance). This is the location of the bottom bracket. For all other bracket locations, use the distance of the rails from the specific panel purchased (Fig. 5).

