# ADJUST-A-GRATE

A grate solution that covers the hole problem

# SELECTING THE RIGHT MODEL

**>>>** 

Adjust-A-Crates fit inside the opening of the window well, therefore only use inside dimensions when measuring.

Measure the length along the house and the projection out from the house at the widest points and then select the correct model for your size and shape of well.





www.grate.com

# CUSTOM FIT WITHOUT THE CUSTOM PRICE


## **ADJUSTABLE**

Adjust-A-Grate window well covers are designed to offer you a custom fit without the custom price. Each grate is designed to adjust side to side so that it perfectly conforms to the contour of your well.

The grate does not adjust front to back, the range given for the projection out from the house for each model is simply the acceptable range for that model of grate.

If your measurement is near the lower end of the range you will have a smaller gap at the back of the grate, against the house. If your measurement is near the higher end of the range you will have a larger gap at the back of the grate.

See the full installation video at grate.com/installation

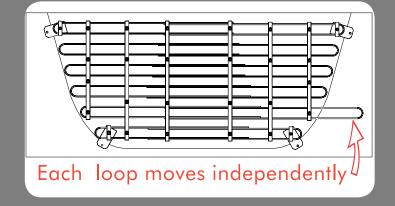

Most

Common

## **COMMON WELL SHAPES**

#### **RECTANGULAR**



- ► Typically a concrete or wood well, rectangular in shape that does not narrow or only slightly narrows as it comes away from the house.
- May be a metal well that is mostly rectangular but has rounded front corners.

USE **rectangular** size chart, pg 3.

### STANDARD

 


 $\triangleright \triangleright \triangleright$ 

- ► Typically a metal well that tapers as it comes away from the house with rounded front corners.
- May have concrete poured around the lip of the well such as a patio or sidewalk
- Smaller wells are nearly a perfect semi-circle.

USE **STANDARD** GRATE SIZE CHART, PG 2.

#### **PRECAST**



- ➤ Precast concrete wells with 5 or 7 sides not including the house.
- ► Ensure you are measuring the inside dimensions only, do not include the wall of the well in your measurement.
- Some sizes of precast grate models are not available to ship due to size.

USE **PRECAST** SIZE CHART, PG 3.



# STANDARD GRATE SIZE CHART

# SELECTING THE RIGHT MODEL



Adjust-A-Grates fit inside the opening of the window well, therefore only use inside dimensions when measuring.

Measure the length along the house (listed on the top of chart) and the projection out from the house (listed on the left side of chart) at the widest points and then select the correct model for your size and shape of well using the chart to the right.






www.grate.com

#### **Length Along The House At Widest Point (inches)** 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 + 15 16 Model S4\* Model L4 17 Semi Circle Wells Only 18 (inches) 19 Model L5 20 21 of Well 22 23 Model XL6 Model L6 24 Center 25 26 27 House in Model L7 Model XL7 28 If the size of your well 29 does not match any of 30 the models shown, then From 31 contact Adjust-A-Grate Inc. Model L8 Model XL8 32 for alternatives. Out 33 34 Projection 35 Model L9 Model XL9 36 37 +


# STANDARD 9-LOOP GRATE MODELS

Adding a Security Kit?
Use Model SK9 with L9 & XL9 Grates

### MODEL L9

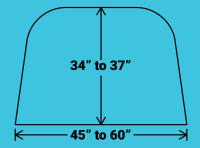

# MODEL XL9

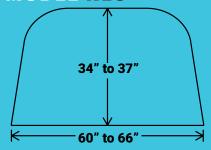

The above models will not fit rectangular or precast-concrete wells, see page 3.

For openings that are 60 inches in length along the house, both the L9 or XL9 Models will work.

However, please note that the L9 will be at it's maximum width and therefore will flex more versus the XL9 that will be much more rigid as 60 inches is it's minimum width. For this reason we recommend the XL9 for higher traffic areas.



# SELECTING THE RIGHT MODEL



Adjust-A-Grates fit inside the opening of the window well, therefore only use inside dimensions when measuring.

Measure the length along the house (listed on the top of chart) and the projection out from the house (listed on the left side of chart) at the widest points and then select the correct model for your size and shape of well using the chart to the right.






www.grate.com


# PRECAST MODELS

## RECTANGLE GRATE SIZE CHART

**Length Along The House At Widest Point (inches)** 

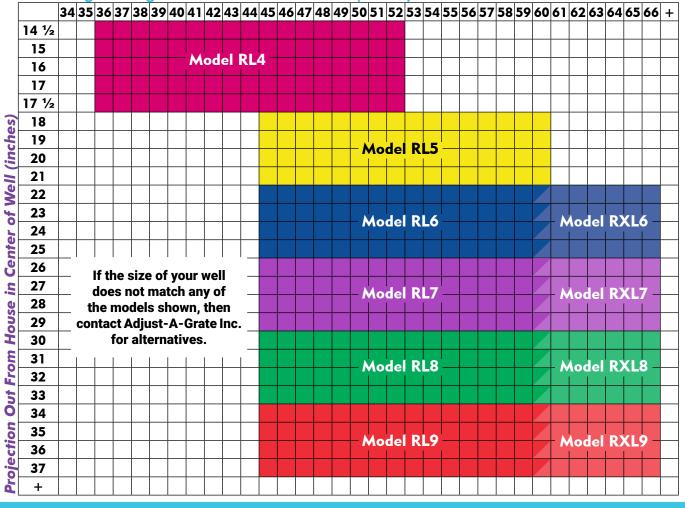


## MODEL L6

 

The standard Model L6 will work for a precast concrete well.

# MODEL PC8

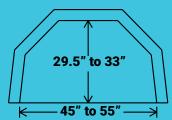

# MODEL PC10 \* Available in Col Not Eligil Shipping. C Adjust-A-Gr. Ada Inform

64" to 67"