 




USE AND CARE GUIDE

WIRELESS DOOR ACTIVATED LIGHT CONTROL

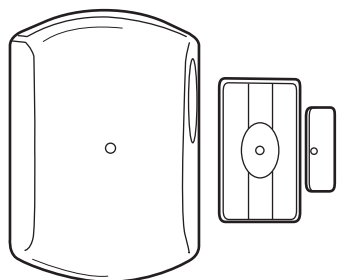

For additional assistance or information contact our Customer Service department at 1-800-654-8483 between 7:30AM–5:00PM CST or via our website (www.jascoproducts.com).

Safety Information



NOTE : This Class B digital apparatus complies with Canadian ICES-003.

FCC NOTE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING: RISK OF ELECTRIC SHOCK

- FULLY INSERT THE PLUG.
- KEEP CHILDREN AWAY.
- USE INDOORS ONLY.
- DO NOT USE IN WET LOCATIONS.
- UNPLUG BEFORE CLEANING.



WARNING : RISK OF FIRE

- DO NOT EXCEED ELECTRICAL RATINGS.
- DO NOT USE TO CONTROL MOTOR-OPERATED APPLIANCES, TRANSFORMER-SUPPLIED APPLIANCES OR APPLIANCES THAT CONTAIN HEATING ELEMENTS (COOKERS, IRONS, HEATERS, ETC.).



WARNING : Batteries may leak harmful liquids or ignitable materials or explode causing injury or product damage.

- DO NOT MIX OLD AND NEW OR OTHER BATTERY TYPES.
- REPLACE ALL BATTERIES AT THE SAME TIME.
- REPLACE FULLY DISCHARGED BATTERIES IMMEDIATELY.
- REMOVE BATTERIES IF PRODUCT IS TO BE UNUSED FOR AN EXTENDED PERIOD OF TIME.

RECEIVER

Functional Range	Up to 100 ft.
Maximum Tungsten Load	360W
Maximum Resistive Load	1440W
Rating	12A / 120V / 60Hz


TRANSMITTER

Functional Range	Up to 100 ft.
Battery Type	Use only 1.5V AAA Batteries



NOTE : Functional range may be adversely affected by one or more of the following factors: weather, radio frequency interference, low transmitter battery and obstructions between the transmitter and receiver.

 Product Description

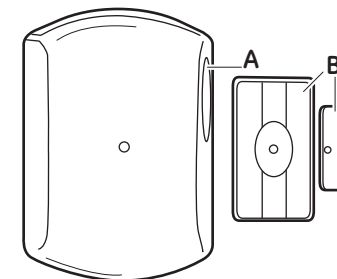


- A. Indoor Receiver: Plug the device to be controlled into the grounded outlet located on the indoor receiver.
- B. Wireless Door Remote Transmitter: Attach the larger portion of the magnetic sensor to the door frame. Attach the smaller portion of the magnetic sensor to the door. Align the arrows on the sensors. When the sensors separate the light will activate. See Installation Instructions.

Installation Instructions


1 Installing the receiver

 - Plug the receiver (A) into a standard indoor grounded outlet.
- Plug the device to be controlled into the outlet on the receiver (A).
- Ensure the outlet supplying the receiver (A) is powered.
- Ensure the lamp or device is turned on.

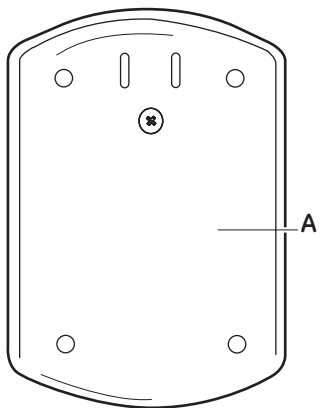

2 Installing the sensor

 - Before installing the batteries, make sure that the switch on the sensor is in the "off" position.
- Open the battery compartment on the sensor (B) and install the included batteries, matching polarity.
- Use the mounting tape provided to mount the larger unit (1) on the door frame. Next, mount the smaller unit (2) on the door parallel with the larger unit. Ensure the arrows on the units are aligned and turn the switch on the sensor to the "on" position.
- Ensure the distance between the larger unit (1) and the smaller unit (2) is no more than 1/4 in. to ensure the product functions properly.
- The device will now be turned on when the door opens and turn off 30 minutes later.

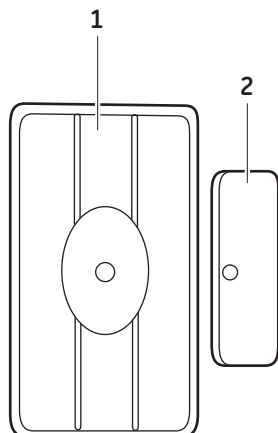

3 Replacing the batteries

- Remove the back battery cover on the sensor (B).
- Remove the old batteries.
- Install 3 new 1.5V AAA batteries noting the polarity.
- Replace the battery cover.

Troubleshooting

Problem	Solution
If the lighting control is not working, check the following:	<ul style="list-style-type: none"> <input type="checkbox"/> Verify the device plugged into the receiver is working. <input type="checkbox"/> Verify the door magnet sensors are aligned properly with the arrows matching up. <input type="checkbox"/> Verify the battery orientation, noting polarity. <input type="checkbox"/> Replace the batteries. Use only 1.5V AAA Batteries. <input type="checkbox"/> Check to ensure that the gap when sensor pieces 1 and 2 are mounted is no larger than 1/4 inch.



MADE IN CHINA / HECHO EN CHINA

GE is a trademark of General Electric Company and is under license by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product comes with a 90-day limited warranty. Visit www.jascoproducts.com for warranty details and product registration.

Questions? Contact us at 1-800-654-8483 between 7:30AM–5:00PM CST.