

## CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

- Default Setting
- Available options
- ★ Cannot be used if Steam is selected
- Turbo Wash™ will be deselected

Cycle	Fabric or Load Type	Wash Mode	Temp.	Spin	Soil	Soak	Stain Care	Extra Rinse	Water Plus	Delay Wash	PGM Save
Normal	Cotton, linen, shirts, jeans, mixed loads	Steam	Extra Hot <sup>b</sup>	Extra High	Heavy						
		Turbo Wash™	Hot	High	Normal	★	■ <sup>c</sup>	●	●	●	●
		Cold Wash <sup>b</sup>	Warm	Medium	Light						
Heavy Duty	Heavily soiled cotton fabrics	Cold Wash <sup>b</sup>	Cold	Low <sup>a</sup>	Normal						
		Fabric Softener	Tap Cold	No Spin	Light						
		Steam	Hot	Extra High	Heavy						
Bedding	Large items such as blankets, comforters, and sheets.	Turbo Wash™	Warm	Medium	Normal	★	■	●	●	●	●
		Cold Wash	Cold	Low	Light						
		Fabric Softener	Tap Cold	No Spin	Light						
Use the Bedding cycle for items such as pillows, comforters, pet bedding and other articles which have difficulty absorbing water. DO NOT WASH EXCESSIVELY LARGE ITEMS. If large/bulky items do not fit easily into the tub, there may not be enough room for them to move during washing. Keep like items together; do not mix large bulky items with smaller clothing items. Failure to follow these instructions may result in damage to the clothing or to the washer.											
Sanitary	White fabrics	No Option	Extra Hot	Extra High	Heavy						
		Steam	Hot	High	Normal	★		●	●	●	●
		Turbo Wash™	Warm	Medium	Light						
Allergiene™	Heavily soiled underwear, work clothes, diapers, etc. (less than 11 lbs.)	Fabric Softener	Tap Cold	No Spin	Light						
		Steam	Hot	Extra High	Heavy						
		Cold Wash	Cold	Low	Normal			●	●	●	●
Bright Whites™	Cotton, underwear, pillow covers, bed sheets, baby wear. (less than 12 lbs.)	No Option	Extra Hot	Extra High	Heavy						
		Steam	Hot	High	Normal	★		●	●	●	●
		Turbo Wash™	Warm	Medium	Light						
Tub Clean	Refer to page 27.	Fabric Softener	Tap Cold	No Spin	Light						
		Steam	Hot	High	Light					●	
		Cold Wash	Cold	Low	Light						

<sup>a</sup> The Low spin speed is available only with the Heavy soil level.  
<sup>b</sup> Cold Wash and Extra Hot are not available with the Heavy soil level.  
<sup>c</sup> Stain Care cannot be used if Cold Wash is selected.

**NOTE:** The following options can only be used independently of each other: Steam, Turbo Wash™, Fabric Softener, Cold Wash.  
 Soak and Stain Care cannot be selected together.

## CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

- Default Setting
- Available options
- \* Cannot be used if Steam is selected
- Turbo Wash™ will be deselected

Cycle	Fabric or Load Type	Wash Mode	Temp.	Spin	Soil	Soak	Stain Care	Extra Rinse	Water Plus	Delay Wash	PGM Save
Pre Wash+ Normal	Cotton, linen, shirts, jeans, mixed loads		Hot	Extra High							
			Warm	High	Normal			●	●	●	●
Perm. Press	Dress shirts/pants, wrinkle-free clothing, poly/cotton blend clothing, table-cloths	Fabric Softener	Cold	Low	Light						
		No Option	Tap Cold	No Spin	Heavy						
		Turbo Wash™	Warm	High	Normal	●		●	●	●	●
Waterproof	Waterproof items - i.e. Water resistant clothing, mattress covers, outdoor clothes, plastic mats etc. (less than 14 lbs.)	Cold Wash	Cold	Low	Light						
		Fabric Softener	Tap Cold	No Spin	Light						
		No Option			Heavy						
Delicates	Dress shirts/blouses, nylons, sheer or lacy garments (less than 8 lbs.)		Warm		Heavy						
			Cold	Low	Normal	●		●	●	●	●
		Fabric Softener	Tap Cold	No Spin	Light						
Towels	Big towels, small towels	No Option		Extra High	Heavy						
		Turbo Wash™	Hot	High	Normal	●	■ <sup>c</sup>	●	●	●	●
		Cold Wash	Warm	Medium	Light						
Speed Wash	Lightly soiled and small loads	Fabric Softener	Tap Cold	No Spin	Light						
				Extra High	Heavy						
		Turbo Wash™	Warm	High	Normal	●		●	●	●	●
Downloaded	The downloaded cycle (See page 22.)		Cold	Low	Light						
			Tap Cold	No Spin	Light						

<sup>a</sup> The Low spin speed is available only with the Heavy soil level.  
<sup>b</sup> Cold Wash and Extra Hot are not available with the Heavy soil level.  
<sup>c</sup> Stain Care cannot be used if Cold Wash is selected.

**NOTE:** The following options can only be used independently of each other: Steam, Turbo Wash™, Fabric Softener, Cold Wash.  
 Soak and Stain Care cannot be selected together.

**NOTE:**

To protect your garments, not every wash/rinse temperature, spin speed, soil level, or option is available with every cycle. A chime will sound and the LED will not light if the selection is not allowed.

\*When a cycle is selected, the default time for that cycle is displayed. This time will change as modifiers or options are selected. Once the START/PAUSE button is pressed, the washer will measure the load. The estimated time may change once the load has been measured. The washer automatically adjusts the wash time for the amount of laundry, water pressure, water and other operating conditions.