



Important Safety Information

Read all safety information before operating the equipment. **SAVE THESE INSTRUCTIONS.**

Important Electrical Information

Use only an extension cord that will accept the plug on the product. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. A SJT type cord is required. Cord shall be 14 AWG minimum for general indoor use.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. When servicing, only use identical service parts. Contact WAGNER for a replacement cordset.

General Description

This heat gun is a quality power tool. Like any power tool, it can be dangerous when misused. Read the following instructions carefully and follow all safety precautions. It is the responsibility of the owner to use the heat gun properly. Only adults should use a heat gun.

Specifications

Housing: Engineered high-impact corrosion and heat-resistant polymers

Wattage: 1500 Watts on highest, 30 Watts on lowest

Heat Output: Approximately 1300°F on high, approximately 125°F on low

Weight: 1.95 pounds



For more details on multiple projects and 'how to' videos please visit www.wagnerspraytech.com.

