

PART #	KEY #	BIN LOCATION	DESCRIPTION	HYPL
A WASHER PARTS				
W6.5-A-01-YG	1		AXLE	
W7.0-A-02-YG	2		PUMP ASSEMBLY (3200PSI)	
W6.5-A-03-YG	3		HIGH PRESSURE HOSE	
W4.0-A-04-YG	4		AIR CLEANER ASSEMBLY	
W4.0-A-05-YG	5		MUFFLER ASSEMBLY	
W7.0-A-06-YG	6		ENGINE ASSEMBLY	
W4.0-A-07-YG	7		ENGINE BASE PAD	
W7.0-A-08-YG	8		LOWER PRAME	
W7.0-A-09-YG	9		UPPER FRAME & HANDLE	
W6.5-A-10-YG	10		FUEL TANK ASSEMBLY	
W6.5-A-11-YG	11		RUBBER FOOT (Φ70)	
W6.5-A-12-YG	12		RUBBER CAP (Φ32)	
W6.5-A-13-YG	13		WHEEL (10" INFLATABLE)	
W4.0-A-14-YG	14		THERMAL RELIEF VALVE HOSE	
W7.0-A-15-YG	15		DETERGENT HOSE	
W6.5-A-18-YG	16		HOSE HOLDER	
W7.0-A-19-YG	17		GUN HOLDER	
W4.0-A-20-YG	18		GROMMET	
W4.0-A-21A-YG	19		NOZZLE (BLACK)	
W4.0-A-21B-YG	20		NOZZLE (WHITE)	
W4.0-A-21C-YG	21		NOZZLE (RED)	
W4.0-A-21D-YG	22		NOZZLE (GREEN)	
W4.0-A-21E-YG	23		NOZZLE (YELLOW)	
W6.5-A-22-YG	24		GUN	
W4.0-A-23-YG	25		WAND	
W4.0-A-24-YG	26		MUFFLER GASKET	
W4.0-A-25-YG	27		OIL MEASURING CUP	
W4.0-A-26-YG	28		WATER INLET FILTER	
W7.0-A-33-YG	29		DETERGENT BOTTLE	
W7.0-A-34-YG	30		DETERGENT BOTTLE CAP	
W7.0-A-35-YG	31		DETERGENT BOTTLE SWITCH	
HDW-AAA-M6X25H	32		ALLEN BOLT HARDENED(M6X25X1.0)	
HDW-AAA-M8X40H	33		ALLEN BOLT HARDENED(M8X40X1.25)	

HDW-N-M6	34		FLAT WASHER (M8)	
HDW-O-M6	35		LOCK WASHER (M6)	
HDW-M-M8	36		LOCK NUT (M8X1.25)	
HDW-N-M8	37		FLAT WASHER (M8)	
B PUMP PARTS				
W4.0-B-01-YG	1		THERMAL RELIEF VALVE	
W4.0-B-02-YG	2		THERMAL RELIEF VALVE CAP	
W4.0-B-04-YG	3		DETERGENT INLET COUPLING SET	
W4.0-B-05-YG	4		OUTLET COUPLING CAP	
W4.0-B-06-YG	5		PLUNGER CAP	
C AIR CLEANER PARTS				
W4.0-C-01-YG	1		AIR CLEANER COVER	
W4.0-C-02-YG	2		AIR CLEANER BASE (W/ STUD BOLT)	
W4.0-C-03-YG	3		AIR CLEANER ELEMENT	
W4.0-C-04-YG	4		AIR CLEANER ELEMENT BASE	
W4.0-C-05-YG	5		FASTENING KNOB	
D CARBURETOR PARTS				
G4.0-I-01BE-JD	1		CARBURETOR (LONG LEVER FUEL VALVE, W/O CHOKE LEVER, EPA)	
G4.0-I-02A-JD	2		CHOKE LEVER (SHORT)	
G6.5-I-04B-JD	3		INTAKE MANIFOLD (LONG)	
G6.5-I-05-JD	4		INTAKE GASKET	
G6.5-I-06-JD	5		INTAKE MANIFOLD GASKET	
G4.0-I-07-JD	6		CARBURETOR GASKET (COPPER)	
HDW-Y-01	7		HOSE CLAMP (M8)	
HDW-Z-01	8		FUEL LINE (Φ9)	
E FUEL TANK PARTS				
G2.5-O-01A-JD	1		FUEL FILLER CAP (NON-THREADED CARB)	
G2.5-O-02A-JD	2		FUEL STRAINER (CARB)	
APG3301C-O-02C-JD	3		FUEL STRAINER RETAINER	
W6.5-E-03B-JD	4		FUEL TANK (EPA)	
W4.0-E-04-YG	5		FUEL OUTLET	
HDW-Y-01	6		HOSE CLAMP (M8)	

HDW-Z-01	7	FUEL LINE (Φ9)	
ENGINE PARTS			
A CYLINDER HEAD			
G7.0-A-01-JD	1	CYLINDER HEAD BARE	
G6.5-A-02-JD	2	CYLINDER HEAD GASKET	
JF168F7TC	3	SPARK PLUG (F7TC)	
G6.5-A-04-JD	4	VALVE COVER	
G6.5-A-05-JD	5	VALVE COVER GASKET	
HDW-A-M6X90	6	INTAKE STUD (M6X90X1.0)	
HDW-B-M8X35	7	EXHAUST STUD (M8X35X1.25)	
HDW-C-03	8	DOWEL PIN (Φ10X16)	
HDW-D-M8X58	9	CYLINDER HEAD BOLT (M8X58X1.25)	
HDW-E-M6X12	10	VALVE COVER BOLT (M6X12X1.0)	
B CYLINDER BLOCK			
G7.0-B-01C-JD	1	CRANKCASE ASSEMBLY (W/O ELECTRIC START)	
G6.5-B-04-JD	2	GOVENOR GEAR ASSEMBLY	
HDW-BB-04	3	OIL SEAL (Φ25XΦ41.25X6)	
HDW-CC-6205	4	BEARING (6205)	
HDW-G-M10X15	5	OIL DRAIN BOLT (M10X15X1.25)	
HDW-H-01AL	6	COMPRESSION WASHER (M10)	
C CRANK CASE COVER ASSEMBLY			
G6.5-C-01B-JD	1	CRANK CASE COVER STAND ALONE	
G6.5-C-02-JD	2	CRANK CASE COVER GASKET	
HDW-BB-04	3	OIL SEAL (Φ25XΦ41.25X6)	
HDW-CC-6205	4	BEARING (6205)	
HDW-C-01	5	DOWEL PIN (Φ8X14)	
HDW-G-M8X28	6	HEX HEAD FLANGE BOLT (M8X28X1.25)	
HDW-EE-01	7	OIL DIP STICK (M18)	
HDW-AA-02 FL	8	O-RING FLAT (18 MM)	
D CRANK SHAFT ASSEMBLY			
G7.0-D-01A-JD	1	CRANKSHAFT ASSEMBLY (STRAIGHT SHAFT)	
HDW-U-03	2	FLAT WOODRUFF KEY (45 MM)	

HDW-V-01	3	MOON WOODRUFF KEY (18 MM)	
E PISTON AND CONNECTING ROD ASSEMBLY			
G7.0-E-01-JD	1	PISTION	
G7.0-E-02-JD	2	PISTON RING SET (5 PCS)	
G6.5-E-03-JD	3	WRIST PIN	
G6.5-E-04-JD	4	CONNERTING ROD	
G6.5-E-05-JD	5	CONNERTING ROD CAP	
HDW-FF-01	6	WRIST PIN RETAINER (M18)	
HDW-G-M7X30H	7	CONNECTING ROD CAP BOLT HARDENED (M7X30X1.0)	
F VALVE TRAIN			
HDW-LL-M6H	1	ROCKER PIVOT NUT (M6X0.75)	
G6.5-F-01-JD	2	ROCKER ARM	
G6.5-F-02-JD	3	PUSH ROD GUIDE PLATE	
G6.5-F-03-JD	4	PUSH ROD	
G7.0-F-04-JD	5	VALVE STEM SEAL (INTAKE)	
G7.0-F-05B-JD	6	INTAKE VALVE (W/O KEEPER)	
G7.0-F-06B-JD	7	EXHAUST VALVE (W/O KEEPER)	
G6.5-F-07-JD	8	LIFTER	
G6.5-F-08-JD	9	VALVE ROTATOR (IN/EX)	
G6.5-F-10B-JD	10	VALVE RETAINER (W/O KEEPER, INTAKE)	
G6.5-F-10C-JD	11	VALVE RETAINER (W/O KEEPER, EXHAUST)	
G6.5-F-11B-JD	12	VALVE SPRING (W/O KEEPER)	
G6.5-F-20-JD	13	CAMSHAFT ASSEMBLY	
HDW-J-M6H	14	LOCK NUT HARDENED (M6X0.75)	
HDW-HH-01H	15	PIVOT STUD (M6X52X0.75)	
G RECOIL STARTER ASSEMBLY			
G6.5-G-01-JD	1	RECOIL STARTER	
G6.5-G-02-JD	2	RECOIL STARTER SPACER	
HDW-G-M6X15	3	HEX HEAD FLANGE BOLT (M6X15X1.0)	
H FAN COVER ASSEMBLY			
G6.5-H-01C-JD	1	FAN COVER (W/ SWITCH HOLE)	
G6.5-H-02C-JD	2	FLYWHEEL INSPECTION PLATE (FOR PRESSURE WASHER)	

HDW-G-M6X12	3	HEX HEAD FLANGE BOLT (M6X12X1.0)
HDW-G-M6X8	4	HEX HEAD FLANGE BOLT (M6X8X1.0)
IGN-04R-JD	5	ENGINE ON/OFF SWITCH (RED, 1-WIRE)
J FLYWHEEL ASSEMBLY		
G6.5-J-01A-JD	1	FLYWHEEL (W/O RING GEAR)
G6.5-J-02-JD	2	FLYWHEEL FAN
G6.5-J-03B-JD	3	RECOIL STARTER CUP (W/ SPACER LENGTH)
G6.5-J-04B-JD	4	TWO-WIRE IGNITION COIL
HDW-G-M6X25	5	HEX HEAD FLANGE BOLT (M6X25X1.0)
HDW-K-M14	6	FLANGE NUT SERRATED (M14X1.5)
L GOVERNOR ASSEMBLY		
G6.5-L-01-JD	1	GOVERNOR ARM SHAFT
G6.5-L-02-JD	2	GOVERNOR ARM
G4.0-L-03N-JD	3	GOVERNOR BASE (FOR PRESSURE WASHER)
G6.5-L-05-JD	4	GOVERNOR ROD
HDW-NN-02	5	SPEED GOVERNOR SPRING (115 MM)
HDW-II-01	6	GOVERNOR BOLT (SPECIAL, M6X20X1.0)
HDW-K-M6	7	FLANGE NUT SERRATED (M6X1.0)
HDW-G-M6X12	8	HEX HEAD FLANGE BOLT (M6X12X1.0)
HDW-N-M8	9	FLAT WASHER (M8)
HDW-W-01	10	GOVERNOR ARM SNAP PIN (8 MM)

