


USE AND CARE GUIDE

RICHMOND HILL LOVE SEAT

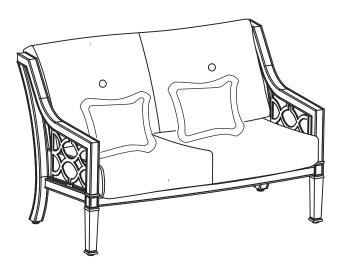

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8.00 a.m. - 6.00 p.m., EST, Monday - Friday

1-800-986-3460

HOMEDECORATORS.COM

THANK YOU

Table of Contents

Table of Contents	
Safety Information	2
Warranty	2
Five Year Frame and Two Year Fabric Limited Warranty	
What Is Covered	
What Is Not Covered	2
Care Instructions	2

Pre-Assembly	3
Planning Assembly	3
Hardware Included	3
Package Contents	4
Assembly	

Safety Information



DANGER: Please keep children out of the assembly area during assembly.



IMPORTANT: Please check the tightness of bolts at least every 180 days.

Warranty

FIVE YEAR FRAME TWO YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years and fabric for two years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Care Instructions

Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. Treat the frame with liquid wax for maximum protection against UV light and salty, damp air. When not in use, store furniture in a cool, dry place. If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water. Rinse cushions thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics.

You may contact our customer service department with any questions by phone at 1-800-986-3460 or visit www.homedecorators.com.

Pre-Assembly

PLANNING ASSEMBLY

It will take two people about 10 minutes to complete the assembly process.

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	Bolt (M6x32)	10
BB	Washer	10
CC	Bolt cap	10
DD	Hex wrench	1

Pre-Assembly(continued)

PACKAGE CONTENTS

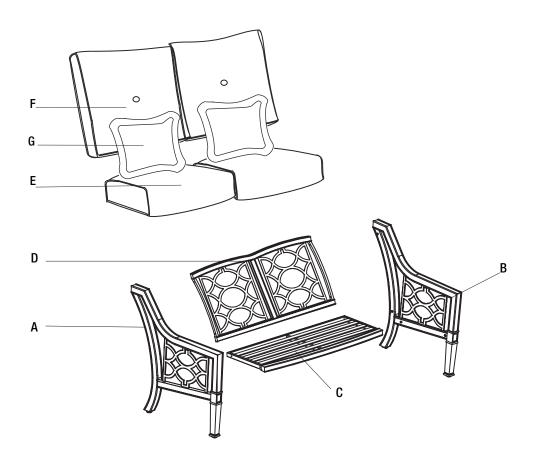

Part	Description	Quantity
Α	Right armrest	1
В	Left armrest	1
С	Seat panel	1
D	Back panel	1
E	Seat cushion	2
F	Back cushion	2
G	Toss pillow	2


Assembly

Attaching the seat panel to the back panel

- □ Place the back panel (D) on a flat, smooth surface.
- □ Attach the seat panel (C) to the back panel (D) with washers (BB) and bolts (AA) using hex wrench (DD).




NOTE: Do not tighten the bolts (AA) completely until the end of step 2.

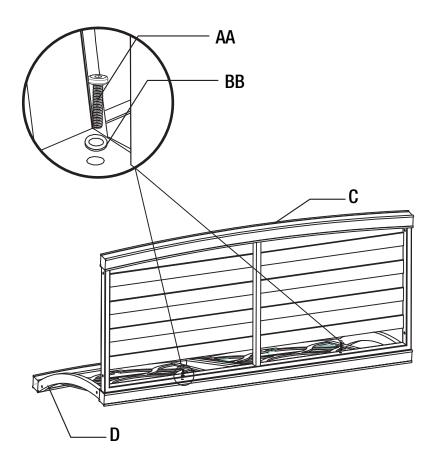

Assembly (continued)


2 Attaching armrests

- □ Place the armrest (A) on its side on a flat, smooth surface.
- □ Attach the seat panel and the back panel to the armrest (A) with washers (BB) and bolts (AA) using hex wrench (DD).
- Repeat the above procedure to attach the armrest (B).
- □ Fully tighten all the bolts (AA) once all bolts are in place.

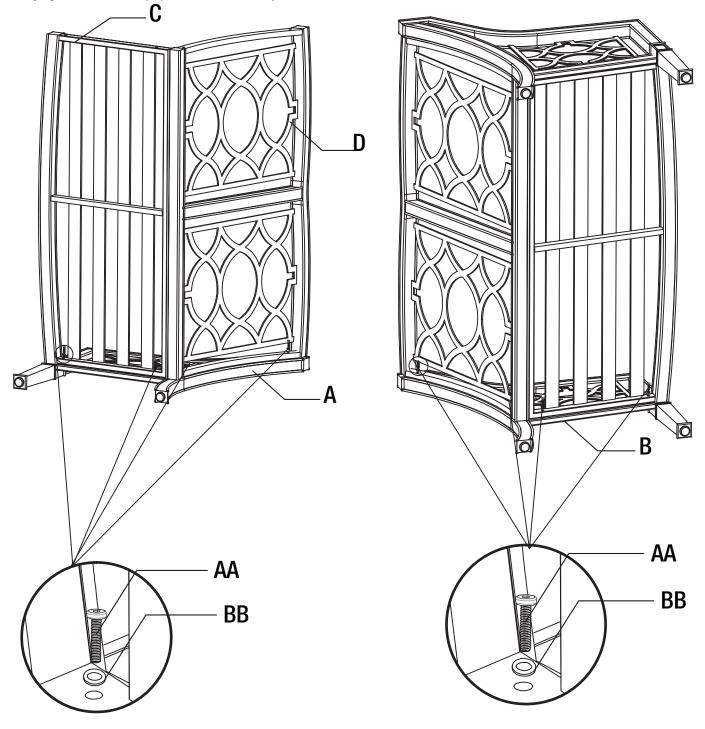


Assembly (continued)

3 Covering all the bolts with bolt caps (CC)

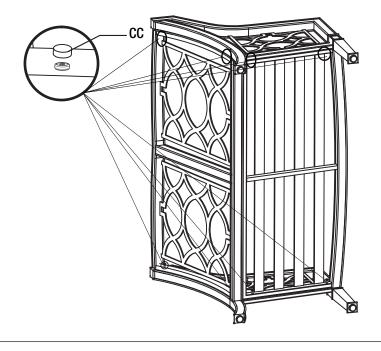

4 Level the love seat

- Turn the love seat upright. Level the love seat with foot glides at the bottom of chair legs if necessary.
- □ Place cushions (E) and (F) and toss pillows (G) on the love seat.

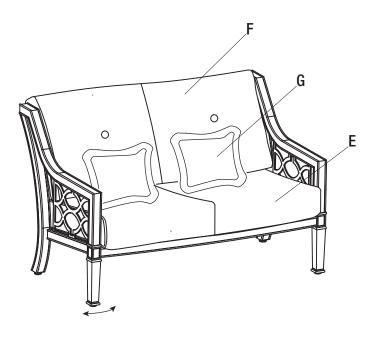



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8.00 a.m. – 6.00 p.m., EST, Monday-Friday

1-800-986-3460

HOMEDECORATORS.COM

Retain this manual for future use.