



TapCan™ - The Effortless Trash Can

Model# TC13SB/TC13SR/TC13SW

USER MANUAL



Items included in the package:

- TapCan
- Trash Bag Retainer Ring
- Deodorizer Compartment
- One (1) Activated Carbon Filter Refill
- User Manual

Optional items NOT in the package:

- TapCan AC Power Adapter
- Replacement Activated Carbon Filter Refill
- Stainless Steel Cleaner
- Custom Fit Premium Trash Bags

To order optional items, please visit www.haloquality.com



Protect your purchase. Register your product today!

www.haloquality.com/register

Product Model No.: TC13SB / TC13SR / TC13SW

INTRODUCTION

One tap is all it takes! TapCan™ is the smartest, most effortless pedal trash can ever invented. Unlike step cans that require you to apply foot pressure and hold the pedal down for the lid to open, our patented technology opens, then automatically closes, the lid with just one tap. Or, double tap the pedal for a timed, five-minute lid open. You can tap the pedal again at any time to manually close the lid. The enhanced, energy-saving technology extends the life of the battery up to 3 years with just 4 D-sized alkaline batteries. The elegant, fingerprint- and smudge-resistant, brushed stainless steel finish complements any room. TapCan™ is the smartest, easiest trash can you will ever use!



OPERATING INSTRUCTIONS

- 1) Install 4 D-sized alkaline batteries in the battery compartment in the bottom of the back of TapCan. If you have purchased a TapCan AC Power Adapter, you may plug it into TapCan.
- 2) Turn on the power switch to "1" mode. The LED light will flash blue.
- 3) Open the trash can lid by tapping the pedal (LED flashes blue). The lid will automatically open and stay open for 5 seconds. It will then automatically close. Double tap the pedal (LED flashes green) to cause the lid to stay open for 5 minutes. Step and hold the pedal (LED lights up blue) to manually keep the lid open until you release the pedal, then it will close automatically in 5 seconds.
- 4) Insert a 13 gallon garbage bag through Trash Bag Retainer Ring to secure and hide the trash bag inside the trash can. (See **HOW TO USE THE TRASH BAG RETAINER RING**)
- 5) Unwrap and install the Activated Carbon Filter:
 - a. Open Deodorizer Compartment under the lid (Picture 1)
 - b. Remove the Activated Carbon Filter from its plastic bag
 - c. Put the Activated Carbon Filter back into the Deodorizer Compartment
 - d. Lock the tab to secure the Deodorizer Compartment



HOW TO USE THE TRASH BAG RETAINER RING



1) Place retainer ring on can and insert a trash bag inside the trash can. Wrap trash bag around one retainer ring arm



2) Wrap trash bag around other retainer ring arm



3) Press both retainer ring arms down to secure bag and pull bag down so that it does not cover hinges.

HOW TO REMOVE TRASH BAG



1) Lift up the retainer ring arms to unwrap the trash bag from the arms and tie the end of the bag closed



2) Remove the retainer ring from the can



3) Remove trash bag from can

THREE (3) YEAR LIMITED WARRANTY

TapCan™ is distributed by halo™ with the highest quality components and most advanced technologies available. TapCan is warranted to be free from defects in material and workmanship, given normal use and care, for 3 years from the date of the original purchase with proof of purchase within the United States and Canada with the following exceptions: stainless steel can body, retainer ring, battery compartment, deodorizer compartment, pedal. halo will only honor warranty requests from orders placed with our authorized dealers. Items sold as specially discounted, used, floor sample or refinished are sold solely under the terms and conditions of the selling party; halo will not warrant such purchase. halo will repair or replace a new TapCan thereof which fails as the result of such a defect during the warranty period.

This warranty is the customers' exclusive remedy for product defect and does not apply to:

- User modification
- Attachments to product by user that causes damage
- Any product, on which the seals and/or serial numbers have been broken, removed, tampered with, defaced or altered in any manner
- Damage caused by abuse, misuse, accident, water, theft or using unofficial accessories such as AC power adapter

Except as stated above, halo makes no express or implied warranties as to any product, in particular, makes no warranty of merchantability or of fitness for any particular purpose. halo shall not be liable for consequential or incidental damages arising from any product defect. Our Liability is limited to the repairing or replacement of any defective product. halo expressly disclaims all warranties not satisfied in this limited warranty. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty. The Can Body, Activated Carbon Filter, Retainer Ring, Pedal, Deodorizer Compartment, and Battery Compartment are not covered by this warranty.

This warranty gives you specific legal rights. However, you may also have other rights that vary from state to state.

If TapCan should fail during the warranty period, contact us through <http://www.haloquality.com/contact> to submit a request for warranty service. A copy of your dated proof of purchase is required prior to any and all claims. To provide better service, you should register your products on www.haloquality.com. For additional details, please refer to the warranty email that halo will provide. Then, simply ship the product postage prepaid to *:

halo
 23497 Eichler St., Unit A
 Hayward, CA 94545

*It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

TROUBLESHOOTING Q & A

Problem	Solution
1. The lid is opening slowly	The battery power is low. Replace all batteries with a new set of 4 D size alkaline batteries. Do not use rechargeable batteries or mix of old batteries.
2. The lid will not close completely	Ensure that the Trash Bag Retainer Ring has been placed properly on the can, pushed down firmly and is not sticking up.
3. The lid does not open/close	<p>If you are using Batteries:</p> <ul style="list-style-type: none"> • Ensure batteries are inserted correctly and close the battery cover firmly • Turn power switch to on position "1" and check if the LED blue light flashes. <p>If you are using AC Power Adapter:</p> <ul style="list-style-type: none"> • Unplug the adapter and insert new alkaline batteries to see if the lid works on battery • If the lid works with batteries, the AC adapter may be broken <p>Important: Do not use batteries and the AC power adapter at the same time. It can only be powered by one source at a time.</p>
4. I tap the pedal, but the lid does not open	<ul style="list-style-type: none"> • The batteries may need to be replaced. Replace all batteries with a new set of 4 D size alkaline batteries. Do not use rechargeable batteries or a mix of old batteries.
5. I tap the pedal twice, but the lid does not keep open.	Ensure the LED is flashing green. The pedal should be tapped two times within 1 second. Please tap the pedal twice quicker.

ATTENTION

1. Clean the can body only with products safe for use on stainless steel.
2. Do not press or force the trash can lid to close manually. Lid will close automatically when pedal is up.
3. Avoid direct sunlight on the trash can, and ensure there is enough room to operate the trash can without blocking the opening and closing of the lid.