


**RYOBI
TILE SAW
MODEL NO. WS722
REPAIR SHEET**

RYOBI TILE SAW - MODEL NUMBER WS722

FIGURE A

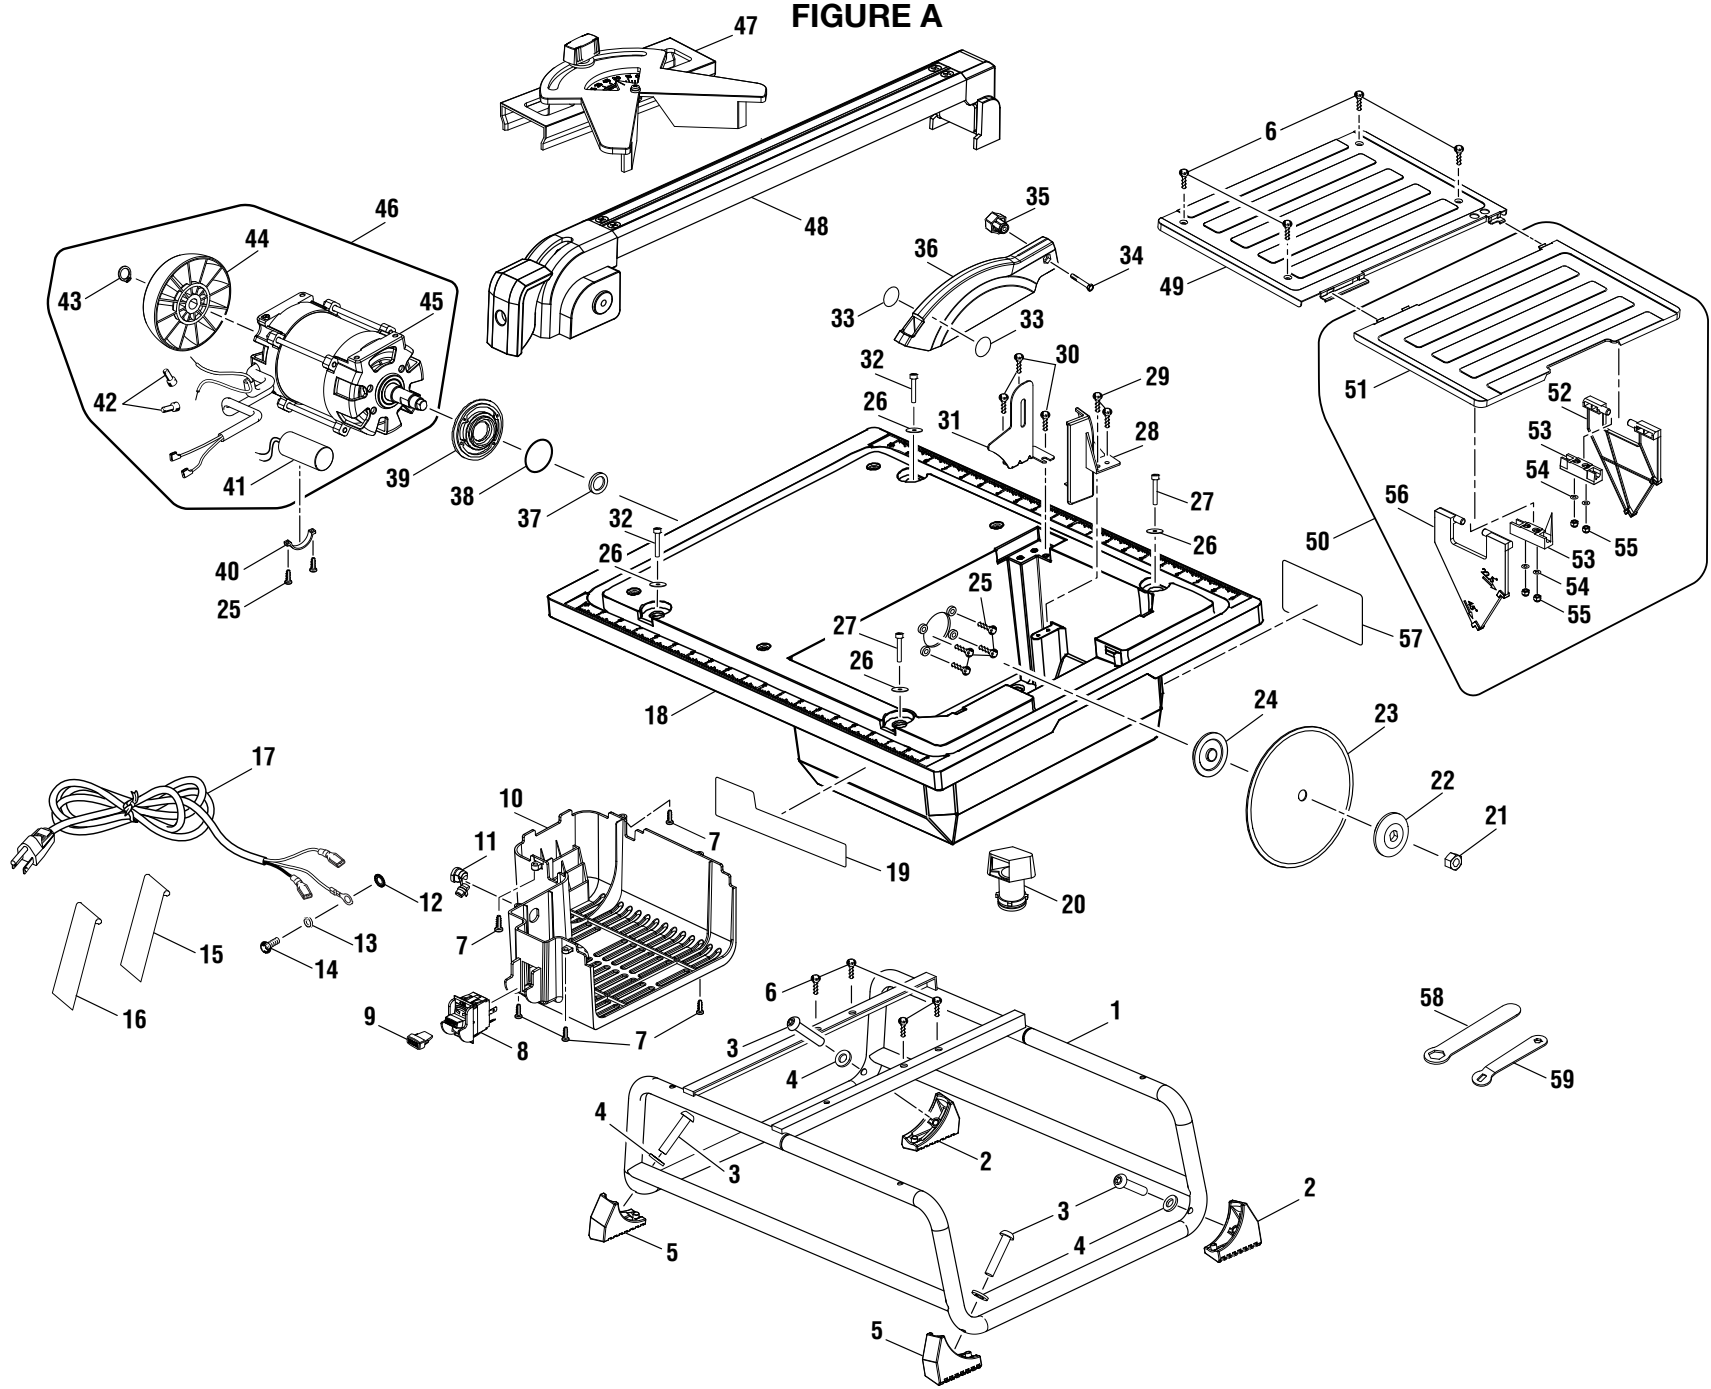


RYOBI TILE SAW – MODEL NUMBER WS722

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **TILE SAW** or when ordering repair parts.

PARTS LIST FOR FIGURE A

Key Part No. Number	Description	Qty	Key Part No. Number	Description	Qty		
1	089041002051	Frame	1	32	089041002038	Screw (M5 x 40 mm)	2
2	089041002054	Rubber Foot (B)	2	33	089041002907	No Hands Label.....	2
3	089041002052	Screw (M6 x 30 mm)	4	34	089041002022	Bolt (M6 x 30 mm).....	1
4	089041002053	Washer (M6)	4	35	089041002020	Knob	1
5	089041002055	Rubber Foot (A)	2	36	089041002707	Blade Guard Assembly (Inc. Key Nos. 33-35).....	1
6	089041002023	Screw (M5 x 10 mm)	8	37	089041002043	O-ring (OD27 x ID17.5 x 2.5t).....	1
7	089041002064	Screw (M4.2 x 12 mm)	5	38	089041002042	O-ring (OD54.5 x 2.65t)	1
8	089041002062	Switch Assembly (Inc. Key No. 9)	1	39	089041002041	Motor Seal	1
9	089041002069	Switch Key	1	40	089041002057	Clamp	1
10	089041002063	Motor Cover	1	41	089041002046	Capacitor	1
11	089041002061	Strain relief (Heyco)	1	42	089041002075	Wire Connector	2
12	089041002065	Washer (M5, Internal Star).....	1	43	089041002074	Retaining Ring	1
13	089041002066	Lock Washer (M5).....	1	44	089041002073	Fan.....	1
14	089041002067	Screw (M5 x 8 mm)	1	45	089041002078	Motor.....	1
15	089041002906	Warning Label (Fr/Sp).....	1	46	089041002708	Motor Assembly (Inc. Key Nos. 41-45).....	1
16	089041002905	Cord Wrap Label	1	47	089041002702	Miter Gauge Assembly	1
17	089041002709	Power Cord Assembly (Inc. Key Nos. 15-16)	1	48	089041002701	Rip Fence Assembly.....	1
18	089041002705	Cabinet Assembly (Inc. Key Nos. 19, 28-29 and 57).....	1	49	089041002025	Left Table	1
19	089041002904	Logo Label.....	1	50	089041002704	Right Table Assembly (Inc. Key Nos. 51-56)	1
20	089041002706	Water Plug Assembly	1	51	089041002026	Right Table.....	1
21	089041002048	Lock Nut (M12).....	1	52	089041002027	Right Wing	1
22	089041002047	Outer Blade Washer	1	53	089041002028	Bracket	2
23	089041002902	Wheel.....	1	54	089041002029	Washer (M5)	4
24	089041002045	Inner Blade Washer	1	55	089041002030	Lock Nut (M5).....	4
25	089041002044	Screw (M2.9 x 9.5 mm)	6	56	089041002031	Left Wing	1
26	089041002039	Washer (OD6.5 x 17.5ID x 2.5t).....	4	57	089041002901	Data Label	1
27	089041002040	Screw (M5 x 30 mm)	2	58	089041002072	Wrench (Large)	1
28	089041002036	Splash Guard.....	1	59	089041002071	Wrench (Small)	1
29	089041002037	Screw (M4.2 x 12 mm)	2		NOT SHOWN		
30	089041002032	Screw (M5 x 6 mm, Special).....	3		990000859	Operator's Manual	
31	089041002033	Riving Knife	1		9-26-14		
					(Rev:01)		

RYOBI TILE SAW – MODEL NUMBER WS722

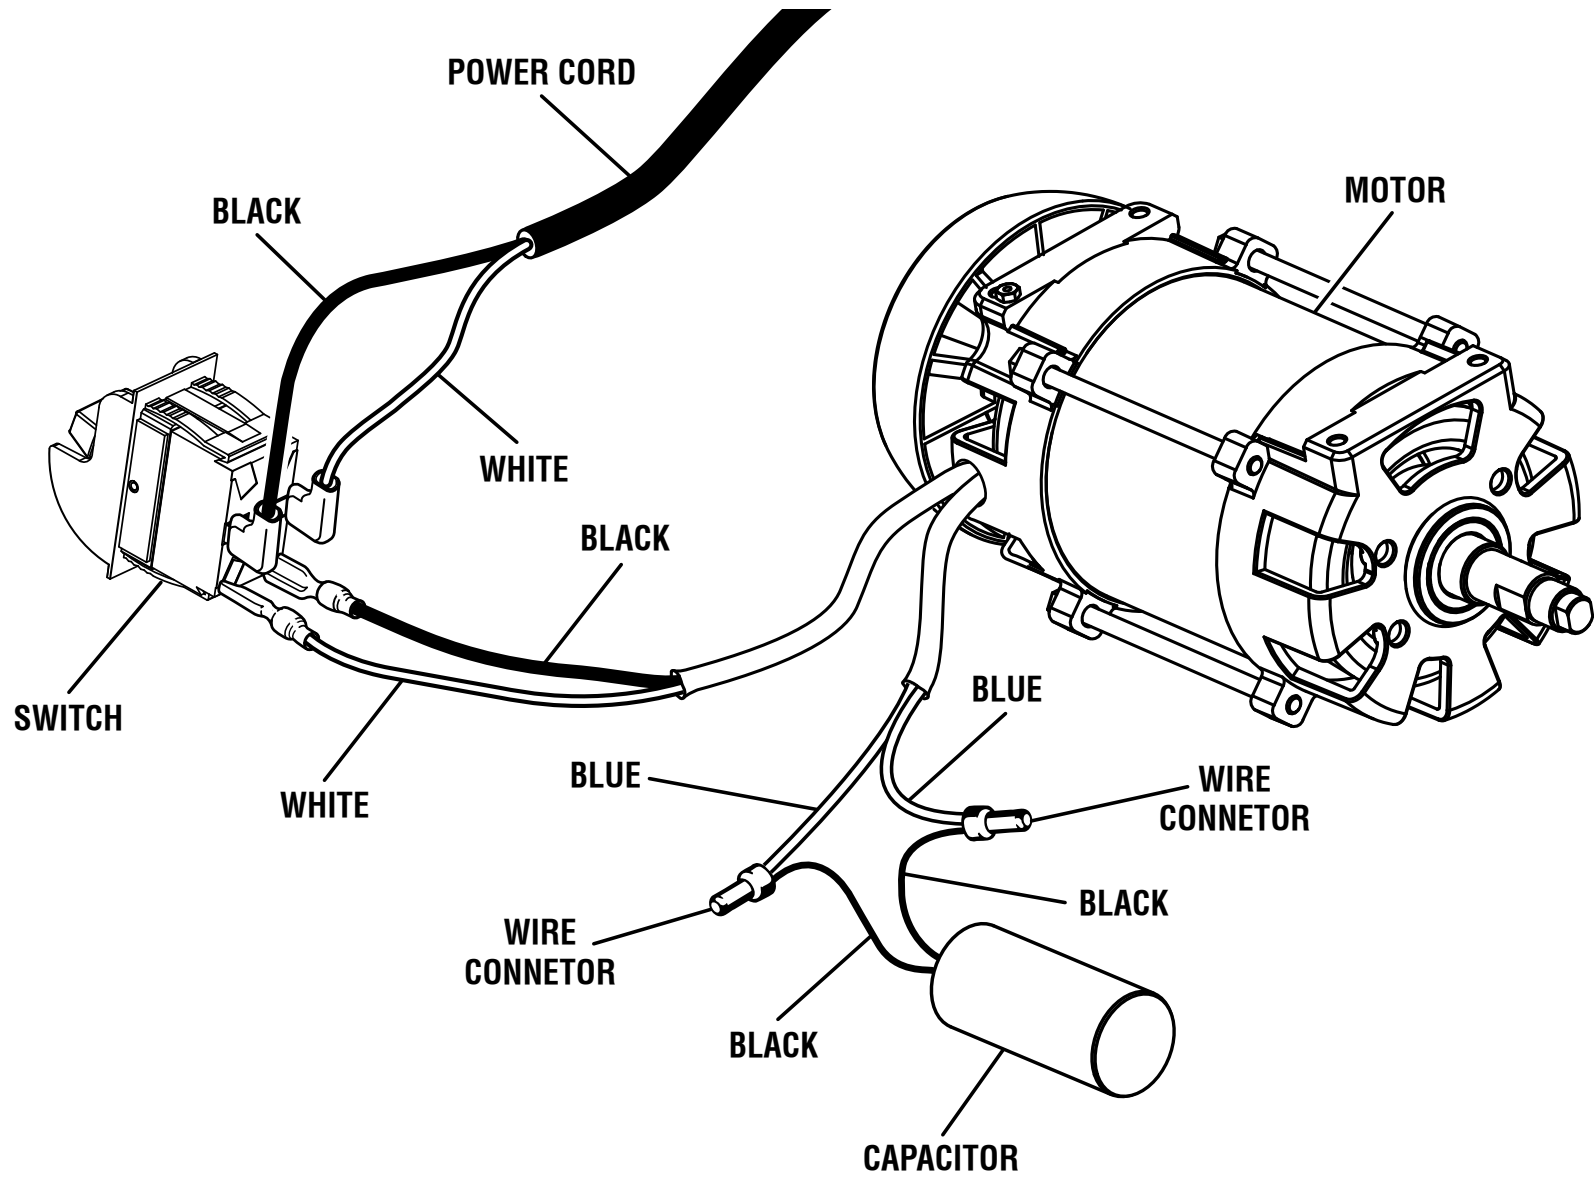

WIRING DIAGRAM