

EXPLODED VIEW AND PARTS LIST

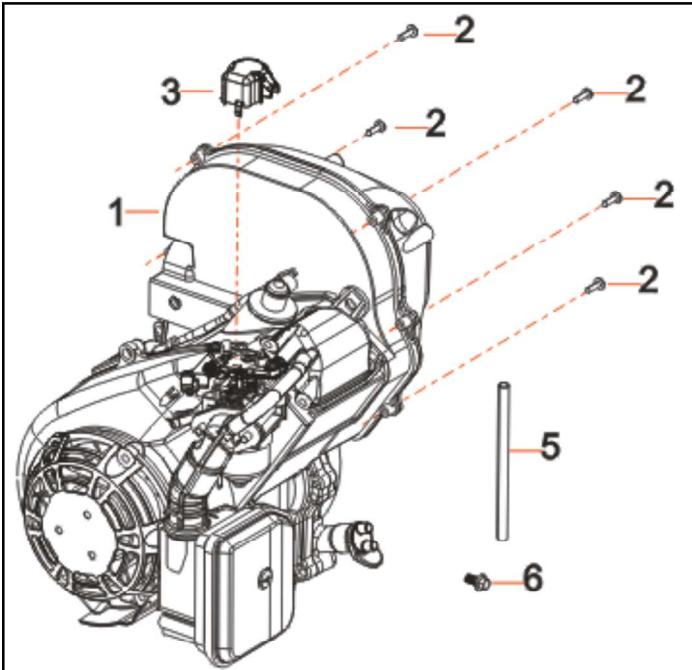


Fig. 1 - Engine

No.	Part Number	Description	Qty.
1-1	56200-0101	Engine	1
1-2	56200-0102	Screw	5
1-3	56200-0103	Cap	1
1-5	56200-0105	Fuel Tube	1
1-6	56200-0106	Bolt	1

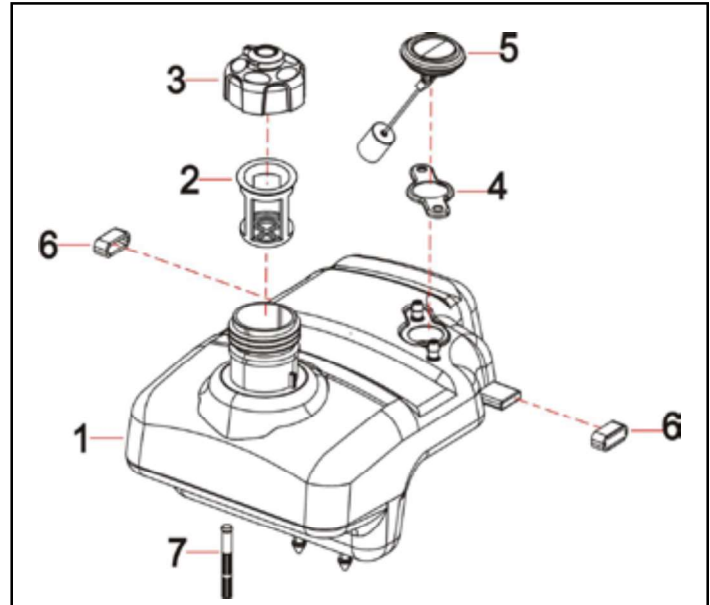


Fig. 2 - Fuel Tank

No.	Part Number	Description	Qty.
2-1	56200-0201	Fuel Tank	1
2-2	56200-0202	Fuel Filter	1
2-3	56200-0203	Fuel Tank Cover	1
2-4	56200-0204	Oil Seal Clamp	1
2-5	56200-0205	Fuel Gauge	1
2-6	56200-0206	Bush	2
2-7	56200-0207	Strainer Element	1
2-8	56200-0208	Fuel Line	1
2-9	56200-0209	Collar	1
2-10	56200-0210	Collar	1
2-11	56200-0211	Rubber Jacket	1

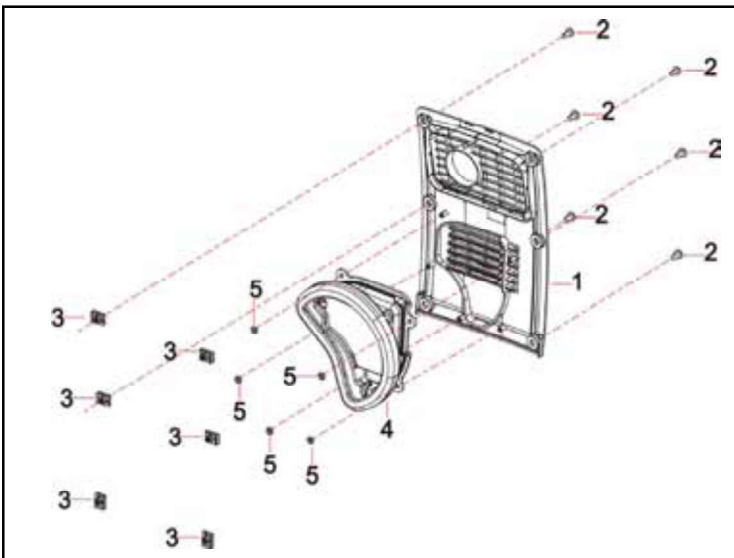


Fig. 3. Muffler Side Shield

No.	Part Number	Description	Qty.
3-1	56200-0301	Muffler Side Cover	1
3-2	56200-0302	Washer and Screw	6
3-3	56200-0303	Joint Rubber Cushion	1
3-4	56200-0304	Spring Clip	5

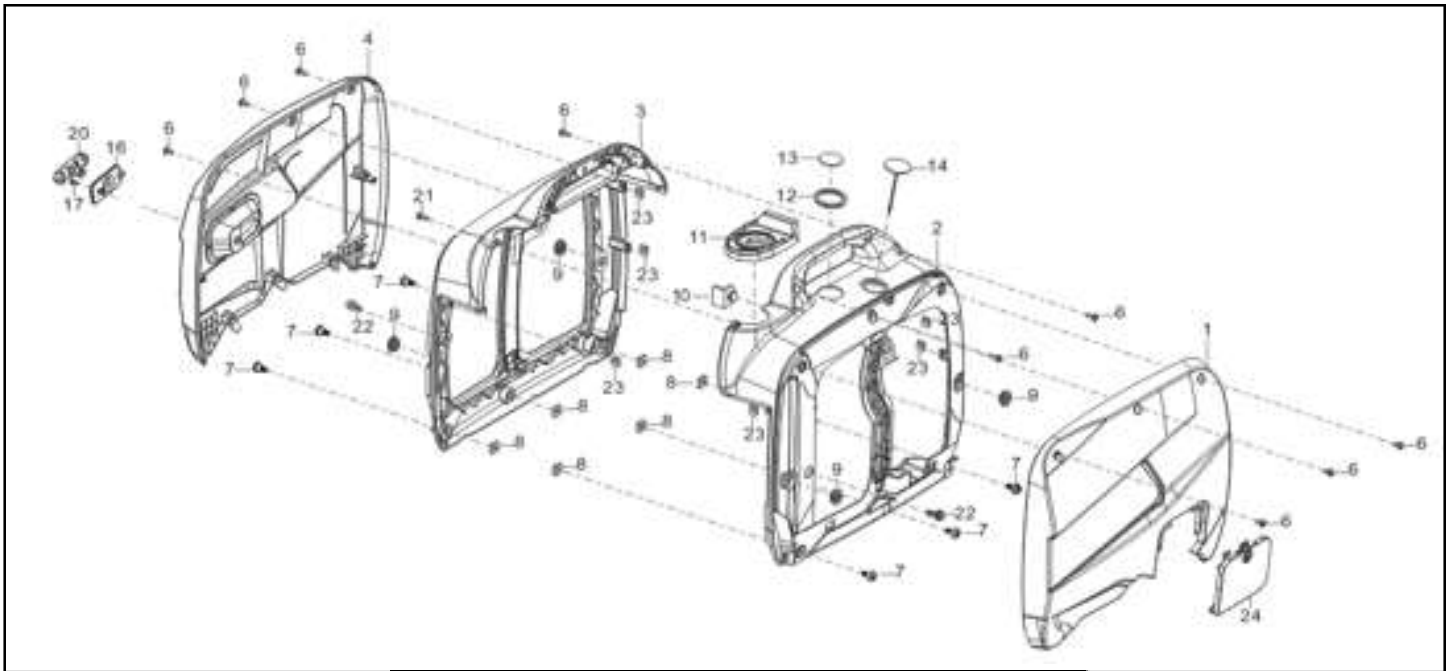


Fig. 4 - Outer Casing

No.	Part Number	Description	Qty.
4-1	56200-0401B	Right Cover	1
4-2	56200-0402	Right Shell	1
4-3	56200-0403	Left Shell	1
4-4	56200-0404B	Left Cover	1
4-6	56200-0406	Washer and Screw	9
4-7	56200-0407	Bolt	6
4-8	56200-0408	Stud	6
4-9	56200-0409	Fuel Tank Rubber Sleeve	4
4-10	56200-0410	Rubber Washer	1
4-11	56200-0411	Gas Tank Opening	1
4-12	56200-0412	Rubber Jacket	1
4-13	56200-0413	Fuel Gauge	1
4-14	56200-0414	Rubber Jacket	1
4-16	56200-0416B	Recoil Starter Guide	1
4-17	56200-0417	Washer and Screw	2
4-20	56200-0420	Starter Cable Handle	1
4-21	56200-0421B	Screw	1
4-22	56200-0422	Bolt	2
4-23	56200-0423	Nut	6
4-24	56200-0424B	Right Maintenance Door	1
4-25	56200-0425B	Bolt	1
4-26	56200-0426B	Lever	1
4-27	56200-0427B	Nut	1

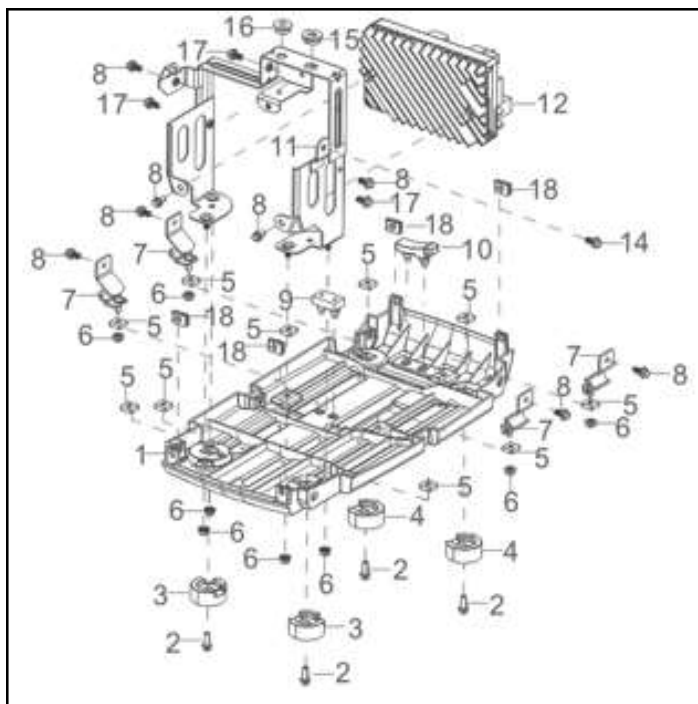


Fig. 5 - Inverter Assembly

No.	Part Number	Description	Qty.
5-1	56200-0501	Bottom Plate	1
5-2	56200-0502	Bolt	4
5-3	56200-0503	Frame Seat	2
5-4	56200-0504	Frame Seat	2
5-5	56200-0505	Nut	10
5-6	56200-0506	Nut	8
5-7	56200-0507	Engine Frame Cushion	4
5-8	56200-0508	Bolt	8
5-9	56200-0509	Bracket Cushion Rubber Bracket	1
5-10	56200-0510	Bracket Cushion Rubber Bracket	1
5-11	56200-0511	Inverter Support	1
5-12	56200-0512B	Inverter	1
5-15	56200-0515	Fuel Tank Rubber Sleeve	1
5-16	56200-0516	Fuel Tank Rubber Sleeve	1
5-17	56200-0517	Bolt	3
5-18	56200-0518	Nut	4

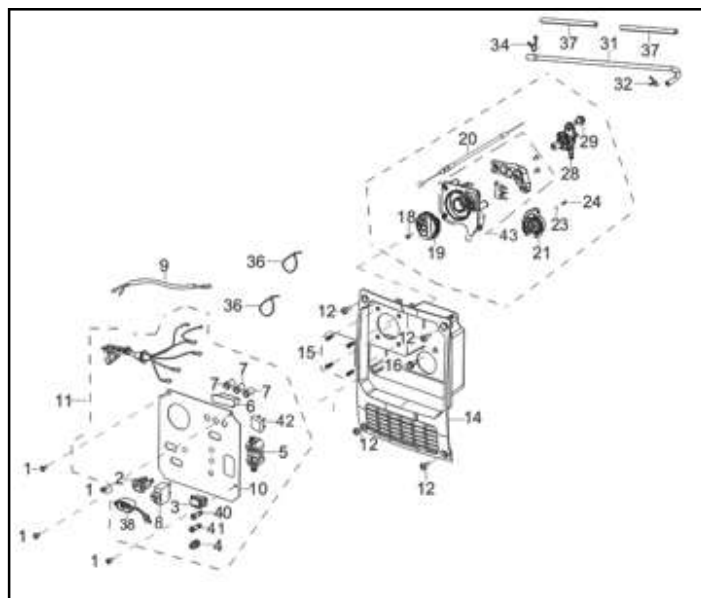


Fig. 6 - Control Panel

No.	Part Number	Description	Qty.
6-1	56200-0601B	Screw	4
6-2	56200-0602	DC Outlet	1
6-3	56200-0603	Idle Switch	1
6-4	56200-0604	Grounding Terminal	1
6-5	56200-0605	120V Duplex Receptacle	1
6-6	56200-0606B	Overload Indicator	1
6-7	56200-0607B	Output Indicator	3
6-8	56200-0608	Circuit Breaker 20A 1 Pole	1
6-9	56200-0609B	Control Panel Wiring	1
6-10	56200-0610B	Control Panel	1
6-11	56200-0611B	Control Panel Assembly	1
6-12	56200-0612	Washer and Screw	4
6-14	56200-0614	Panel Seat	1
6-15	56200-0615	Screw	4
6-16	56200-0617	Bolt	1
6-18	56200-0618	Screw	1
6-19	56200-0619	Knob	1
6-20	56200-0620	Choke Handle Assembly	1
6-21	56200-0621B	Cover Plate	1
6-23	56200-0623	Steel Ball	1
6-24	56200-0624B	Stopper Adjusting Spring	1
6-28	56200-0628	Fuel Cock Assembly	1
6-29	56200-0629	Bolt	1
6-31	56200-0631	Fuel Tube	1
6-32	56200-0632	Collar	2
6-34	56200-0634	Collar	1
6-36	56200-0636	Band	2
6-37	56200-0637	Rubber Jacket	3
6-38	56200-0638B	USB Plug	1
6-40	56200-0640	Parallel Kit Socket	1
6-41	56200-0641	Parallel Kit Socket	1
6-42	56200-0642B	Rectifier Bridge	1
6-43	56200-0643B	Switch Assembly	1



Fig. 8 - Cylinder Head/Spark Plug

Fig. 9 - Crankcase & Cover Assembly

24

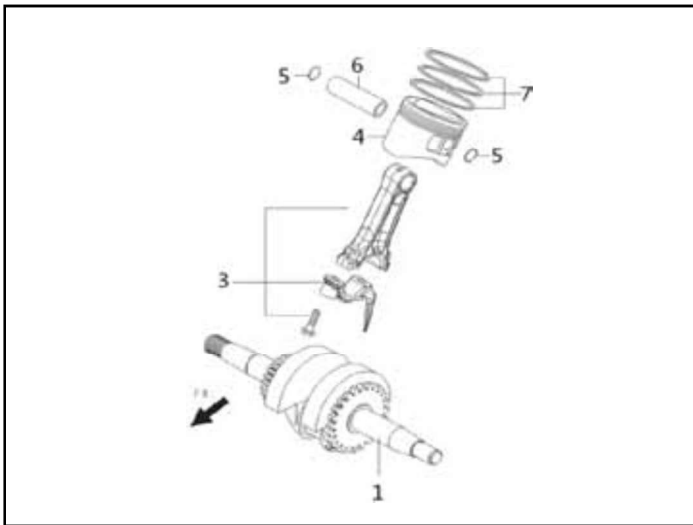


Fig. 10 - Piston Ring Set & Crankshaft

No.	Part Number	Description	Qty.
10-1	56200-1001	Crankshaft	1
10-3	56200-1002	Connecting Rod	1
10-4	56200-1003	Piston	1
10-5	56200-1004	Piston Pin Clip	2
10-6	56200-1005	Piston Pin Clip	1
10-7	56200-1007	Piston Ring Assembly	1

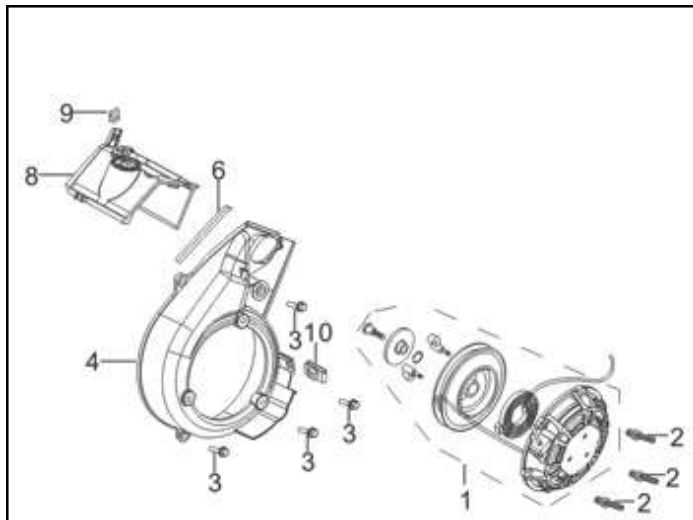


Fig. 12 - Recoil Starter

No.	Part Number	Description	Qty.
12-1	56200-1201	Recoil Starter Assembly	1
12-2	56200-1202B	Bolt	3
12-3	56200-1203	Bolt	4
12-4	56200-1204	Shroud	1
12-6	56200-1206	Shroud Seal Strip	1
12-8	56200-1208	Cylinder Head Shroud Plate	1
12-9	56200-1209B	Stop Plate	1
12-10	56200-1210	Nut	1

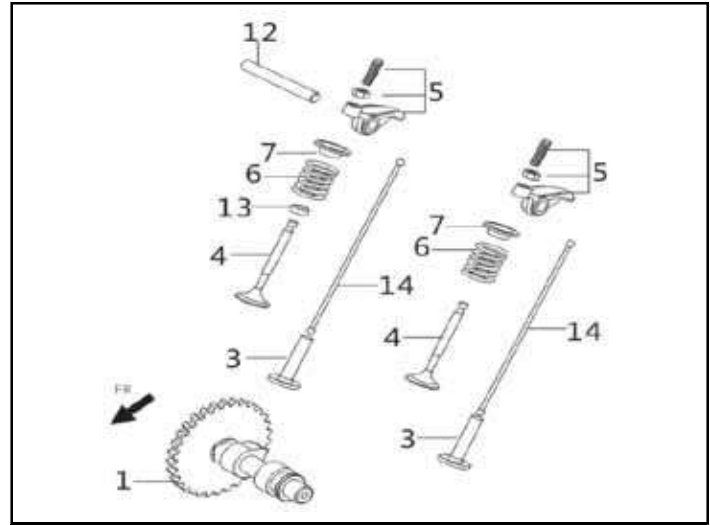


Fig. 11 - Camshaft Assembly & Valve Train

No.	Part Number	Description	Qty.
11-1	56200-1101	Camshaft Assembly	1
11-3	56200-1103	Valve Tappet	2
11-4	56200-1104	Valve Tappet	1
11-5	56200-1105	Valve Rocker Assembly	2
11-6	56200-1106	Valve Spring	2
11-7	56200-1107	Valve Spring Seat	2
11-12	56200-1112	Valve Rocker Shaft	1
11-13	56200-1113	Seal Guide	1
11-14	56200-1114	Valve Lifter	2

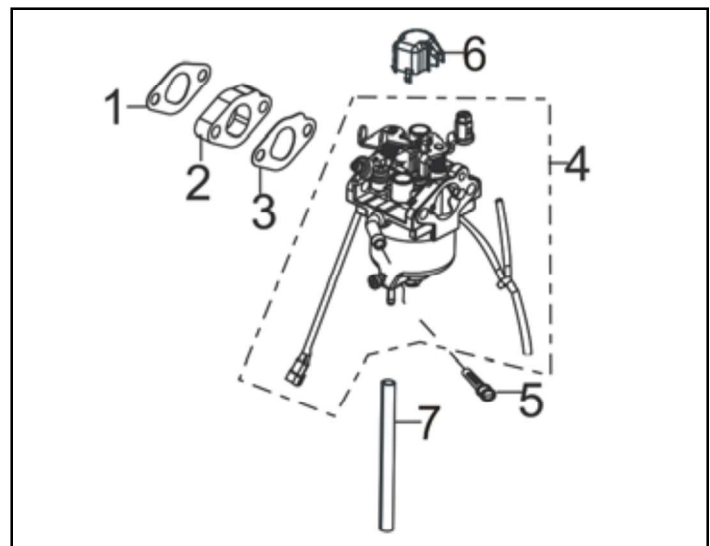


Fig. 13 - Carburetor Assembly

No.	Part Number	Description	Qty.
13-1	56200-1301	Carburetor Gasket	1
13-2	56200-1302	Carburetor Insulator Plate	1
13-3	56200-1303	Insulator Gasket	1
13-4	56200-1304B	Carburetor	1
13-5	56200-1305	Fuel Strainer	1
13-6	56200-1306B	Cap	1
13-7	56200-1307B	Fuel Line	1

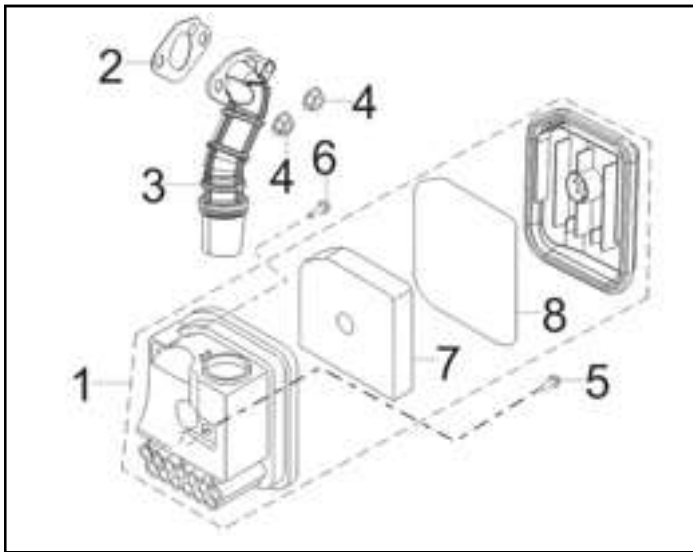


Fig. 14 - Air Cleaner

No.	Part Number	Description	Qty.
14-1	56200-1401	Air Cleaner	1
14-2	56200-1402	Air Cleaner Gasket	1
14-3	56200-1403	Air Cleaner Intake Duct	1
14-4	56200-1404	Nut	2
14-5	56200-1405	Stud	1
14-6	56200-1406	Stud	1
14-7	56200-1407B	Air Cleaner Element	1
14-8	56200-1408B	Seal Ring	1

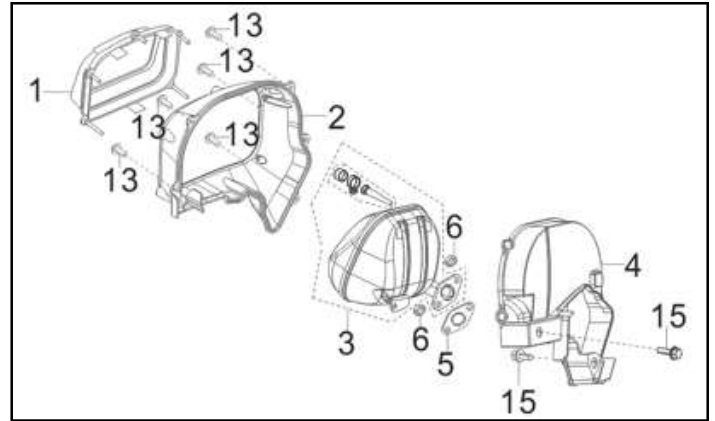


Fig. 15 - Muffler Assembly

No.	Part Number	Description	Qty.
15-1	56200-1501	Muffler Side Cover	1
15-2	56200-1502	Muffler Shroud	1
15-3	56200-1503	Muffler Body	1
15-4	56200-1504	Muffler Shield	1
15-5	56200-1505	Exhaust Gasket	1
15-6	56200-1506	Nut	2
15-13	56200-1513	Screw	5
15-15	56200-1515B	Bolt	2

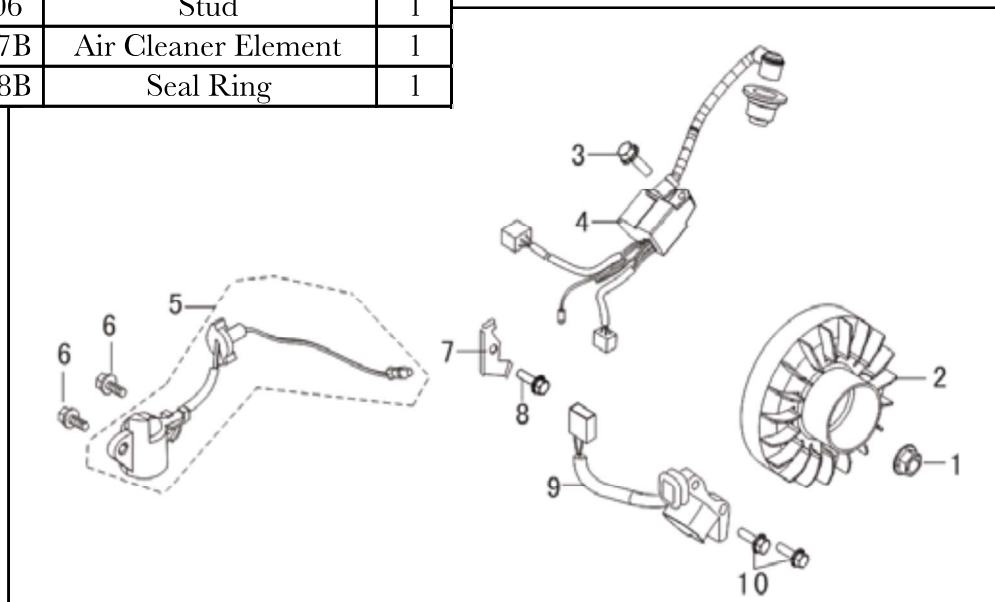


Fig. 16 - Flywheel & Ignition Coil

No.	Part Number	Description	Qty.
16-1	56200-1601	Flywheel Nut	1
16-2	56200-1602	Flywheel Assembly	1
16-3	56200-1603	Bolt	1
16-4	56200-1604B	Igniter	1
16-5	56200-1605	Engine Oil Sensor	1
16-6	56200-1606	Bolt	2
16-7	56200-1607	Clamp	1
16-8	56200-1608	Bolt	1
16-9	56200-1609	Ignition Coil	1
16-10	56200-1610	Bolt	2