




Item # 1002 554 971
Model # FBS80022

USE AND CARE GUIDE

BEACON PARK CHAISE LOUNGE

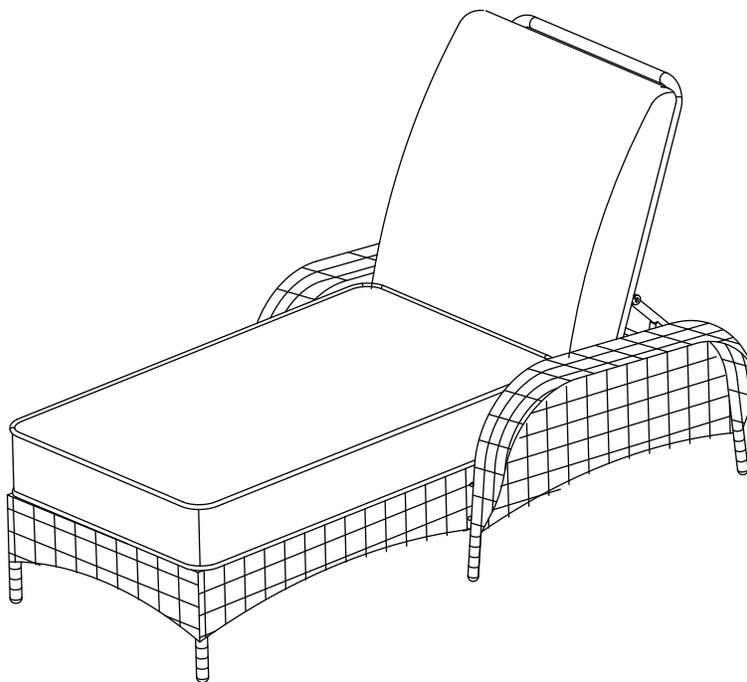

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this chaise. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2	Pre-Assembly	3
Safety Information	2	Planning Assembly	3
Product Caution	2	Hardware Included	3
Safety Warnings	2	Package Contents	4
Warranty	2	Assembly	5
What is Covered	2	Care and Cleaning	7
What is Not Covered	2		

Safety Information

PRODUCT CAUTION

This chaise was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this chaise when any formidable / severe weather is approaching. Do not locate this product near open flames. Do not use this product as a support. Do not shake, lean or climb on the product. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

SAFETY WARNINGS

 **WARNING:** Please keep children out of the assembly area before assembly.

 **WARNING:** This chaise unit is heavy, and may require two adults for safe assembly.

 **WARNING:** Weight limit for the chaise is 250 lbs (113.39 kg).

 **CAUTION:** Do not locate the product near any heat source.

Warranty

2 YEAR FRAME AND 2 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frames to be free of manufacturing defects to the original purchaser for two years, and a two year limited warranty for the fabric.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



AA



BB



CC




DD

Part	Description	Quantity
AA	M6x20 combination bolt	2+1
BB	M6x50 combination bolt	6+1
CC	Plastic washer	4
DD	Hex wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS

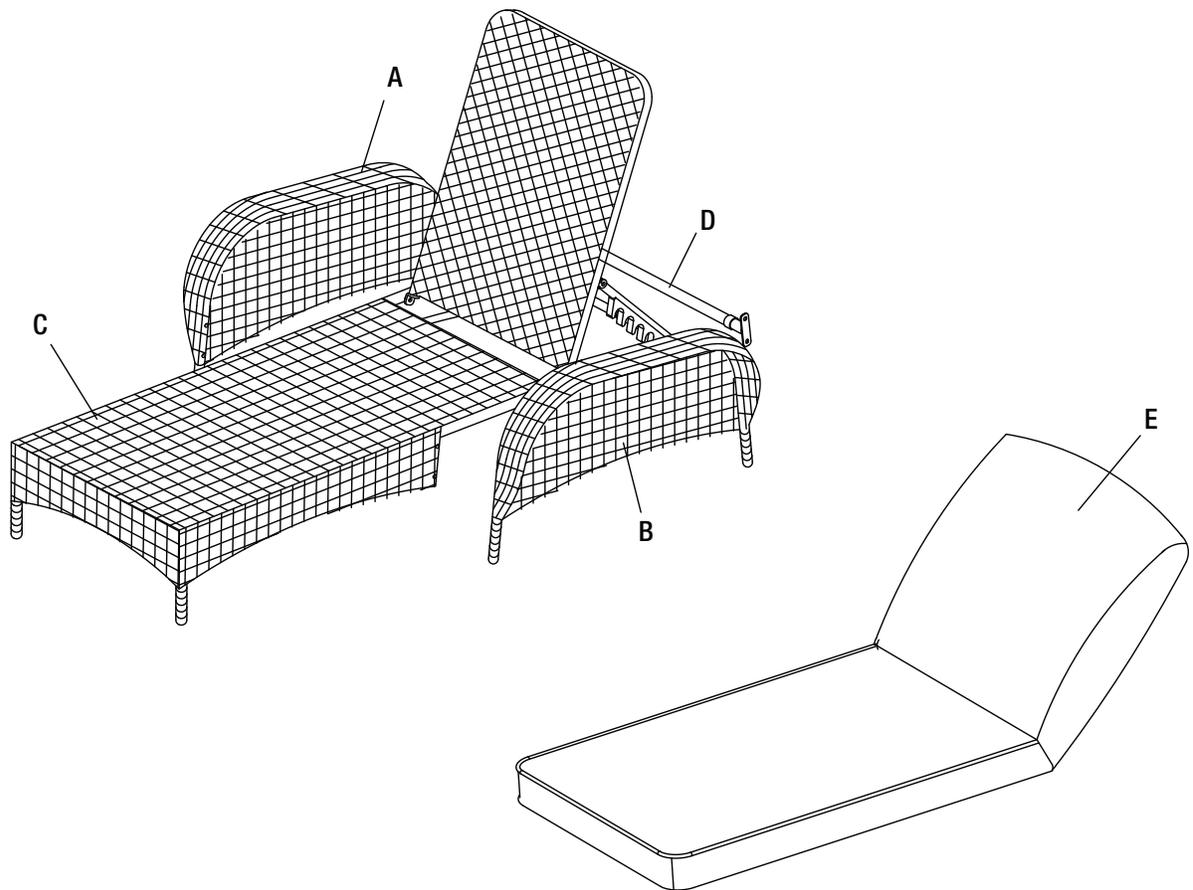


Part	Description	Quantity
A	Right arm	1
B	Left arm	1
C	Chaise seat and back	1
D	Connection bar	1
E	Cushion	1

Assembly

1 CONNECTING THE CHAISE SEAT AND BACK AND THE CONNECTION BAR TO THE LEFT ARM


- Place the left arm (B) on a soft surface, and attach the chaise seat and back (C) to the left arm (B) using M6x50 combination bolts (BB) and plastic washers (CC), as shown below.
- Attach the connection bar (D) to the left arm (B) using M6x50 combination bolts (BB) and M6x20 combination bolts (AA).
- Do not fully tighten the bolts at this step.

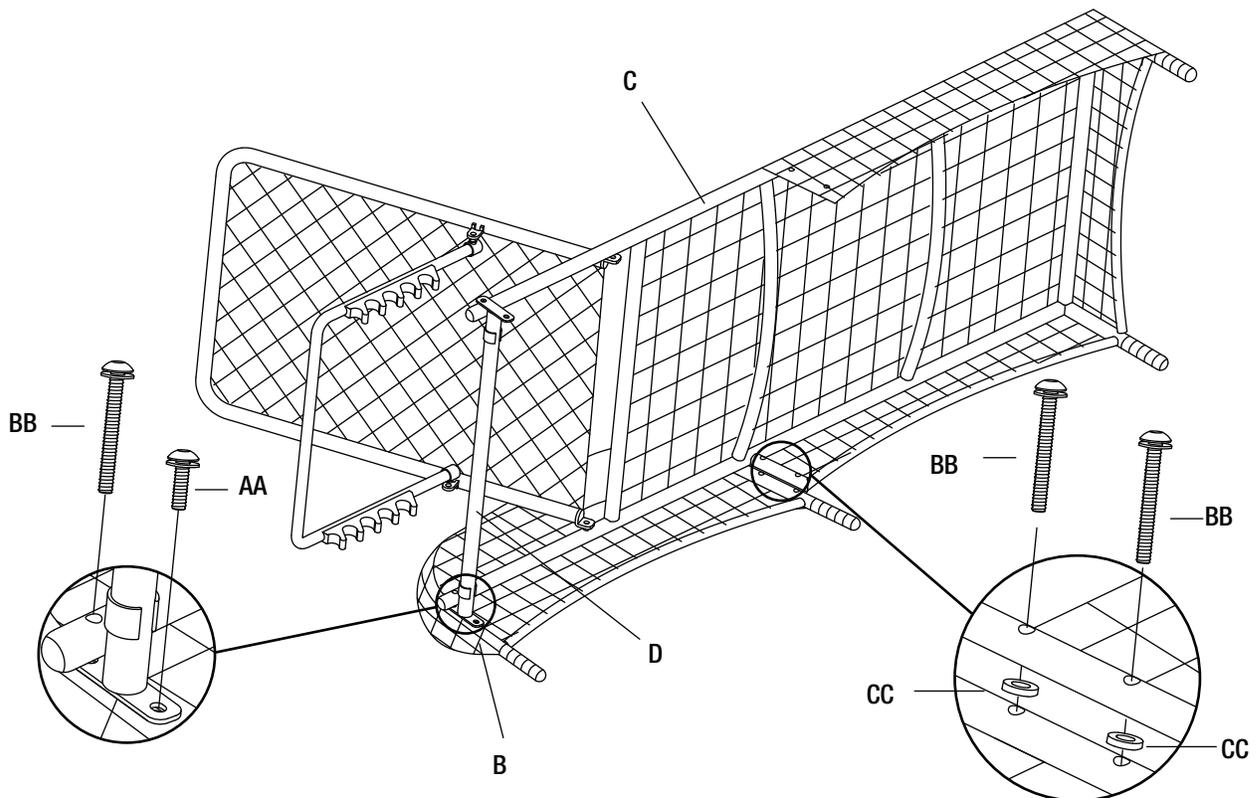

Assembly (continued)

2 CONNECTING THE CHAISE SEAT AND BACK AND THE CONNECTION BAR TO THE RIGHT ARM


- Attach the chaise seat and back (C) to the right arm (A) using the M6x50 combination bolts (BB) and plastic washers (CC), as shown below.
- Attach the connection bar (D) to the right arm (A) using M6x50 combination bolts (BB) and M6x20 combination bolts (AA).
- Do not fully tighten all the bolts at this step.

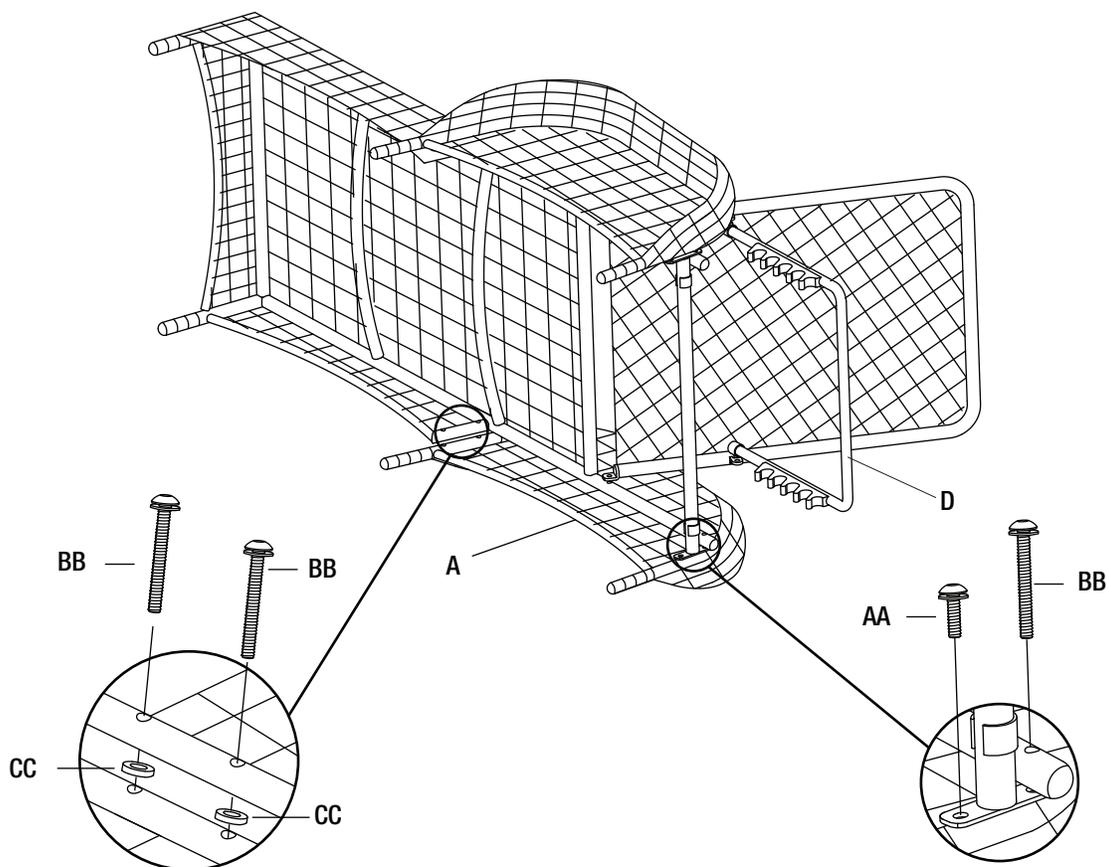

Assembly (continued)

3 TIGHTENING THE BOLTS

- Once all of the bolts are in place, fully tighten the bolts.
- Turn the chaise right side up.
- Ensure all connections are secure before use.
- Place the cushion (E) to finish the assembly of the chaise.

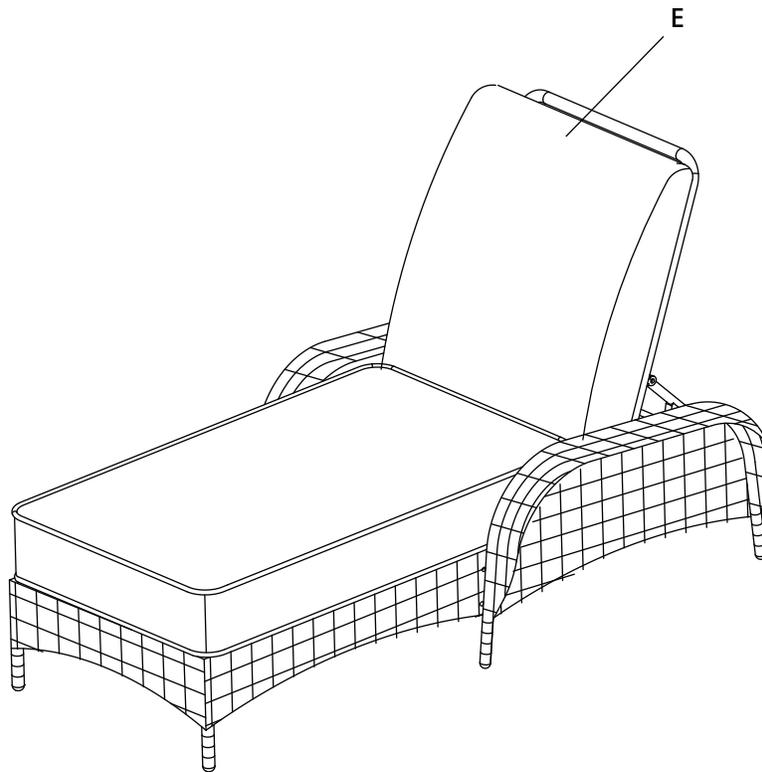

Care and Cleaning

- For best results, clean the chaise with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- Store the chaise in a dry, sheltered place when not in use.
- Keep the chaise away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.