# CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.


# NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

Part	List	and	Hardwa	are List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Back panel		1X
В	Front papel		1X
С	Leg frame		2X
D	Seat frame		1X
E	Bottom frame		1X
H1	Wheel-1	The second secon	2X
H2	Wheel-2	Ś	2X
H3	Screw -1	() () () () () () () () () () () () () (	8X
H4	Hinge		2X
H5	Screw -2	M4x15	17X
H6	Screw- 3	(7) M4x20	16X
H7	Allen key	5 mm	1X

# SAFAVIEH OUTDOOR

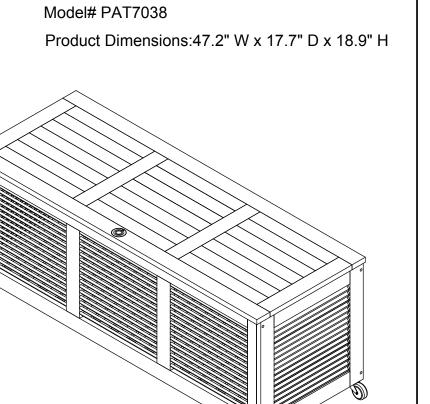


#### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 40 minutes.

Tools Required for Assembly (included): Allen Key

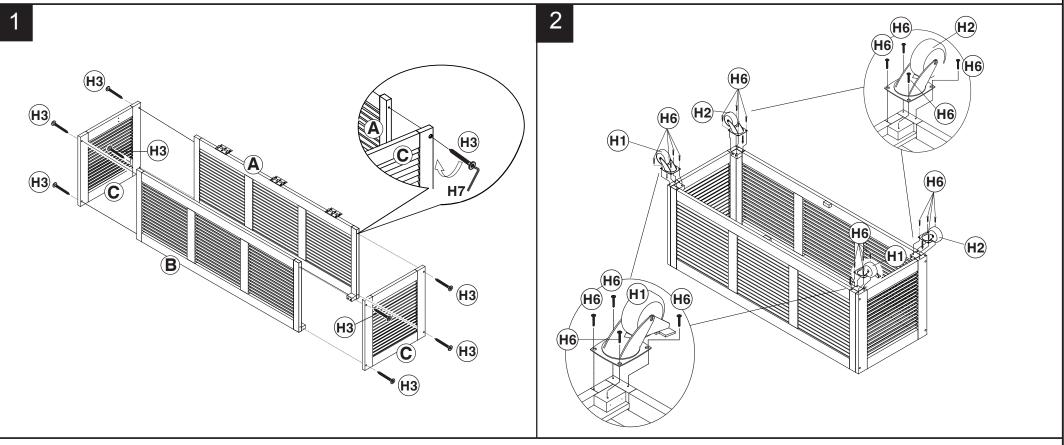

# Step 1

Attach leg frame (C) to font panel (B) and back panel (A) by using screw (H3), tighten with allen (H7)

## Step 2

Attach Wheel-1(H1) to font panel (B) and leg frame (C) by using screw (H6). Attach Wheel-2(H2) to back panel (A) and leg frame (C) by using screw (H6).

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 40 minutes.

Tools Required for Assembly (included): Allen Key

