


Let's Get Started

Setting up the Camera's Home/Default Point(s)

- 1 Install the Door/Window sensors as previously shown.
- 2 To set the camera's Home/Default Point: Position the camera where you want for the Home position.
- 3 Tap the PTZ icon, then **1 Save**. You can add up to two more pre-programmed points.

Activate the Alarm

- 1 Activate (Arm) the alarm when you leave. In the Live View, tap the switch, enter the Admin password (the default password is 123456), then tap **OK**.
- 2 The unit will now be armed. If the sensor trips, the camera will sound the alarm, start recording, and automatically move towards the sensor and send you a push notification (depending on the App settings).

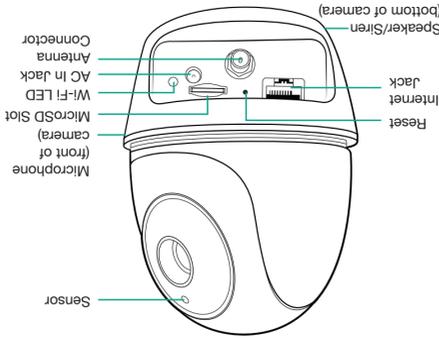

Indoor Camera

Model AWF33-S2

IN THE BOX

- Indoor camera
- AC power adapter
- Sticky Pad Set x 2
- Door/Window Sensor
- Antenna
- 8GB MicroSD Card
- Camera Bracket
- Quick Start Guide



Cloud: When an SD card is inserted and the Cloud option is activated (in Advanced Settings), recorded videos will automatically be transferred onto the cloud. (i.e. Google Drive)

NOTE: Avoid installing in a location which requires the wireless signal to pass through cement, concrete and metal structures. This will reduce the transmission range.

INSTALLATION + SETUP

CAMERA INSTALLATION

- 1 Screw the Antenna clockwise into the rear of the camera.
- 2 Select a location on a door or window. The large section of the sensor should be fixed on the immovable frame of the door/window. Use the supplied stickers. Align the small piece to the large one. Fix the small piece on the movable part of the door/window frame.

NOTE: Avoid pointing a camera directly at any bushes or tree branches or objects that may naturally move due to winds.

- 3 Connect the small end of the AC adapter to the camera's AC in jack.
- 4 Plug into electrical outlet when ready to install App.

- Recommendations for best system performance:**
- **iOS 7.0** or above.
 - **Android:** Android™ smartphone or tablet (version 4.3x or above).
 - **Storage:** Class 10 MicroSD memory card (up to 128GB).
 - **Bandwidth:** 512Kbps or above upload/download speed suggested.

ALC SIGHTHD

Remote Monitoring Anytime from Anywhere

Wireless Made Simple.

1080p Indoor Pan/Tilt Security Wi-Fi Camera with Siren



Model AWF33-S2

QUICK START GUIDE

REMOTE VIEWING

FREE APP DOWNLOAD

Available on the **App Store** and **Google play**

DEVICE SETUP

- 1 From your smart device, DOWNLOAD and INSTALL the free **ALC SIGHTHD App**.
- 2 Plug camera into an electrical outlet (allow the camera up to 90 seconds to boot up).
- 3 On your device, open the Settings App. Tap Wi-Fi and under Choose A Network, select the HD-XXXXXX Network (X represents the numbers located on the DID barcode sticker on the bottom of your camera).
- 4 If asked for a password, enter, "12345678". Tap Join/Connect.
- 5 Now Launch the ALC SIGHTHD App and the Setup Wizard will appear.
- 6 Tap **+** to start the Wizard and select WiFi Cameras.
- 7 **iOS Only:** Once the screen indicates the camera is connected, tap Live View.
- 8 **iOS Only:** Once the camera is found, the screen will show a Live View briefly before moving to a setup screen.
- 9 At the next screen enter a new password/security code and remember it or write it down. Tap Wi-Fi Setting or OK.
- 10 Select your home network from the menu, and then enter your home network's Wireless Password. Tap OK.
- 11 **Android Only:** Tap Live View.
- 12 Tap the Play icon for live video.

NOTE: Screen shots and icons may vary due to continuous updates to App and software development.



LIVE VIEWING

- LIVE VIEW**
- 1 **Android:** Tap the Play icon. **Apple:** Tap on the preview picture.
- PINCH AND ZOOM:** To zoom in or out, use the simple pinch and zoom gesture with this app.
- PAN AND TILT:** To move the camera, simply slide your finger across the Android or Apple Device's screen up and down or from side to side.
- FEATURES**
- Tap to Snapshot screen images in Live View. Images automatically save to smartphone's camera roll or gallery.
 - Tap to RECORD. Recordings save to MicroSD card (pre-installed) and the Cloud if it was set up.
 - To speak through the camera's speaker, using your Android or Apple device, tap and hold this icon and speak; the voice will be heard through the camera's speaker.
 - Tap to turn volume On or Off in the Live View mode.
 - Tap to RETURN to the main page.
 - Tap to Set the Record Point or to Go to the Record Point.

LIVE VIEW RECORDING on MicroSD CARD*

- 1 Insert a MicroSD Card into the MicroSD Card Slot. You can also record/upload files automatically onto the Cloud, if set up.
- 2 Manually RECORD video from Live View by tapping Record icon. The App will record for one minute.

PLAYBACK

- 1 Tap **Edit Setting**, tap **Setting** and then **EVENT** icon.
- 2 Select the Start and Stop date and time on the Select Event Filter and tap **OK**.
- 3 Tap the FILE that you want to playback from the list.

Motion Recording

If set to Software Sensitivity when motion is detected on the video camera, the camera will automatically record for one minute and then stop recording. To change the DETECT MODE, go to **Edit Setting**, tap **Setting** and then tap **Advanced**. The Advanced Settings will ask for the admin password; default password is 123456. Select Sensitivity Setting to change.

ADVANCED SETTINGS

- On the Home Page (not Live View) Tap **EDIT SETTINGS** at the bottom of the screen, then tap **ADVANCED** (the default password is 123456) to see the Advanced Feature options:
- Sensor Setup
 - Video Setting
 - Cloud Setting
 - Sensitivity Setting
 - SDCard Setting
 - And much more

SENSOR SETUP

- 1 In Advanced Settings, tap on **Sensor Setup**.
- 2 Select one of the Sensors in the list.
- 3 Give the Sensor a name such as Front door.
- 4 Tap on the **Camera Pan** control.
- 5 Swipe on the video to point the camera in the direction of where the Sensor will be. Tap on **Save** when done.
- 6 Attach the Sensor to your Door or Window and remove the plastic tab.
- 7 To customize your Siren, you can change the Siren Volume and Duration in the Advanced Settings.

NOTE: Do not submerge camera in water. **STRANGULATION HAZARD:** Infants have STRANGLED in power cords. Keep power cords more than 3 feet away from cribs. When using your equipment, always follow basic safety precautions to reduce the risk of fire, electric shock and injury to persons. Illustrations are for reference only. Actual product specifications may vary. For additional precautions and product information, please see owner's manual at www.ALCWireless.com/support.

For detailed installation and setup, please refer to the Model AWF33-S2 complete User's Guide available on our website: www.ALCWireless.com/support



SCAN TO VIEW COMPLETE USER'S GUIDE