


Item # 000 000 Model # FRS60490L

USE AND CARE GUIDE

BROADVIEW LOVESEAT

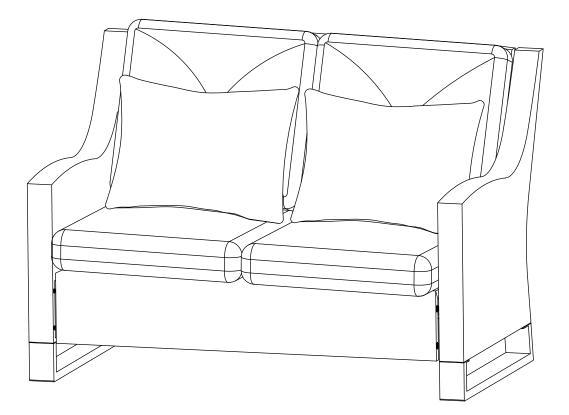

Questions, problems, missing parts? Before returning to the store call Home Decorators Collection Customer Service. 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2
Safety Information	
Product Caution	2
Safety Warnings	2
Warranty	2
What is Covered	2
What is Not Covered	2

Pre-Assembly	3
Planning Assembly	
Hardware Included	3
Package Contents	4
Assembly	5
Care and Cleaning	8

Safety Information

PRODUCT CAUTION

This loveseat was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this loveseat when any formidable / severe weather is approaching. Do not locate the product near open flame. Do not use the product as a support. Do not shake, lean or climb on product. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

SAFETY WARNINGS



WARNING: Weight limit for the loveseat is 250lbs (113.39 Kg) for each seat.



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



CAUTION: Do not locate the product near any heat source.



CAUTION: Do not locate the product near any heat source.

Warranty

2 YEAR FRAME AND 2 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frames to be free of manufacturing defects to the original purchaser for two years, and a two year limited warranty for the fabric.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-800-998-7021 or visit www.homedepot.com/homedecorators.

Pre-Assembly

PLANNING ASSEMBLY


Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.




NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED

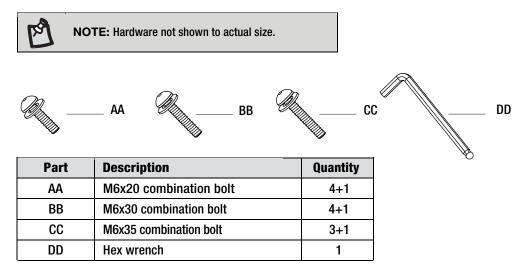



Pre-Assembly (continued)

  PACKAGE CONTENTS

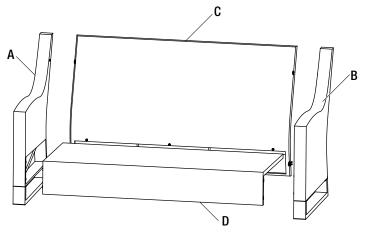

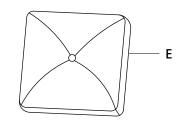





Part	Description	Quantity
Α	Right arm	1
В	Left arm	1
С	Backrest	1
D	Seat	1
E	Back cushion	2
F	Seat cushion	2
G	Pillow	2

Assembly




Attaching the right arm to the backrest

□ Attach the right arm (A) to the backrest (C) using M6x20 combination bolts (AA).



NOTE: Loosely tighten all bolts using the hex wrench (BB).

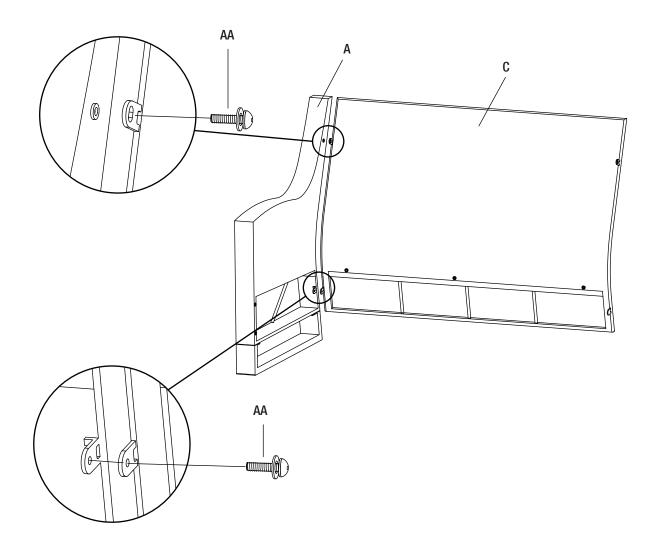


Assembly (continued)

 $\mathbf{2}$ Attaching the left arm to the backrest

□ Attach the left arm (B) to the backrest (C) using M6x20 combination bolts (AA).

NOTE: Loosely tighten all bolts using the hex wrench (DD).

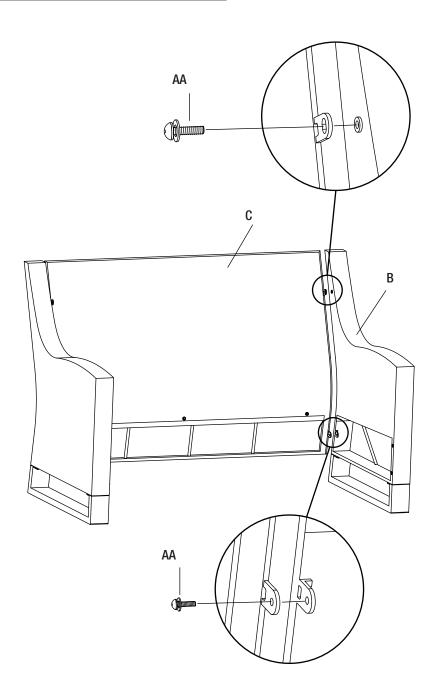


Assembly (continued)

${f R}$ Attaching the seat to the backrest and the chair arms

- □ Attach the seat (D) to the backrest (C) using M6x35 combination bolts (CC).
- Attach the seat (D) to the right arm (A) and left arm (B) using M6x30 combination bolts (BB).




NOTE: Loosely tighten all bolts using the hex wrench (DD).

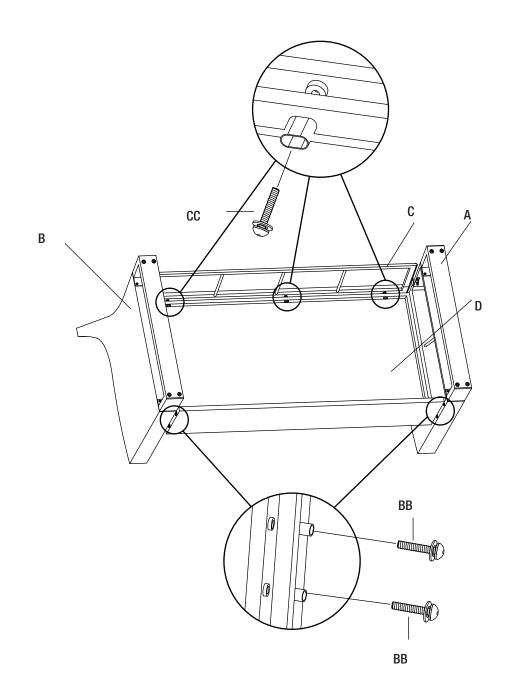

Assembly (continued)

4 Completing the assembly

- Once all bolts are in place, fully tighten all bolts.
- □ Turn the loveseat right side up.
- □ Ensure all connections are secure before use.
- Place the back cushions (E), the seat cushions (F) and the pillows (G) to finish the assembly of the loveseat.

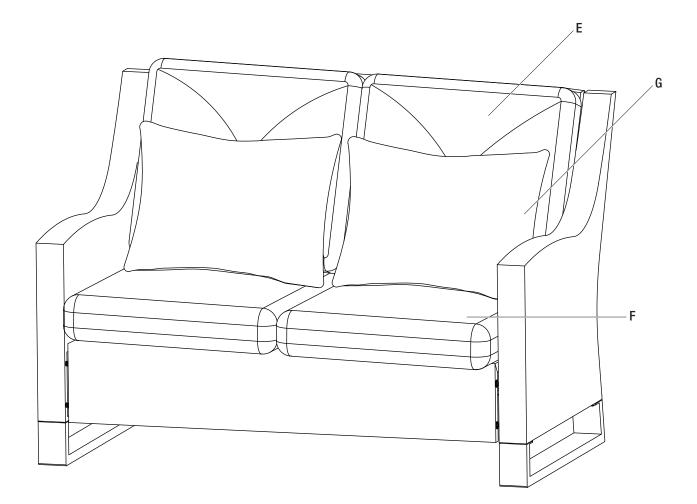

Care and Cleaning

- For best results, clean the frame and fabric with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- □ Store the loveseat in a dry, sheltered place when not in use.
- [□] Keep the loveseat away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store, call Home Decorators Colletion Customer Service. 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.