
 
REMOTE FUNCTIONS AND SET UP INSTRUCTIONS:

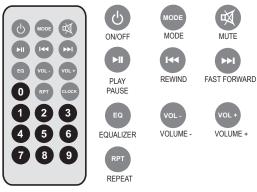

NOTE: Remote will not work unless doors are open.



BLUETOOTH PLAYER

- 1. Press ob to change to bluetooth player.
- 2. You will hear a startup tone when you are in the bluetooth mode.
- 3. Make sure the bluetooth is ON on your phone. If it is not, the player cannot detect the your phone.
- 4. Go to the bluetooth menu on your phone. "ZTV-CT02EA" will show up to pair with.
- 5. You will hear another tone when the pairing is complete.

NOTE: If your phone is not a smart phone, you will need to enter the password "0000" to connect.

SD CARD AND USB

1. Press mode and insert USB or SD Card.

TO SET CLOCK

- 1. Make sure the knob is powered on.
- 2. Press until you see "00:00".
- 3. Hold for two seconds until the hours start to blink.
- 4. Press or by to adjust the hour.
- 5. Hold again for two seconds until the minutes start to blink.
- 6. Press or by to adjust the minutes.
- 7. Once the time has stopped blinking, the time is saved.

NOTE: If you power off with the knob, the time will reset.

FM RADIO

- 1. Hold for two seconds and radio will search for working FM stations in your area.
- 2. The radio will automatically save working FM stations as presets.
- 3. Press to choose last station.
- 4. Press **•** to choose next station.
- 5. You can also type in any radio station using the numbers on the remote.





FEATURES AT A GLACE:

















TOOLS AND FITTINGS (not supplied with the product):

- Drill
- Screwdriver
- Leveling Ruler

CARE AND MAINTENANCE:

1. Cabinet should always be cleaned with a soft, damp cloth. All parts must be wiped dry after use or cleaning. A little mild liquid soap can be added to lukewarm water to remove stubborn stains.


⚠ Never use acetic or citric, scrubbing powder or solvent-base cleaners or other chemicals.


2. Mirrors should only be cleaned with a damp, soft cloth. Do not use commercial glass-cleaing agents. The mirror edges should be wiped dry only.

NOTE: We reserve the right to change the features, packing and fittings of the product without notice.


INSTALLATION INSTRUCTIONS


NOTE: Contact an electrician for wiring of this product.

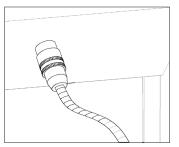

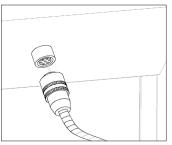


 Prior to wiring installation, disconnect/unplug the detogger cable. Reconnect after installation. Cable is reconnected when you hear a tone.

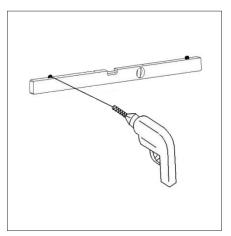







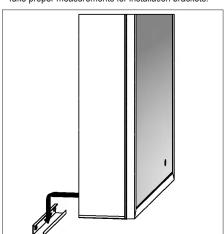

4. Place cabinet on bracket for proper seating and secure placement.

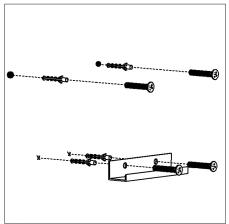

2. Screw bracket into wall.

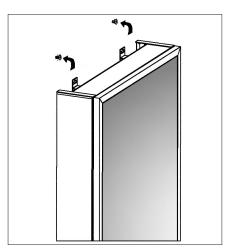

3. Places screws through the top bracket and tighten securely.

PRODUCT FEATURES DIAGRAM





- 1. Speaker
- 2. Electrical outlet
- 3. Radio
- 4. Defogger Switch
- 5. Lighting Button