

MC Smart Controls

Full Product Manual FL-1000

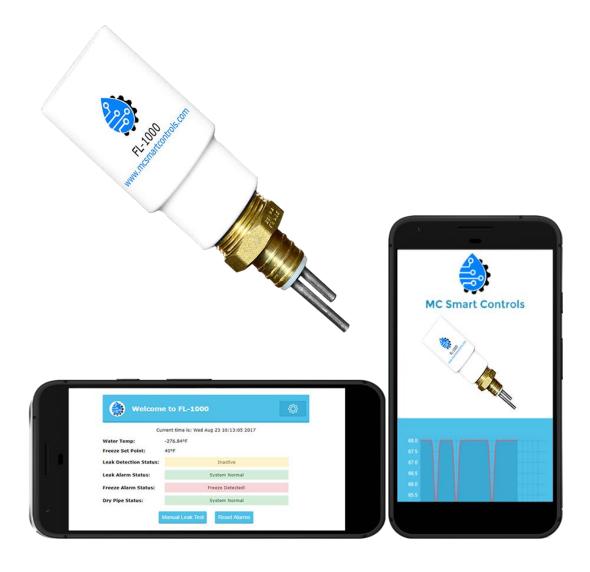


Table of Contents

INSTALLATION

- 3. Location
- 3. Mounting and Installation
- 3. Connecting the Power

SETUP

- 4. Communicating with the FL-1000
- 5. User Interface Home Page
- 6. Communications Configuration Page
- 7. FL-1000 User APP
- 8. Pre-Delivery/Install Checklist
- 9. Troubleshooting
- 10. Warranty and Disclaimer

Installation

Location


> Select a location at least 6 inches or more after the main shutoff for the installation of the FL-1000 sensor. Make sure that the location you select in the main line after the shutoff valve is before the pipe branches off.

Mounting and Installation (It is Strongly advised to contract a certified plumber)

- 1. Locate and shut off the main valve that feeds the water to the house. See diagram 1
- 2. Cut a two inch piece out of the PEX water pipe. See diagram 2
- Slip the Shark Bite Model# U3370LFA push tee fitting on to one end of the cut water pipe(PEX, Copper, PVC) . See diagram 3
- 4. Slip the other end of the water pipe on to the tee. See diagram 4
- 5. Take out the FL-1000 leak detector for its package. See diagram 5
- 6. Install the FL-1000 leak detector into the top of the tee.. See diagram 6
- 7. Turn the main water valve back on and check for leaks.

Connect Line Power

➤ Let the water run for a few minutes. If there are no leaks plug the supplied AC wall adapter power supply into the wall outlet.

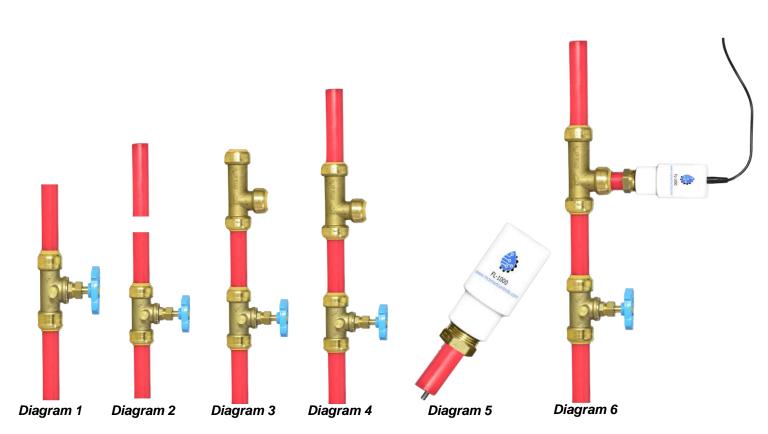

Communications Page for the FL-1000

Download the APP to your smart device from www.FL-1000.com/??????

Step 1: Connect to the FL-1000 as a WIFI network:

- While standing within 50 feet of the FL-1000 unit with a smart device. Look for local WIFI network named FL-1000_xxxxxxx = the last four characters of the specific FL-1000's MAC address. Example: *FL-1000_030768*. *See Diagram 1 Below*.
- □ Select the FL-1000 network and enter the default password "FL-1000"This will connect you to the unit and allow you to configure or control the unit directly. Open up the FL-1000 APP on your smart device. The APP will automatically search for the FL-1000. Once the smart device locates the FL-1000 leak detector select the "connect" button. Once your are connected to the FL-1000 user interface you can choose to connect the device to your local WIFI network.

Step 2: Connect to Local WIFI Network:

- ☐ In the "Wireless Setup" window check the "Connect to WIFI" box. Hit the "Scan" button and a list of all the local WIFI networks will appear.
- ☐ Select the network that you would like to join.
- ☐ Choose the security and enter the password. Hit "Save Network Configuration and Reboot" and the FL-1000 will connect to the network and a "Configuration Saved Successfully message will be displayed. See Diagram 2.
- Once you are connected to the local WIFI network, reconnect to the local WIFI network with your smart device. Once connected to the local network open up the FL-1000 APP again. The APP will automatically locate your FL-1000 device on the local network. Select "connect" and you will be

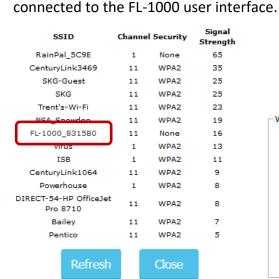


Diagram 7



Diagram 8

Registering the FL-1000 on the Server

- ☐ The Server sign up screen will appear (See Diagram 9 Below). ☐ Click on "Create An Account" This will bring you to the sign up screen. ☐ Fill out the "User Information" and "Location Information" and "Leak Detector Information" forms (See Diagram 10 Below). ☐ When you fill out the "Leak Detector Information" form enter the Mac Address you saved from the previous page leaving out the colons. E.g. 8301B8. Enter the serial number as 12345. Choose a name for your leak detector.
- Create Your Account ☐ Click on

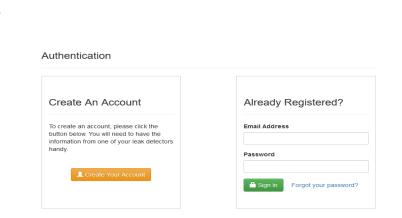


Diagram 9

First Nam	e
Last Nam	e
Email Ado	iress
Password	
Confirm F	Password
Mobile Pl	none
Optional	used for sending SMS alerts
Enter your f	ull telephone number, including area code, with no spaces)
Carrier:	

Location Information	
Location Name	
Address	
Address 2	
Country	
United States	~
City	
State	

Leak Detector Information
Enter your leak detector information to register it to your new account. If you have more than one, you will be able to add more later.
Mac Address
8301B8
Serial Number
12345
Leak Detector Name
♣ Create Your Account

Diagram 10

Logging on to your account on the FL-1000 on the Server

- Open up the APP and select "Register".
- ☐ You will be directed to your "My Account" screen (See Diagram 11 Below).
- ☐ From this screen you can manage your "Profile" (See Diagram 12 Below).

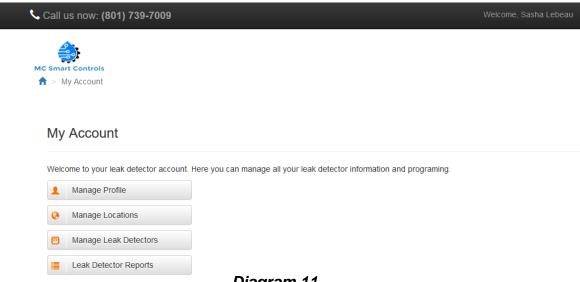


Diagram 11

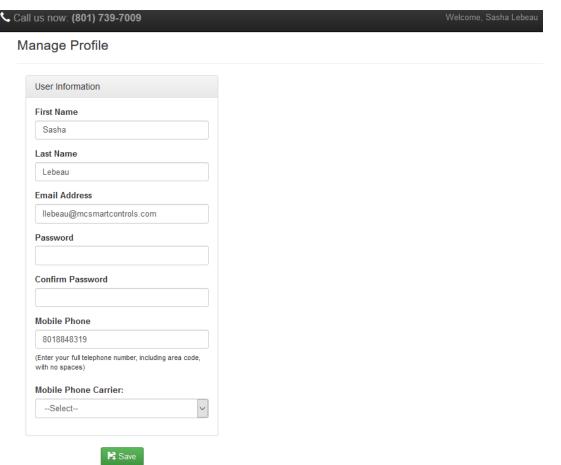


Diagram 12

Configuring the FL-1000 on the Server

- ☐ From this screen you can manage your "Locations" (See Diagram 13 Below).
- ☐ From this screen you can manage your "Leak Detector Information" (See Diagram 14 Below).
- ☐ From this screen you can manage your "Leak Detector Reports" you can also print out the reports in Excel or PDF format. (See Diagram 15 Below).



Diagram 13


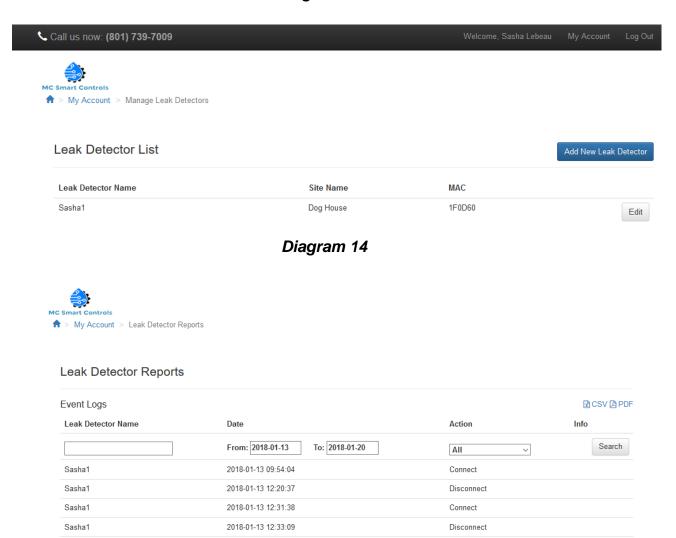


Diagram 15

FL-1000 User Interface

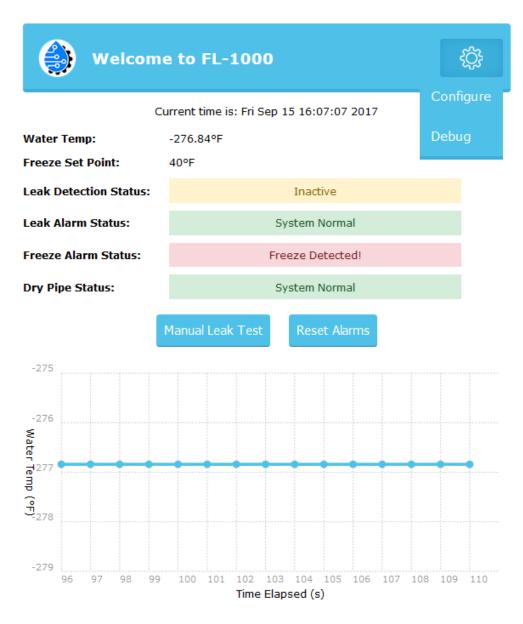

© 2017 MC Smart Controls All Rights Reserved

Configure Button- This button will bring you to the configuration page. See next page.

Freeze Set Point- The temperature that is set by user. When the water Temperature goes below this value an alarm is triggered and an email and or a text are sent.

Leak Detection Status- This acknowledges that the leak detection function is enable currently...


Leak Alarm Status- This is triggered when a leak is detected. An email and or a text are sent.

Freeze Alarm Status- This is triggered when the water temperature goes below the Freeze set point. An email and or a text are sent.

Dry Pipe Status-This is triggered when the pipe has no water in it.. An email and or a text are sent. **Manual Leak Test Button**- Pressing the "Manual Leak Test" button will test for leaks manually within 10 seconds.

Start Time- This is the time window the user sets. This time window will be the time period in which the FL-1000 will test for leaks in auto mode. Three windows can be configured.

FL-1000 Configuration Page

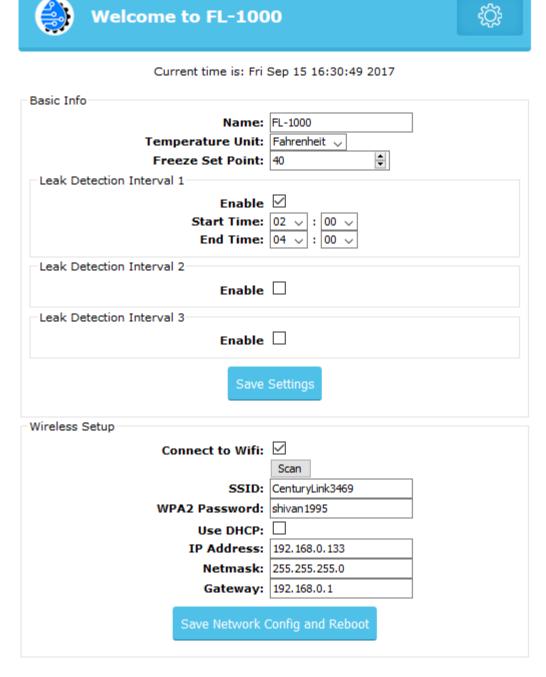

© 2017 MC Smart Controls All Rights Reserved

Basic Info-This menu is where you configure the name of your device, the temperature units, and the setpoint at which you would like the freeze alarm to trigger.

Leak Detection Interval 1,2,3-These windows are where you set up your time scheduling for the automatic leak detection. Three windows are available.

Wireless Setup- This menu is where you configure and connect to your home local WIFI network.

FL-1000 User APP





The APP can be downloaded for free at www.FL-1000.com/?????? and used to Access the specific controller locally via the local FL-1000 user interface access point or globally over the internet.

Pre-Delivery/Install Checklist




1) FL-1000 Leak/Freeze Sensor



2) 24 VDC power Adapter

Troubleshooting

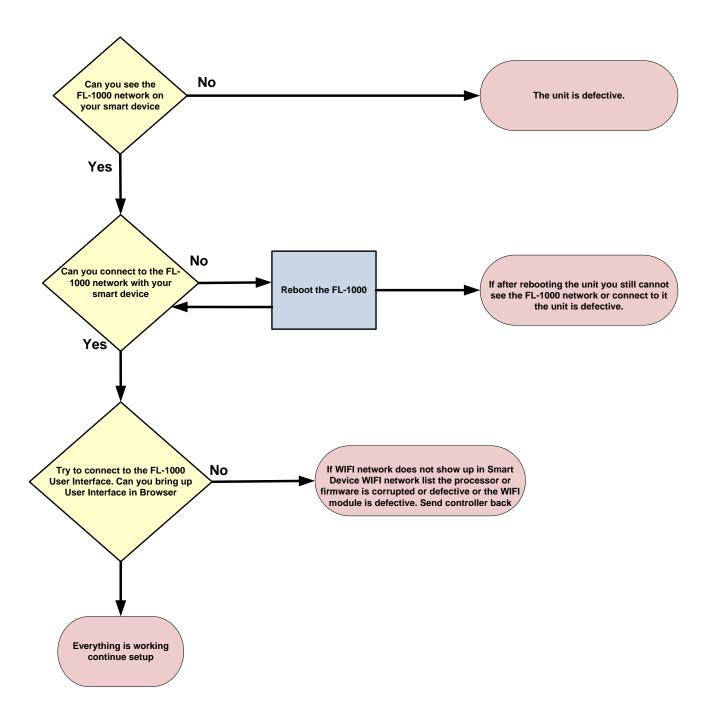

Warranty and Disclaimers

WARRANTY

Mani Group warrants that each product will be free of defects in material and workmanship for a period of one (1) year for its products. The warranty commences on the date the product is shipped by Mani Group. Mani Group's sole liability and responsibility under this warranty is to repair or replace any product which is returned to it by the Buyer and which Mani Group determines does not conform to the warranty. Product returned to Mani Group for warranty service will be shipped to Mani Group at Buyer's expense and will be reshipped to Buyer at Mani Groups expense. In no event, shall Mani Group be responsible under this warranty for any defect which is caused by negligence, misuse or mistreatment of a product or for any unit which has been altered or modified in any way. The warranty of replacement shall terminate with the one (1) year warranty of the product.

Mani Group makes no warranties of any nature of kind, expressed or implied, with respect to the hardware, software, and/or products and hereby disclaims any and all such warranties, including but not limited to warranty of non-infringement, implied warranties of merchantability for a particular purpose, any interruption or loss of the hardware, software, and/or product, any delay in providing the hardware, software, and/or product or correcting any defect in the hardware, software, and/or product, or any other warranty. The Purchaser represents and warrants that Mani Group has not made any such warranties to the Purchaser or its agents MANI GROUP EXPRESS WARRANTY TO BUYER CONSTITUTES MANI GROUP SOLE LIABILITY AND THE BUYER'S SOLE REMEDIES. EXCEPT AS THUS PROVIDED, MANI GROUP DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PROMISE.