

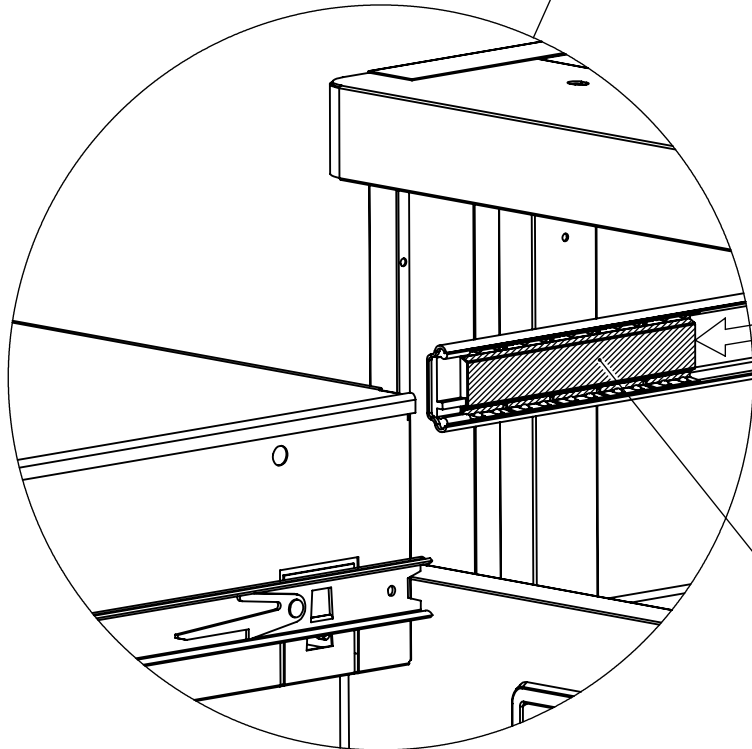


# NOTE- PLEASE READ THIS DRAWER RE-INSTALLATION DETAIL!

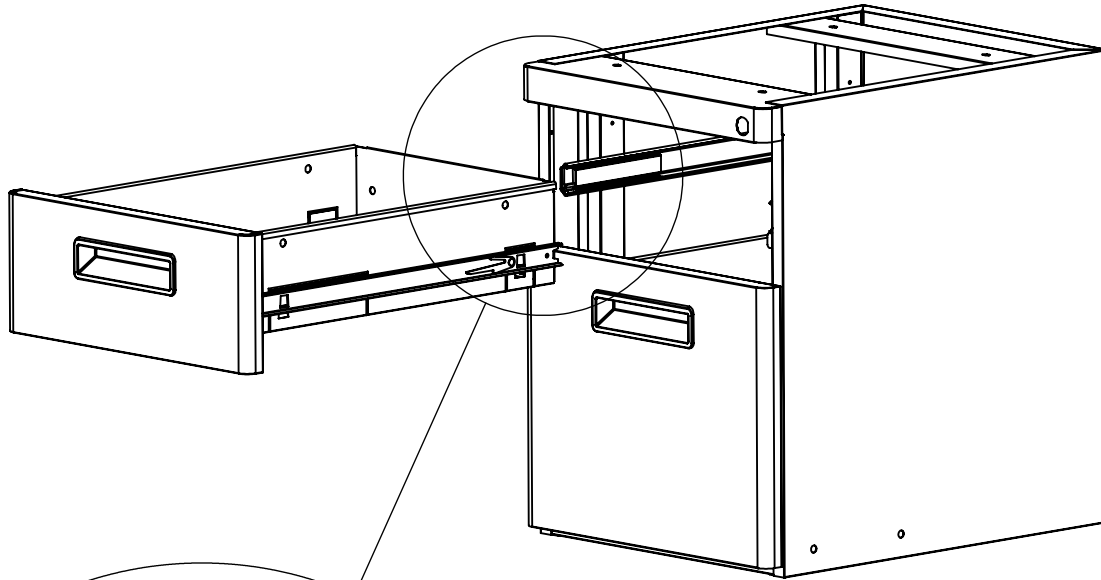

MOVE THE BEARING  
RACES (ONE IN EACH  
SLIDE ) FORWARD

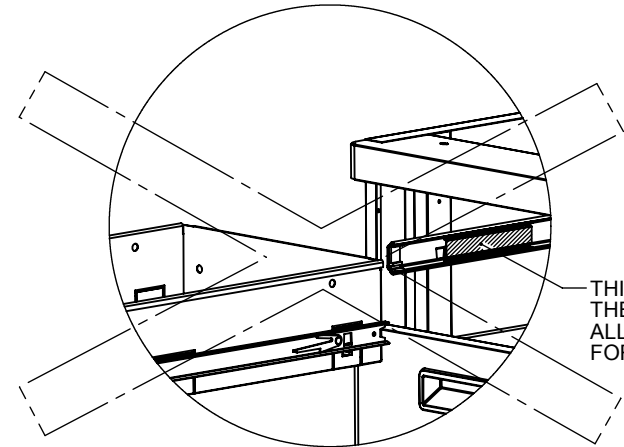


THIS IS WRONG-  
THE RACE IS NOT  
ALL THE WAY  
FORWARD.

BEFORE YOU RE-INSERT THE DRAWER,  
MOVE BOTH BEARING RACES (THE METAL PLATES  
WITH METAL BALL BEARINGS IN THEM) **FORWARD**  
TOWARD THE FRONT OF THE PEDESTAL AS SHOWN

# ASSEMBLY INSTRUCTIONS


## Follow Ped to top only - Not Valid for Modesty Panel

Remove the drawers from both pedestals. Pull each drawer out fully, and move the slide trigger on each slide up or down to disengage the inner slide. Then slide drawer completely out.

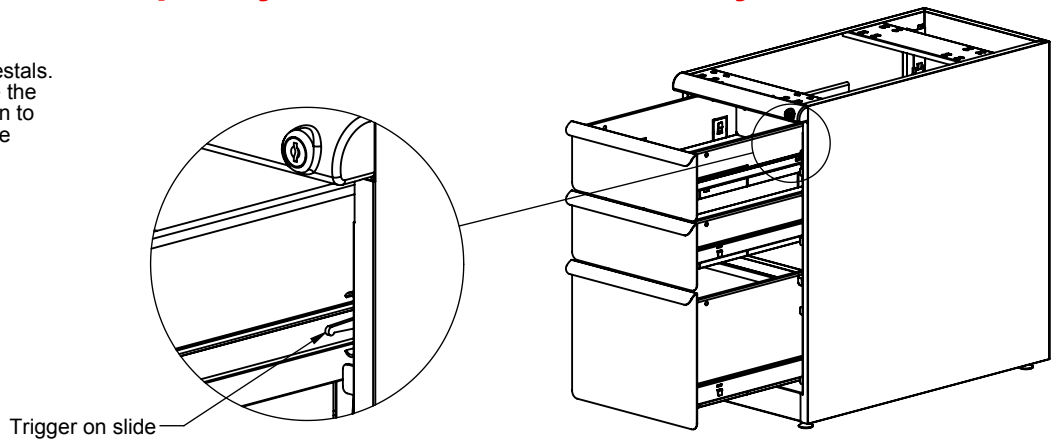

Lay the worksurface, bottom-side-up, on a smooth surface. A carpet is best, but if none are available, use the carton the top came in. Be sure to remove all staples from the carton before using.


See drawing at right. Use the pedestal holes shown to attach the pedestals to the worksurface.

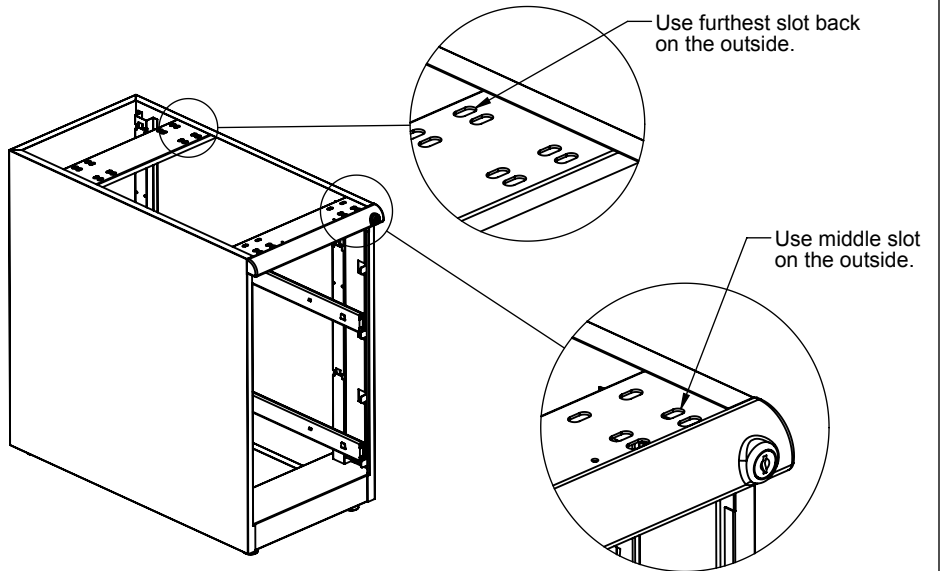



Attach pedestals to Worksurface using the (8) SILVER MACHINE SCREWS into the metal inserts. Attach the Modesty Panel to the Worksurface using (3) SILVER SHEET METAL SCREWS into the pre-drilled holes. Attach the Modesty Panel to the pedestals at the bottom using a total of (2) BLACK MACHINE SCREWS.

Turn desk upright. Re-insert drawers, **referring to the Drawer Instruction Sheet found in the Pedestals.**


The desk may be cleaned with a damp cloth and gentle cleansers.

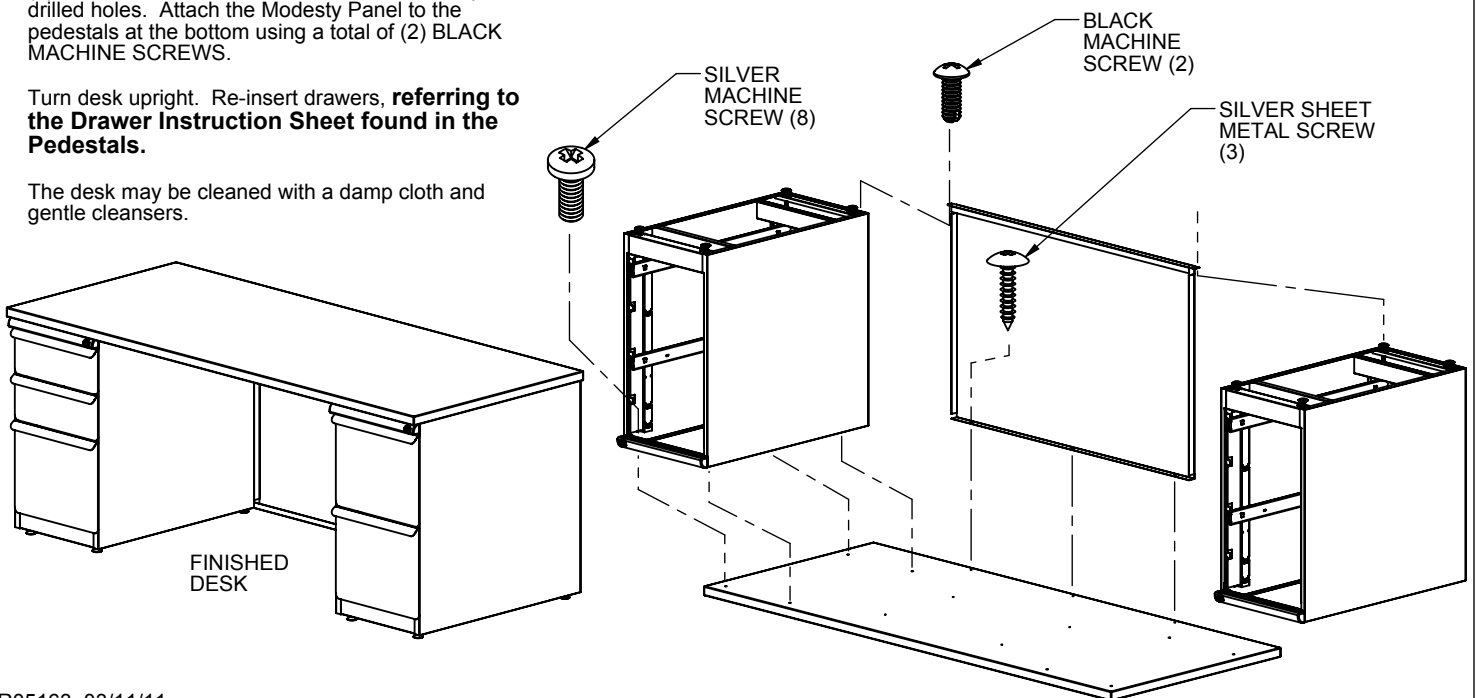



This shows how to attach a return to the RIGHT side of a desk. Reverse for the LEFT side. Attach the RETURN BRACE- RH (shown) to the LEG and TOP, using (2) BLACK SCREWS and (1) SILVER SCREW. Attach the CONNECTOR PLATE to the TOP using (2) SILVER SCREWS, as shown.

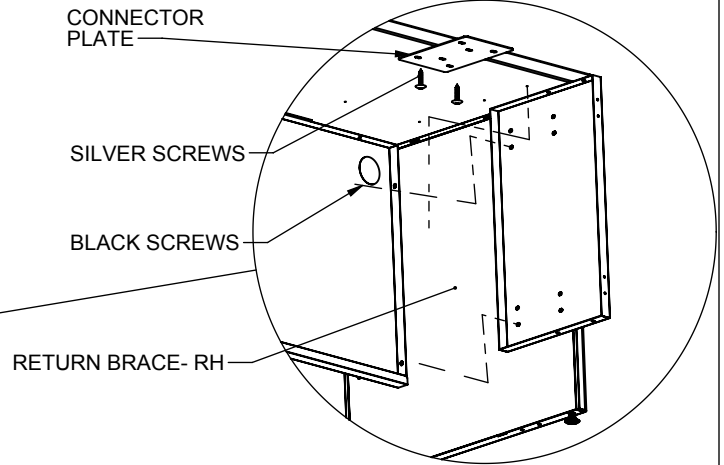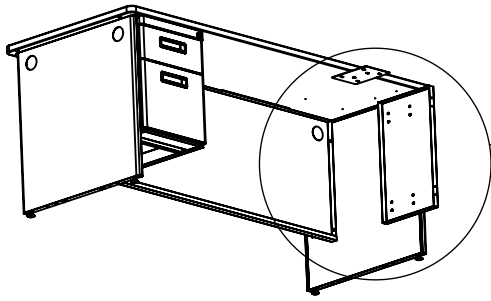

Attach the assembled Return to the Desk, as shown- using (2) BLACK SCREWS, (2) SILVER SCREWS, and (1) MACHINE SCREW.

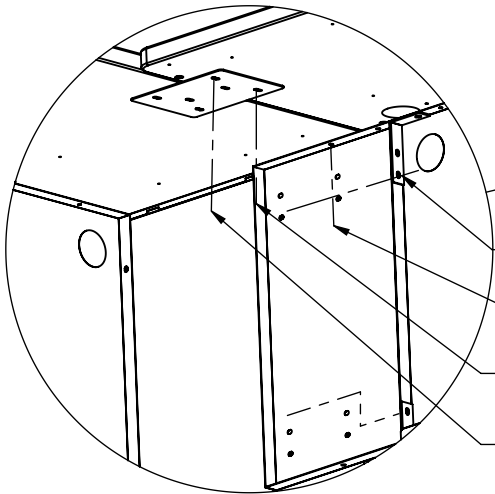

- BLACK SCREWS (2)  
(Through MODESTY PANEL into RETURN BRACE)
- SILVER SCREW  
(Through MODESTY PANEL into TOP)
- SILVER SCREW  
(Through CONNECTOR PLATE into TOP)
- MACHINE SCREW  
(Through CONNECTOR PLATE into TOP)

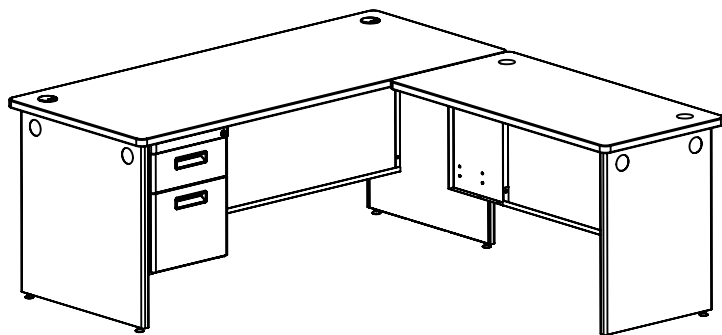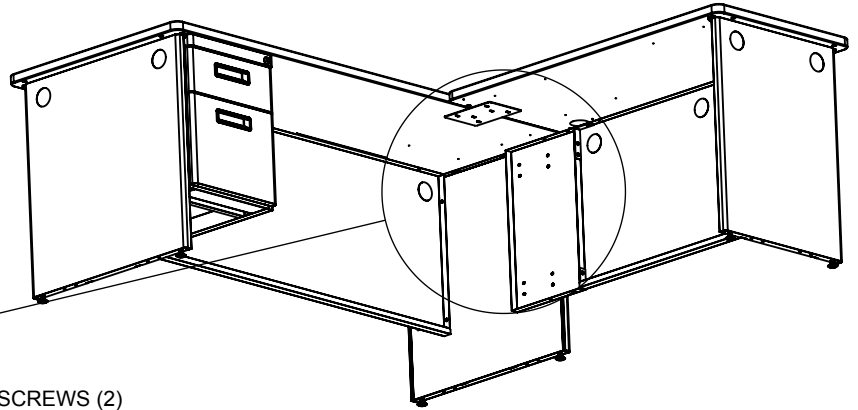

## PARTS LIST

QTY	DESCRIPTION	PART #
(1)	TOP (WORKSURFACE)	
(2)	LEG	960007 (24") 960008 (30")
(1)	BACK (MODESTY) PANEL	913XXX
(1)	ADAPTER	120125

### HARDWARE BAG:

(14)	SILVER SCREW (#10 X 3/4)	F02886
(1)	MACHINE SCREW (1/4-20)	F03736
(8)	BLACK SCREW (#10-24 X 1/2)	F09542
(2)	SHOULDER SCREW	F30022
(2)	GROMMET WITH LID	PM0130

# ASSEMBLY INSTRUCTIONS- RETURN


Before assembly, make sure that you have everything you need- check your parts against the parts list on the last page. If you are missing anything, please call us at 1-800-621-8846.

Place the TOP on a smooth flat surface, face down. Make sure nothing is underneath to scratch the top! A carpet is best, but you can also use the carton that the desk came in.


IF YOU WANT THE RETURN TO BE ON THE LEFT SIDE OF THE DESK, INSERT THE SHOULDER SCREWS IN THE LEFT SIDE (SEE NOTE!) IF ON THE RIGHT, THEN INSERT THEM INTO THE RIGHT SIDE. Insert (2) SHOULDER SCREWS into two of the (4) inserts in the TOP. Hand tighten only!

This instruction sheet shows a "RIGHT-HAND" return assembly. For a "LEFT HAND" assembly, screw the shoulder screws into the left side.

DETAIL A  
SCALE 1 : 4

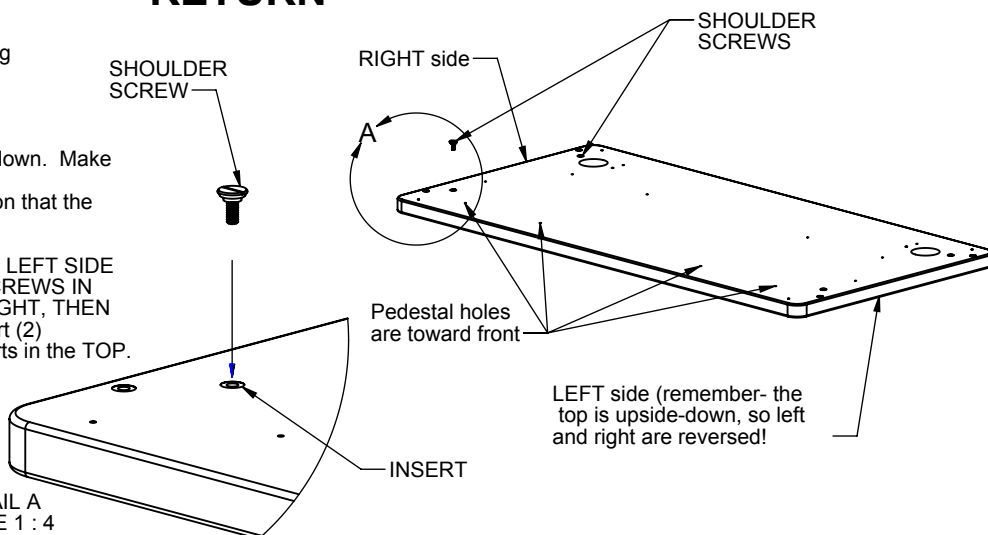


First: Place keyhole in leg over Shoulder Screw. (See Detail) NOTE- the holes in the leg should be toward the inside of the return. Slide leg forward until holes line up. Fix leg in place using (2) SILVER SCREWS per leg. (See Detail). Yes, the leg will feel loose until the back is installed.

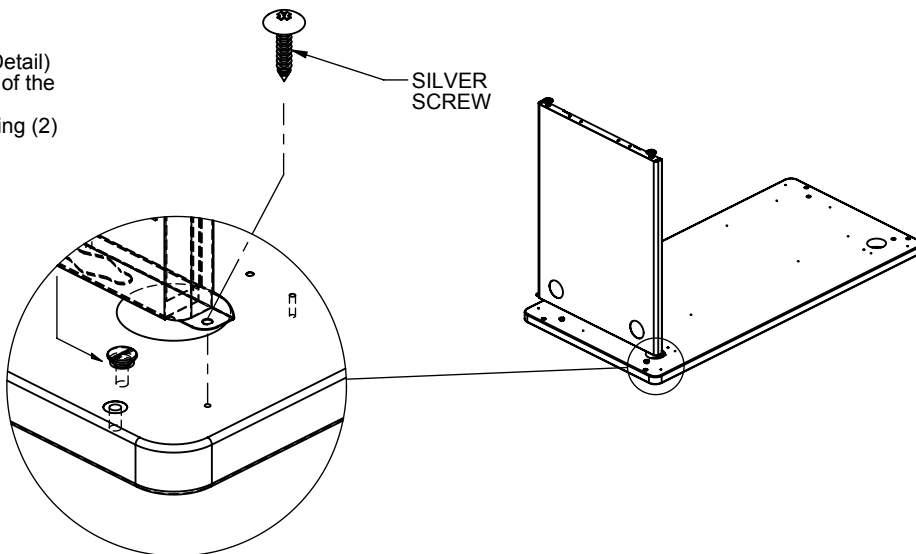

Attach BACK PANEL to LEG using (2) BLACK SCREWS. Attach to TOP using (2) SILVER SCREWS. Make sure Double fold on the BACK is away from the top.



The BACK will hang over the edge of the TOP.

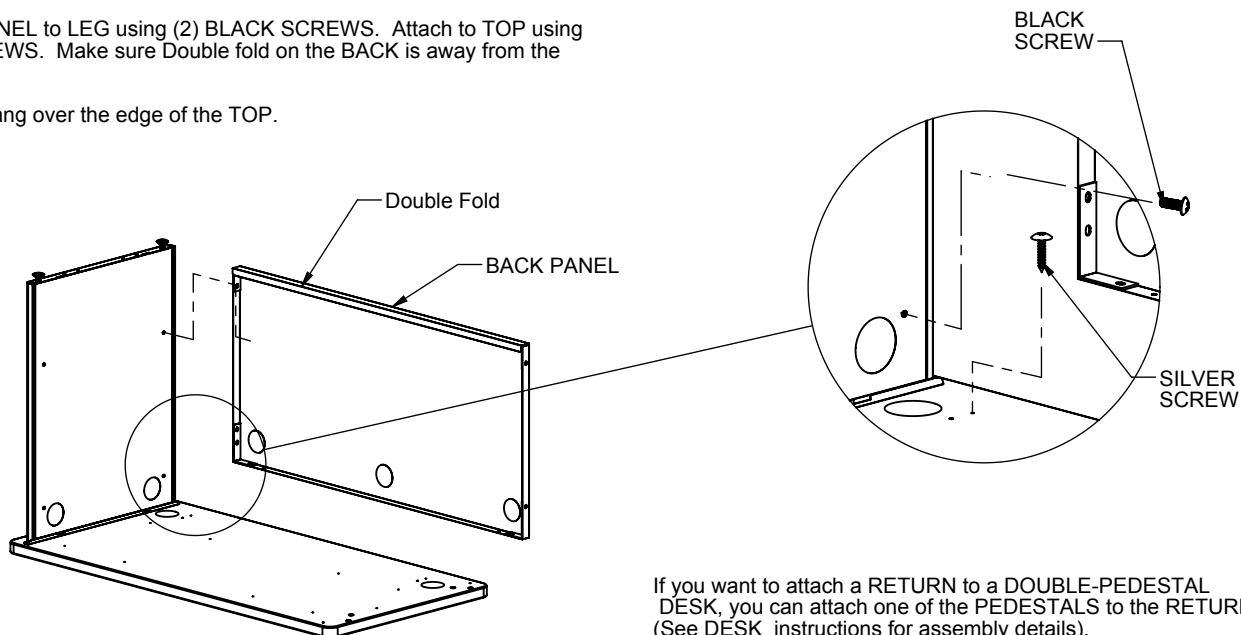

If you want to attach a RETURN to a DOUBLE-PEDESTAL DESK, you can attach one of the PEDESTALS to the RETURN. (See DESK instructions for assembly details).

NOTE: When assembling the returns to the Corner Desk, remove and discard the adapters that come with the returns. The adapters are only used to fasten a return to a regular desk.

Use the SILVER SCREWS to fasten the steel parts into the drilled holes in the top.  
 Use MACHINE SCREWS to fasten the steel parts into the threaded inserts in the top.  
 Use BLACK SCREWS to fasten the steel parts to each other.

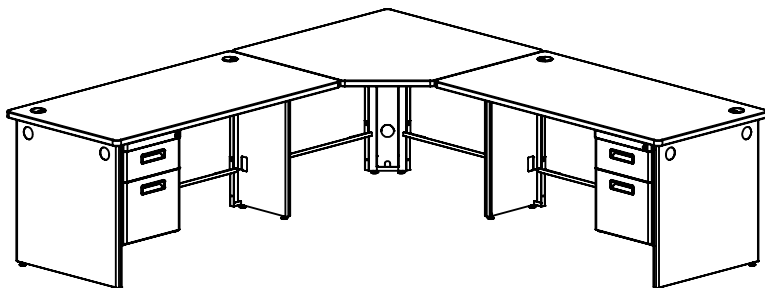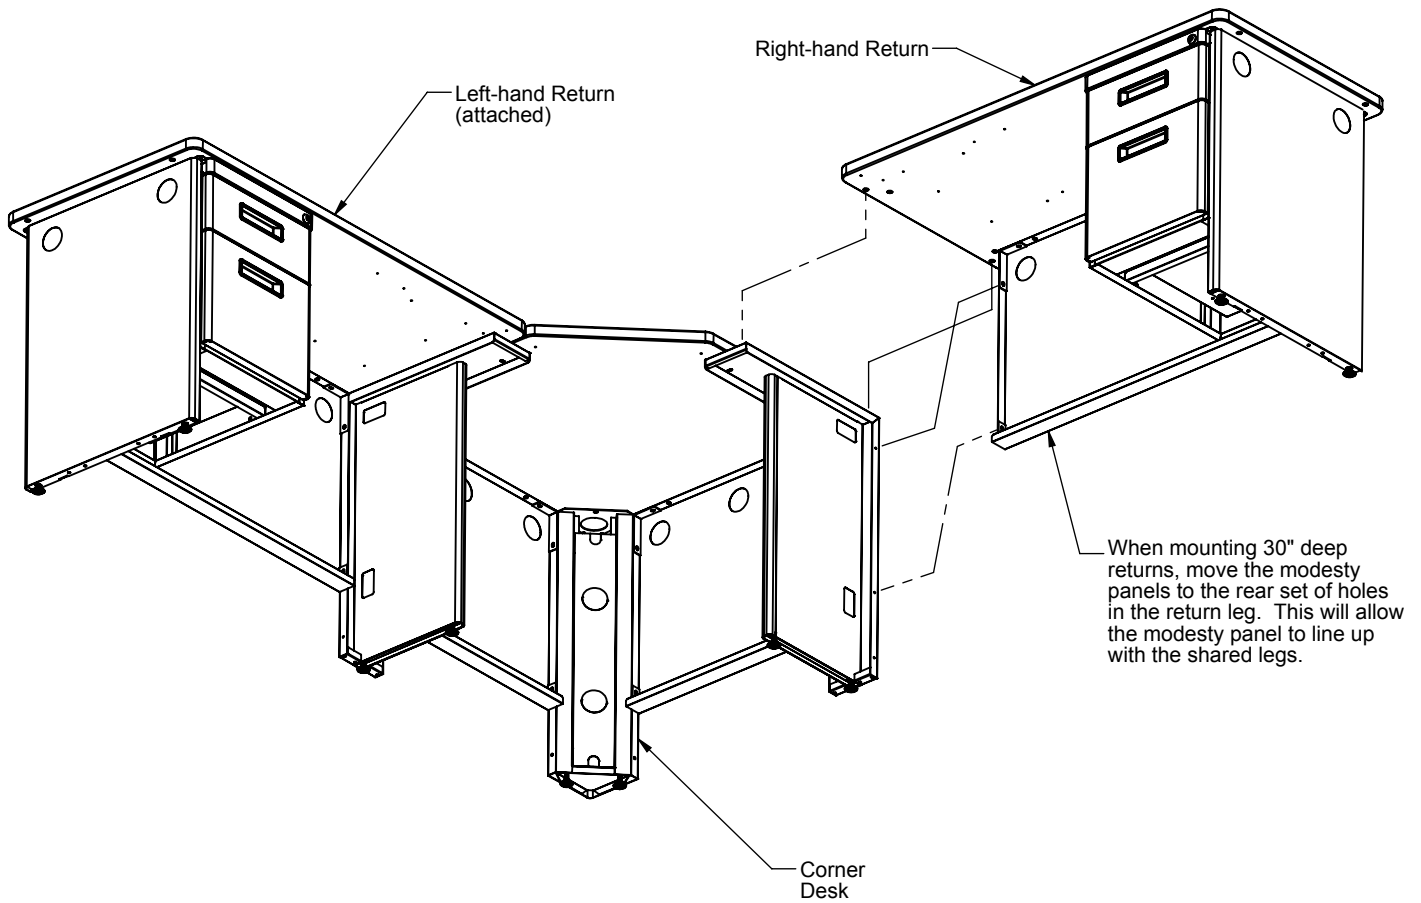

## PARTS LIST


<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
(1)	TOP (WORKSURFACE)	
(2)	SHARED LEG	914697
(1)	CORNER LEG	914689
(2)	BACK (MODESTY) PANEL	914712 (36w) 914713 (42w)
(1)	WIRE COVER	630719

### HARDWARE BAG:

(13)	SILVER SCREW (#10 X 3/4)	F02886
(8)	MACHINE SCREW (1/4-20)	F03736
(8)	BLACK SCREW (#10-24 X 1/2)	F09542

# ASSEMBLY INSTRUCTIONS- CORNER DESK


Before assembly, make sure that you have everything you need- check your parts against the parts list on the last page. If you are missing anything, please call us at 1-800-621-8846.

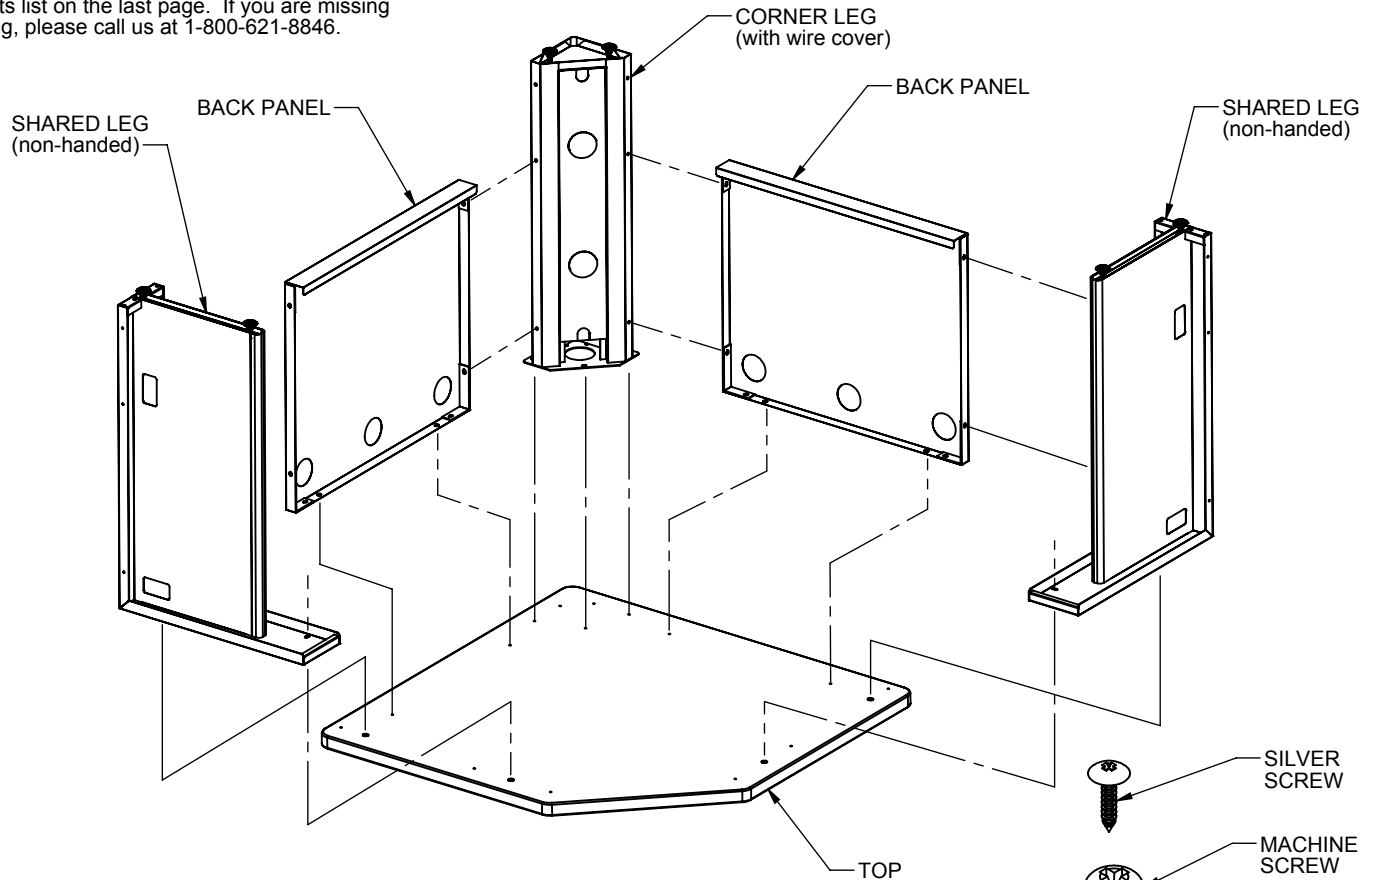



Place the TOP on a smooth flat surface, face down. Make sure nothing is underneath to scratch the top. A carpet is best, but you can also use the carton that the desk came in.

Use the SILVER SCREWS to fasten the steel parts into the drilled holes in the top. Use MACHINE SCREWS to fasten the steel parts into the threaded inserts in the top. Use BLACK SCREWS to fasten the steel parts to each other.

Tighten all the screws, and turn the Corner Station right-side-up. Position it where it will be used.

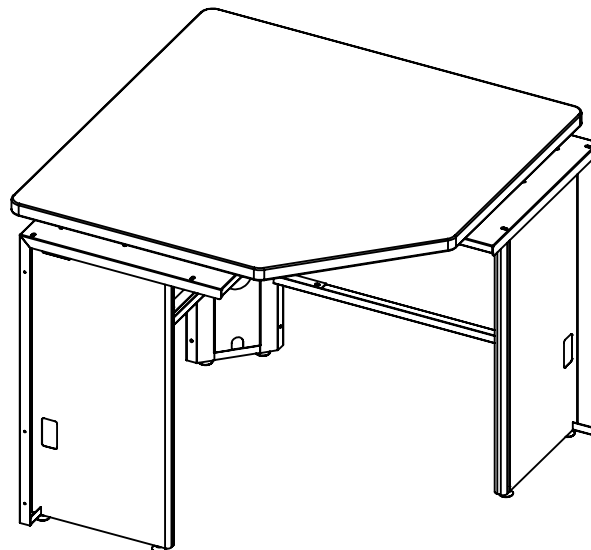

Using (2) SILVER SCREWS and (4) BLACK SCREWS, attach MODESTY PANEL to the assembly.  
 The machine screwsscrew into the ADAPTERS. NOW, tighten all screws.

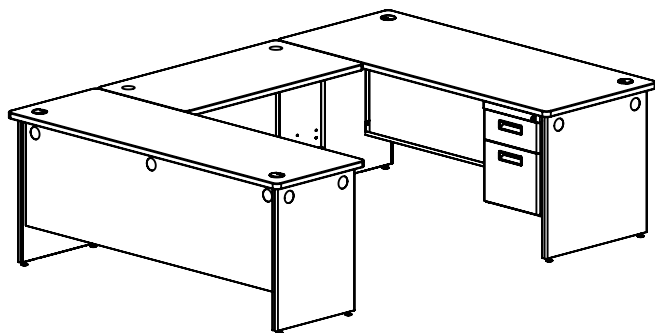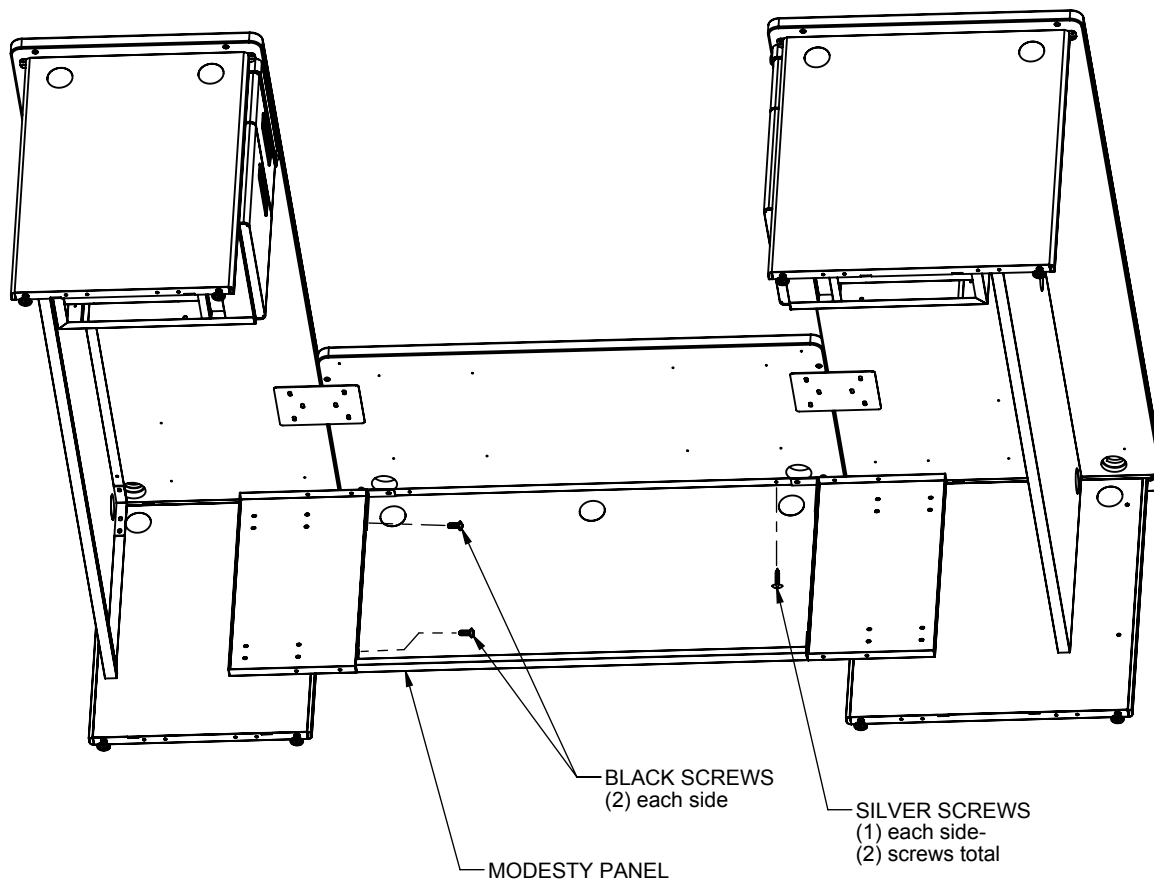

## PARTS LIST


<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
(1)	TOP (WORKSURFACE)	
(1)	BACK (MODESTY) PANEL	914713 (42w) 914714 (48w)
(2)	ADAPTER	120107
(2)	CONNECTOR PLATE	430067

### HARDWARE BAG:

(14)	SILVER SCREW (#10 X 3/4)	F02886
(2)	MACHINE SCREW (1/4-20)	F03736
(12)	BLACK SCREW (#10-24 X 1/2)	F09542

# BRIDGE ASSEMBLY

Before assembly, make sure that you have everything you need- check your parts against the parts list on the last page. If you are missing anything, please call us at 1-800-621-8846.

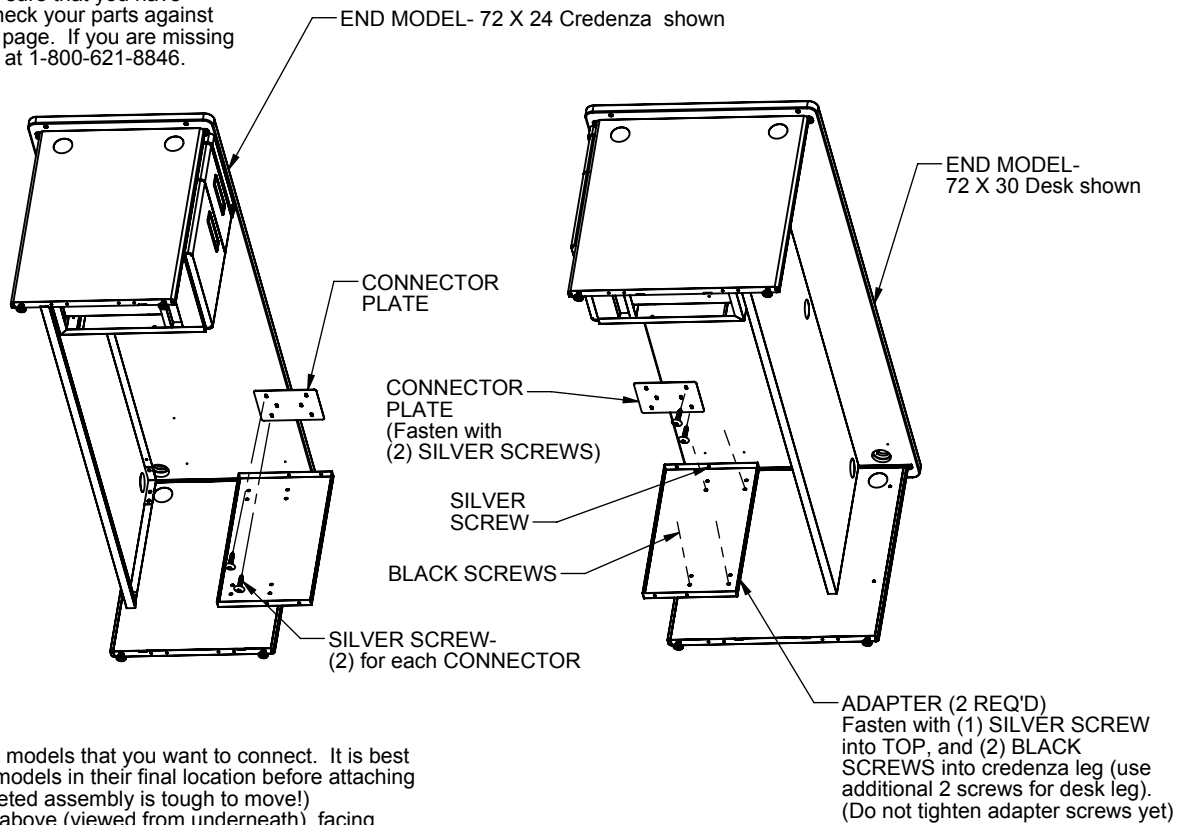


Assemble the two end models that you want to connect. It is best to locate the two end models in their final location before attaching the bridge. (the completed assembly is tough to move!) Place them as shown above (viewed from underneath), facing each other. The pedestals should be face-to-face, so the sides without the pedestals will accept the bridge.

Attach (2) CONNECTOR PLATES using (2) SILVER SCREWS for each plate (total of 4 screws). Attach the (2) ADAPTERS- one to each end model.

Use (1) SILVER SCREW and (2) BLACK SCREWS to fasten the ADAPTER to a credenza leg. Use (1) SILVER SCREW and (4) black screws to fasten the ADAPTER to a desk leg.

**NOTE- DO NOT TIGHTEN ADAPTER SCREWS UNTIL YOU ATTACH THE MODESTY PANEL!! (see next page).**

Attach TOP to CONNECTOR PLATES using (1) MACHINE SCREW and (2) SILVER SCREWS on each side. Make sure that the TOP is correctly aligned with the two other desks. Then attach the TOP to the two ADAPTERS using (1) SILVER SCREW per ADAPTER (total of (2) SILVER SCREWS).

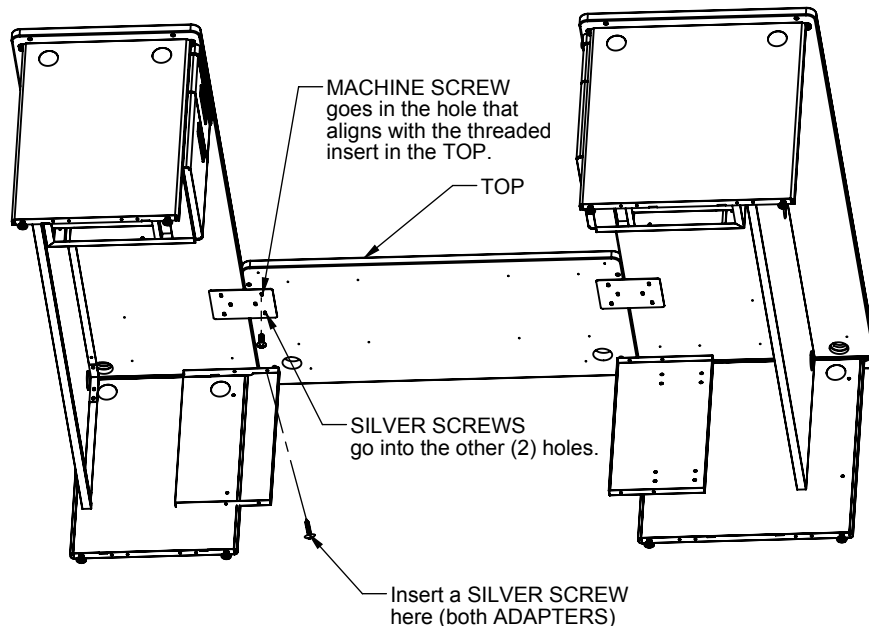




# OVERSHELF ASSEMBLY

Before assembly, make sure that you have everything you need- check your parts against the parts list on the last page. If you are missing anything, please call us at 1-800-621-8846.


Find the non-handed SIDES. Lay them on a flat surface. Make sure nothing is underneath to scratch them! A carpet is best, but you can also use the carton that the Overshelf came in.

Screw (12) screws (6 for each SIDE) into the holes shown. DO NOT SCREW ALL THE WAY IN-leave about 1/8" of thread showing. (See Detail A)

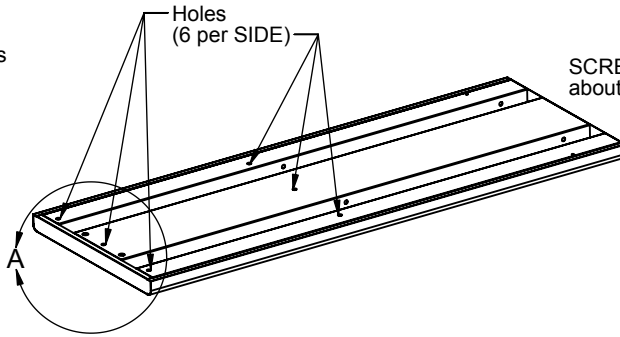

BLACK SCREW  
(6 PER SIDE)

SCREW sticks out  
about 1/8 inch

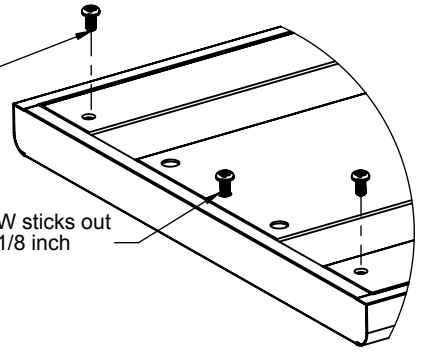


DETAIL A  
SCALE 1 : 4

Lay the SHELF face-down (back holes are up). Thread the three slots over the three screws in the SIDES (Detail J). Make sure the slots are fully set. Repeat for the TOP. Tighten all 12 SCREWS.

Slide TOP and  
SHELF over  
the SCREWS


The TOP has NO bracket  
on it.

The SHELF has this  
Task Light bracket  
on it.

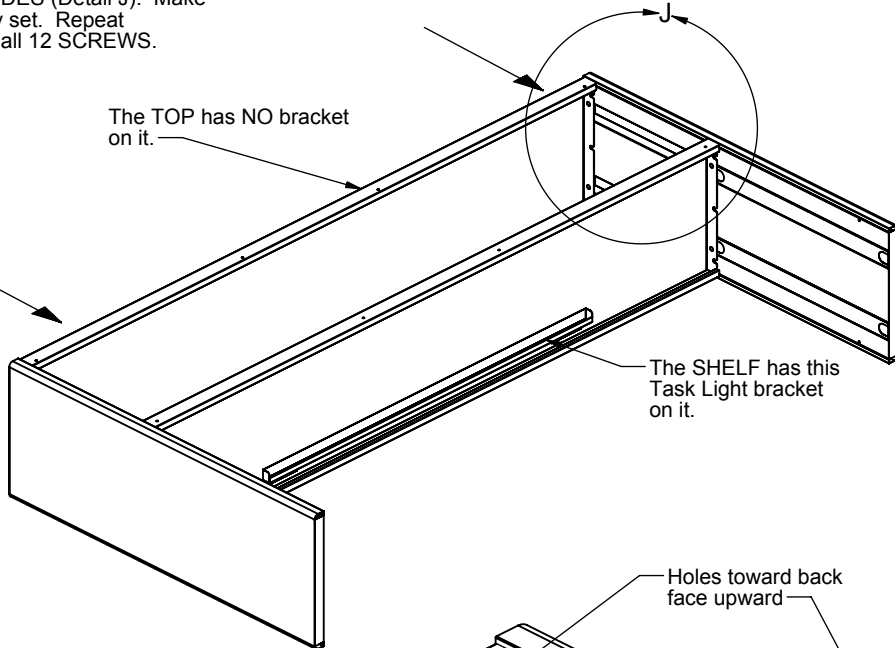




Holes toward back  
face upward

DETAIL J  
SCALE 1 : 4

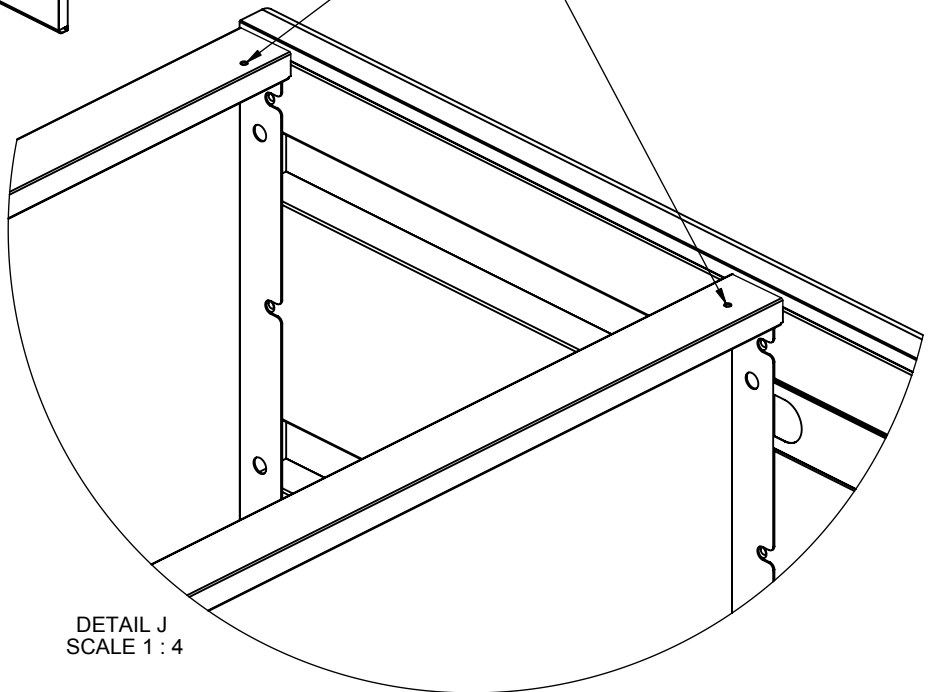

Lay the BACK into position, with tabs going into slots in shelf. Holes should line up with holes in top!! Fasten back with (4) BLACK SCREWS.

Note the Double-faced Tape on the bottom ends of the SIDES.

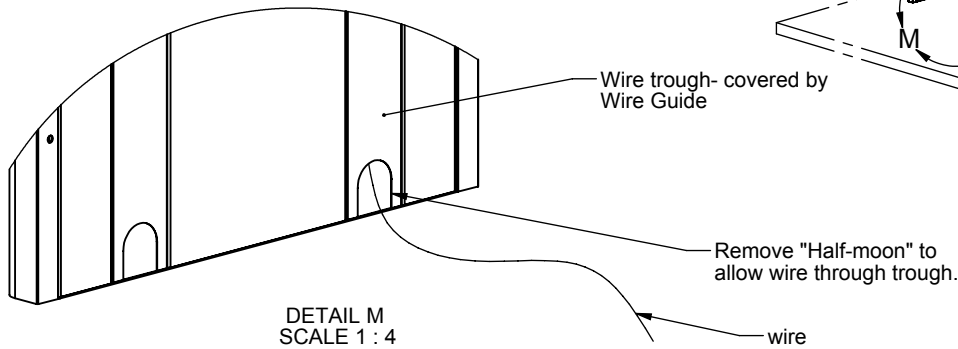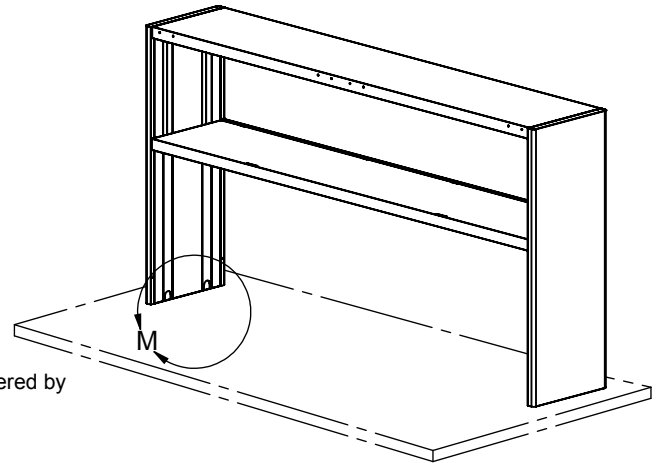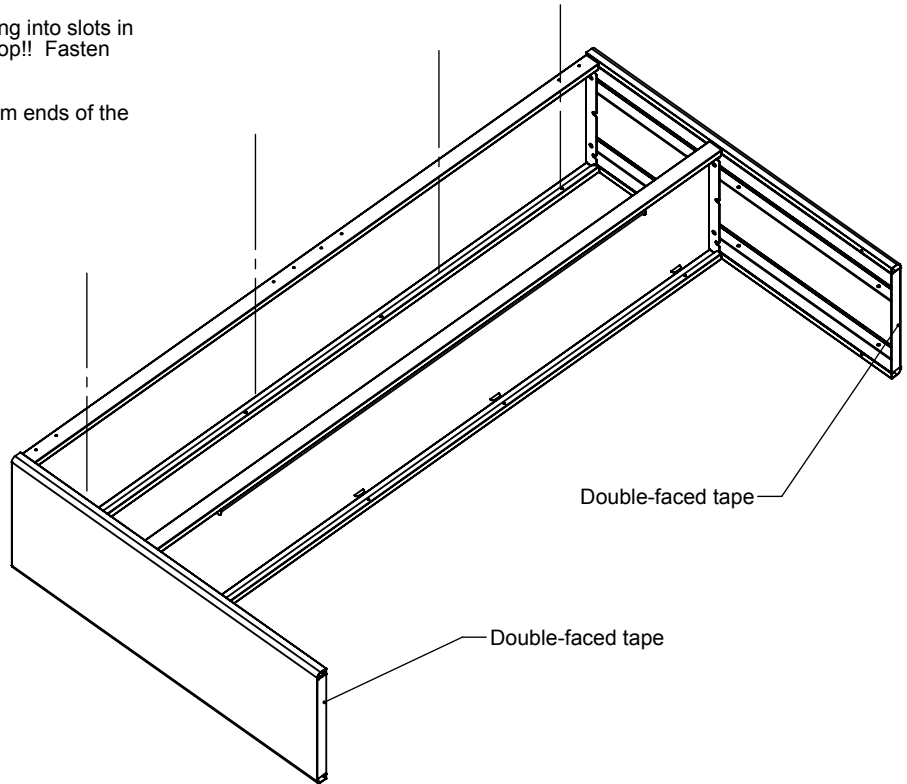

## PARTS LIST

### QTY DESCRIPTION

- (2) SIDE (NON HANDED)
- (1) BACK PANEL
- (1) SHELF

### QTY DESCRIPTION

- (1) TOP
- (4) WIRE GUIDE  
(Already assembled to Legs)

### **HARDWARE BAG:**

- (20) BLACK SCREW (#10-24 X 1/2)

Lay the BACK in position, with small offset over TOP, and large offset over SHELF (See Detail K). Holes should line up!! Fasten back with (8) BLACK SCREWS.

Note the Double-faced Tape on the ends of the SIDES.

BLACK SCREW  
(8 req'd)

SHORT FLANGE IS  
TOWARD TOP!!

LONG FLANGE IS  
TOWARD SHELF!!

K


DETAIL K  
SCALE 1 : 6

Double Faced Tape

Double Faced Tape

Turn Overshelf upright, and place on Desk.  
CAUTION- THE DOUBLE-FACED TAPE IS STRONG!! USE CARE IN POSITIONING THE OVERSHELF! If you wish, you can leave the backer on the tape, and use it as a pad, instead. Note that the Overshelf will not be as stable if used this way.

See Detail M. The four WIRE GUIDES (2 in each SIDE) that cover the Wire Troughs are removable. Remove the "half-moon" in the WIRE GUIDE to allow the electrical cord to fit into the trough. Cover with the WIRE GUIDE.

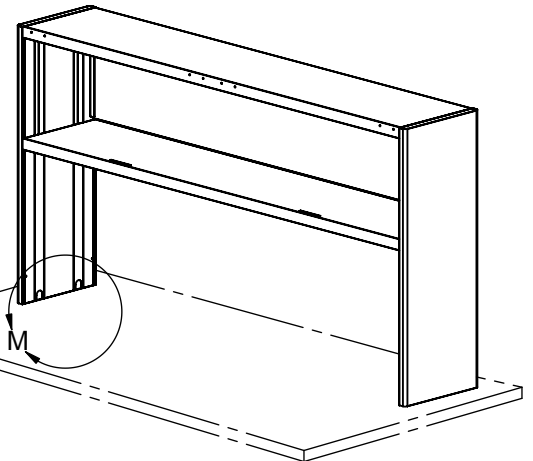

Wire trough- covered by  
Wire Guide

Remove "Half-moon" to  
allow wire through trough.

wire

DETAIL M  
SCALE 1 : 4

## PARTS LIST

QTY	DESCRIPTION	PART #	QTY	DESCRIPTION	PART #
(2)	SIDE (NON HANDED)	MG772881	(1)	TOP	48"- MG772893 60"- MG772894 72"- MG772895
(1)	BACK PANEL	48"- MG772877 60"- MG772878 72"- MG772879	(1)	WIRE GUIDE (Already assembled to Legs)	MG772850
(1)	SHELF	48"- MG772882 60"- MG772883 72"- MG772884	<b>HARDWARE BAG:</b>		
			(24)	BLACK SCREW (#10-24 X 1/2)	F09542



# FLIPPER DOOR ASSEMBLY

Before assembly, make sure that you have everything you need—check your parts against the parts list at the bottom of the page. If you are missing anything, please call us at 1-800-621-8846.

Place the DOOR(s) on to the top of the Overshelf, with the locks facing forward, and the SLIDE HINGES touching the front face of the Overshelf, as shown. Line up the slots in the SLIDE HINGES with the holes in the front of the Overshelf.

Find the eight screws in the Hardware Bag (you will only need four of them with the 48" door). Screw the DOORS to the Overshelf, as shown. Before tightening them all the way, position the DOORS evenly. (The DOOR(s) will overlap the sides slightly!).

Now tighten the screws.

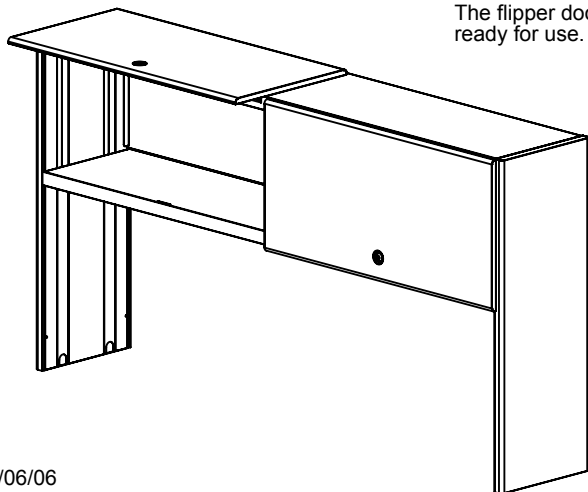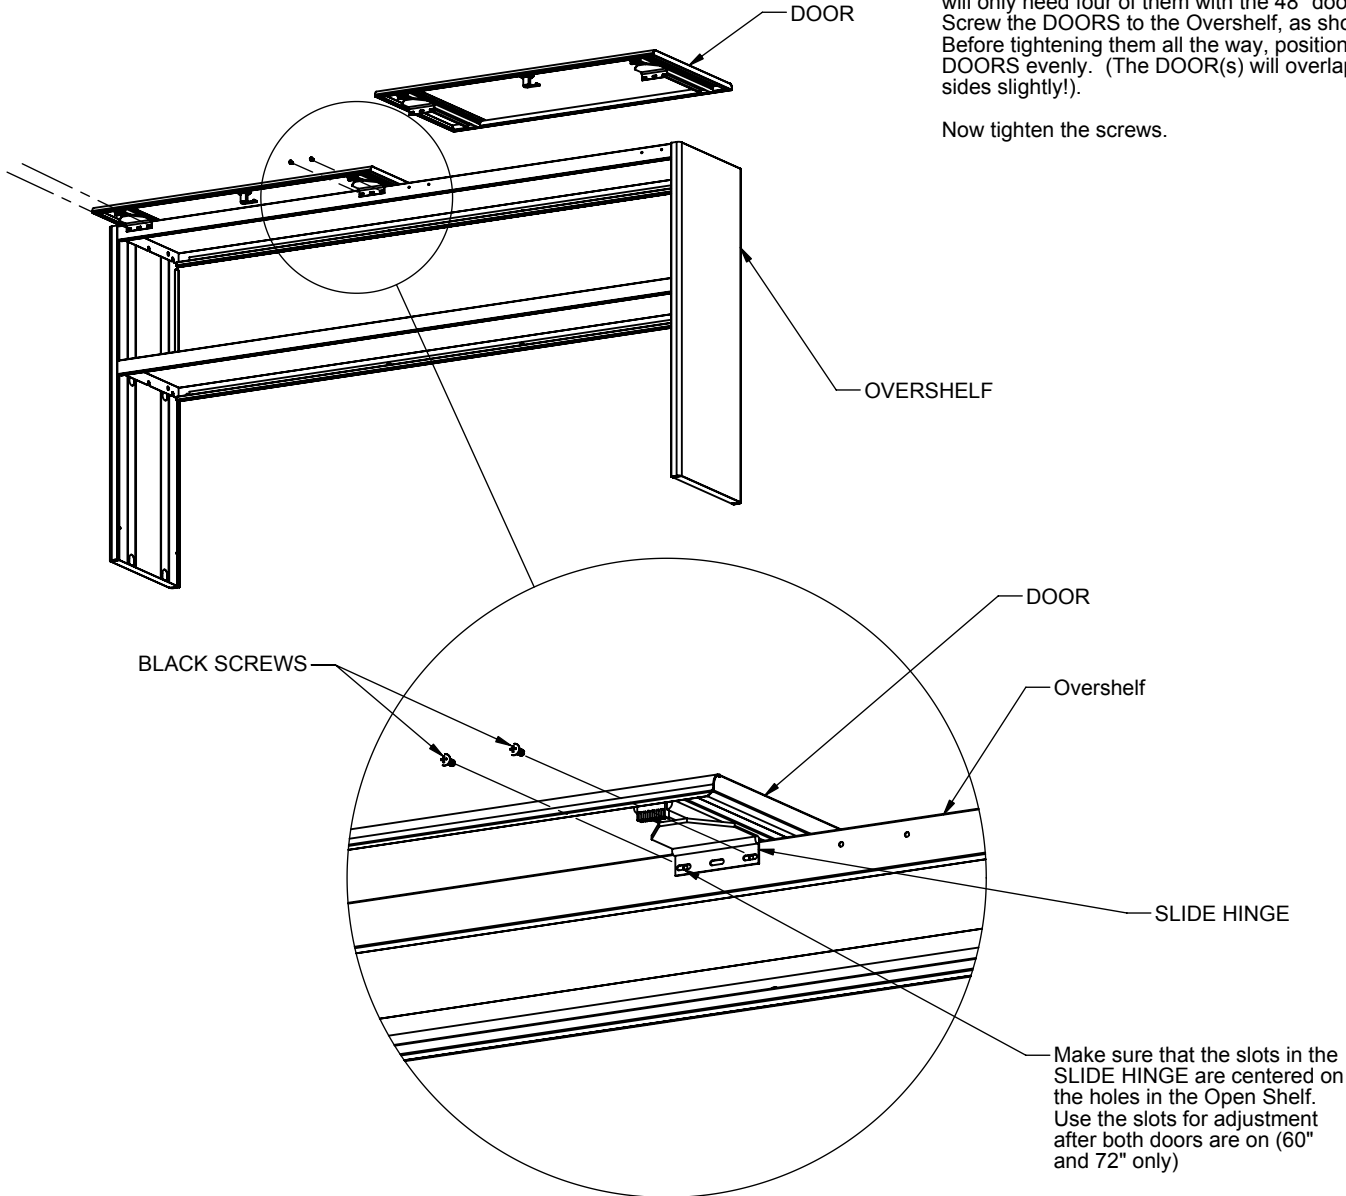

The flipper doors are now ready for use.

## PARTS LIST

DESCRIPTION	PART #
DOOR	48" (qty = 1) MG772885
	60" (qty = 2) MG772886
	72" (qty = 2) MG772887

**HARDWARE BAG:**


- (8) BLACK SCREW (#10-24 X 1/2) F09542

# TACKBOARD ASSEMBLY


Before assembly, make sure that you have everything you need- check your parts against the parts list at the bottom of the page. If you are missing anything, please call us at 1-800-621-8846.

Remove the TACKBOARD from the metal FRAME. Set the TACKBOARD aside.


Align the metal FRAME with the Overshelf as shown. The channel at the top of the FRAME will go over the rear flange of the Overshelf, as shown in the Detail.

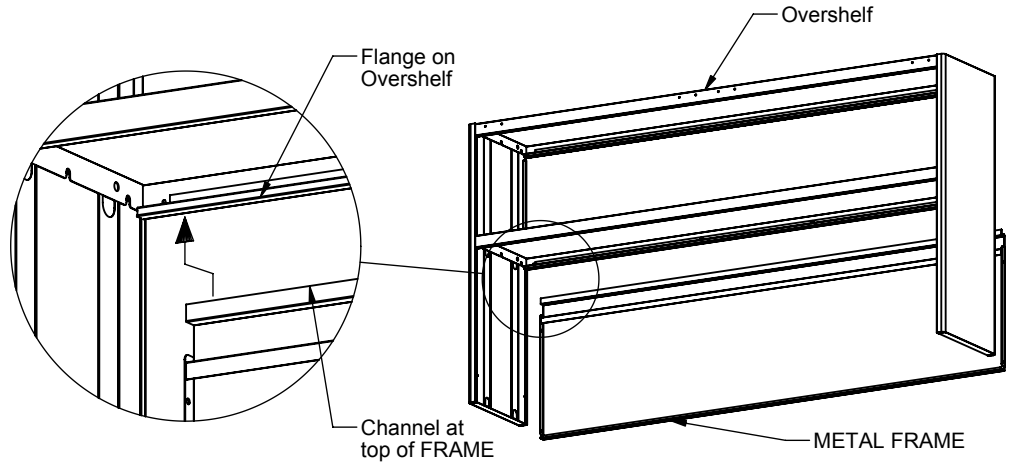


In the hardware bag, locate the two BLACK SCREWS. Line the hole in the FRAME with the hole in the side of the Overshelf. Screw the BLACK SCREWS into the sides- one on each side.

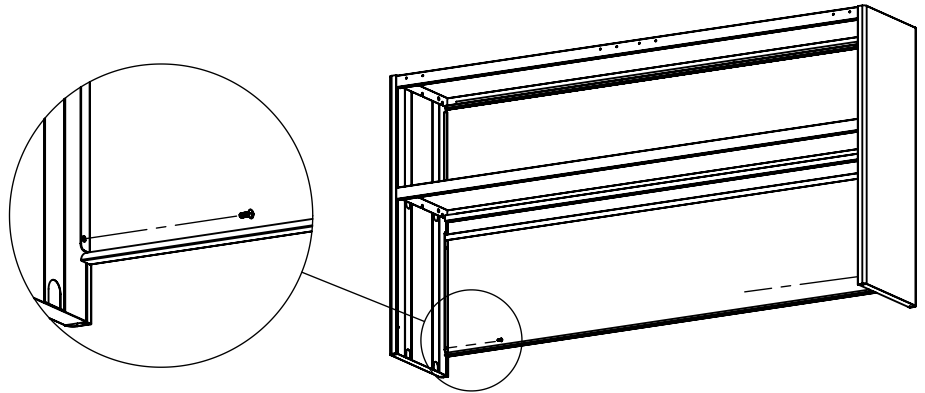

Take the TACKBOARD, and slide it up under the upper flange of the FRAME. Press it into the FRAME, and slide it down into the lower flange of the FRAME, as shown.

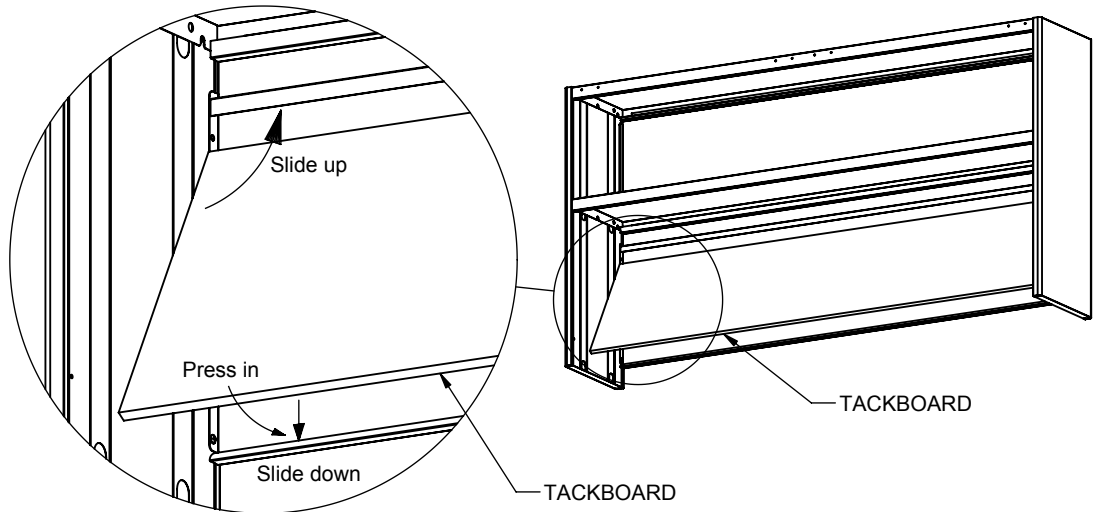

Your Tackboard is ready for use.

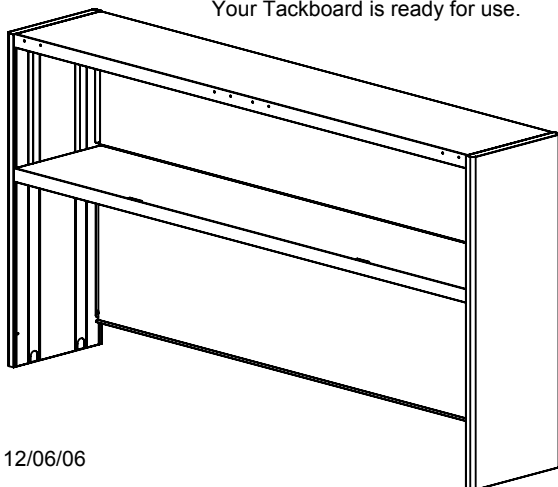

## PARTS LIST


QTY	DESCRIPTION	PART #
(1)	TACKBOARD (IN FRAME)	48"- 700107 60"- 700108 72"- 700109
(1)	METAL FRAME	48"- MG772888 60"- MG772889 72"- MG772890

### HARDWARE BAG:


(2)	BLACK SCREW (#10-24 X 1/2)	F09542
-----	----------------------------	--------

# ASSEMBLY INSTRUCTIONS- TRAINING TABLES

Before assembly, make sure that you have everything you need- check your parts against the parts list on the last page. If you are missing anything, please call us at 1-800-621-8846.

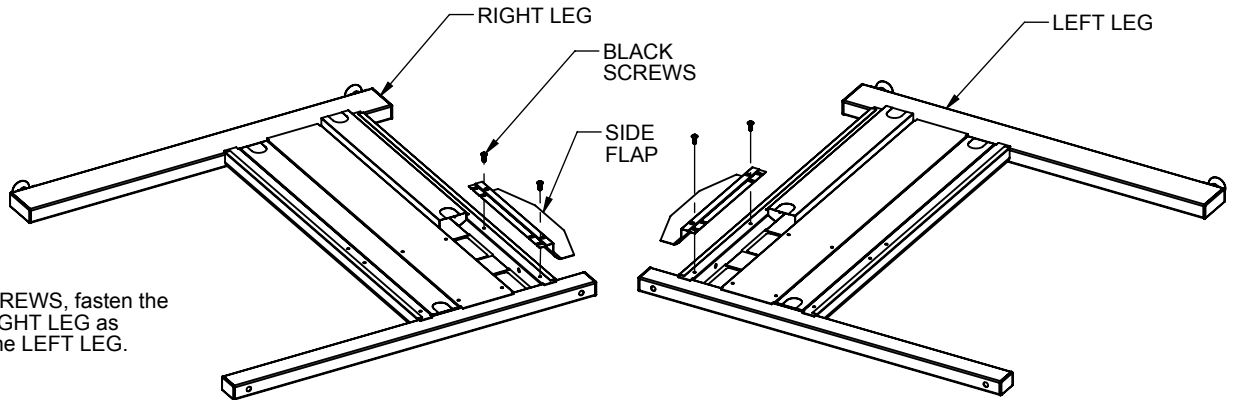

Using (2) BLACK SCREWS, fasten the SIDE FLAP to the RIGHT LEG as shown. Repeat for the LEFT LEG.

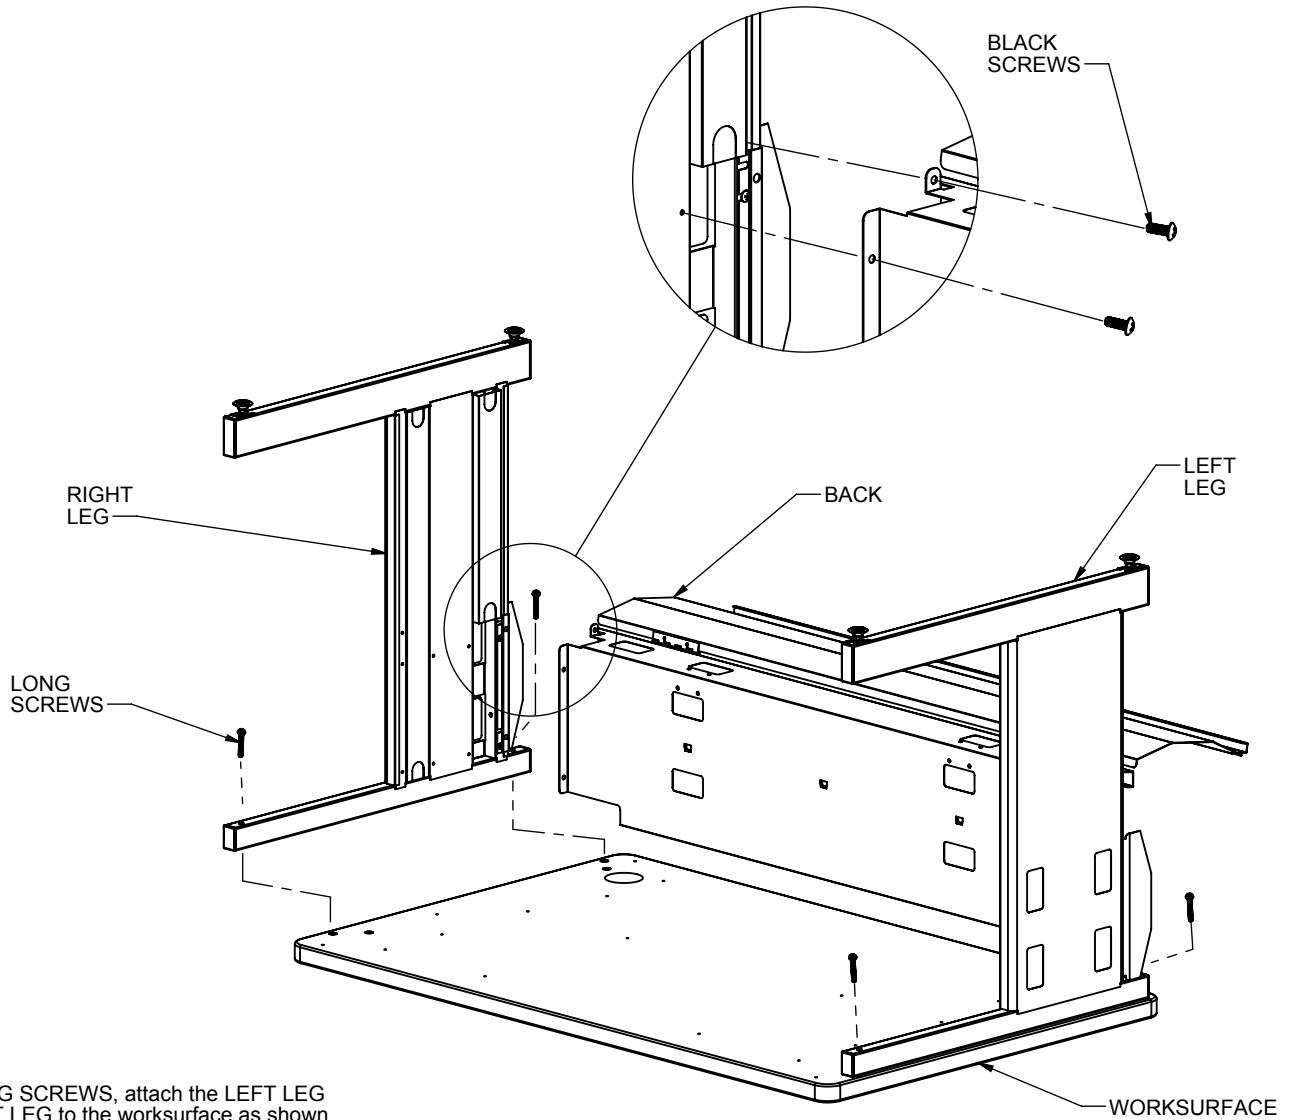


Using (4) LONG SCREWS, attach the LEFT LEG and the RIGHT LEG to the worksurface as shown.

Using (6) BLACK SCREWS (3 per side), attach the BACK to the two legs. (See detail)

(See Detail) Using (2) SILVER SCREWS (Use 4 on the larger tables), fasten the BACK to the WORKSURFACE.

Lock the door, and turn the table upright. Unlock the door.

(see below) Install SEPTUM into back, fitting the notches on the SEPTUM over the hooks in the BACK.

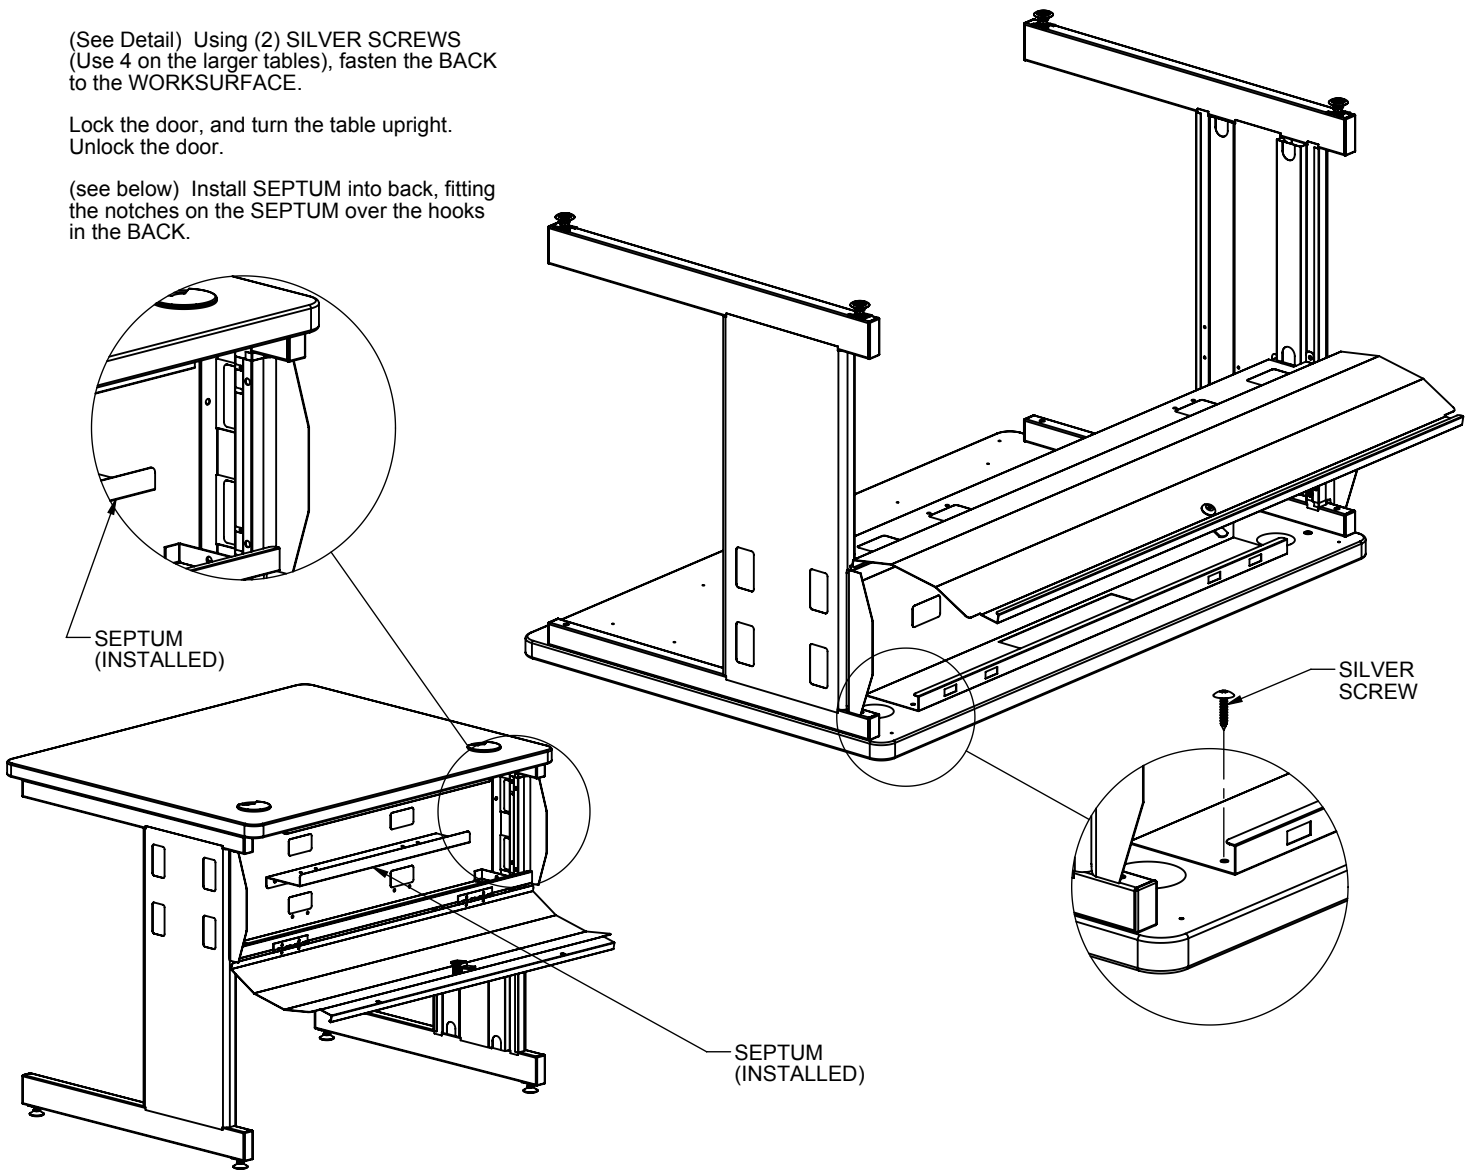

Turn the table right-side-up. Unlock the door, and open it.


Insert the SEPTUM into the BACK, attaching the slots into the stirrups in the BACK.

Insert (2) GROMMETS into the worksurface.

Use the (2) TIE BRACKETS provided to gang tables together.

Use the (2) ELECTRICAL BRACKETS (attached with BLACK SCREWS) to attach outlets and power cables to the inside of the back.

Your table can be cleaned with a soft cloth and mild cleaner.

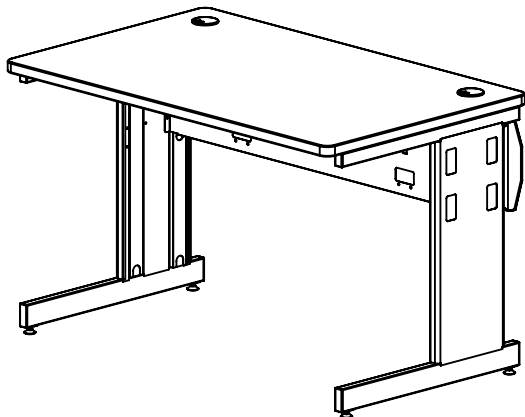

## PARTS LIST

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART NUMBER</u>
(1)	TOP (WORKSURFACE)	
(1)	LEG- LEFT HAND	772946 (24" DEEP) 772948 (30" DEEP)
(1)	LEG- RIGHT HAND	772947 (24" DEEP) 772949 (30" DEEP)
(2)	SIDE FLAP	772937
(1)	BACK (WITH DOOR)	
(1)	SEPTUM	

### HARDWARE BAG:

(4)	SILVER SCREW (#10 X 3/4)	F02886
(14)	BLACK SCREW (#10-24 X 1/2)	F09542
(4)	LONG SCREW	F03060
(2)	GROMMET WITH LID	PM0130
(2)	TIE BRACKET	772950
(2)	ELECTRICAL BRACKET	MS0225

# ASSEMBLY INSTRUCTIONS- RETURN


Before assembly, make sure that you have everything you need- check your parts against the parts list on the last page. If you are missing anything, please call us at 1-800-621-8846.

Place the TOP on a smooth flat surface, face down. Make sure nothing is underneath to scratch the top! A carpet is best, but you can also use the carton that the desk came in.

IF YOU WANT THE RETURN TO BE ON THE LEFT SIDE OF THE DESK, INSERT THE SHOULDER SCREWS IN THE LEFT SIDE (SEE NOTE!) IF ON THE RIGHT, THEN INSERT THEM INTO THE RIGHT SIDE. Insert (2) SHOULDER SCREWS into the inner two of the (4) inserts in each side of the TOP. Hand tighten only!


This instruction sheet shows a "RIGHT-HAND" return assembly. For a "LEFT HAND" assembly, screw the shoulder screws into the left side.

DETAIL A  
SCALE 1 : 4

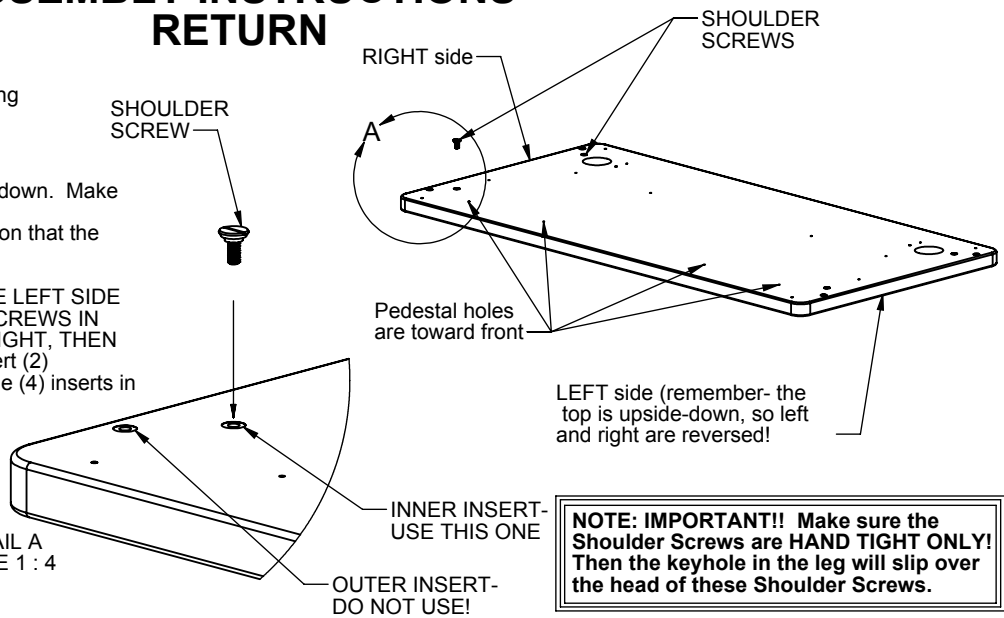


**NOTE: IMPORTANT!! Make sure the Shoulder Screws are HAND TIGHT ONLY! Then the keyhole in the leg will slip over the head of these Shoulder Screws.**

First: Place keyhole in leg over Shoulder Screw. (See Detail)  
NOTE- the holes in the leg should be toward the inside of the return.  
Slide leg forward until holes line up. Fix leg in place using (2) SILVER SCREWS per leg. (See Detail).  
Yes, the leg will feel loose until the back is installed.

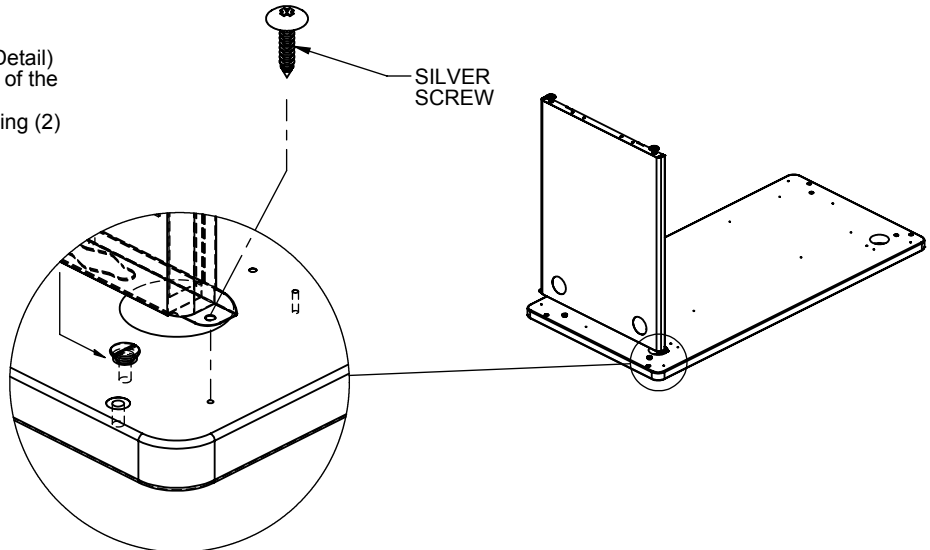

Attach BACK PANEL to LEG using (2) BLACK SCREWS. Attach to TOP using (2) SILVER SCREWS. Make sure wire channel on the BACK is away from the top.

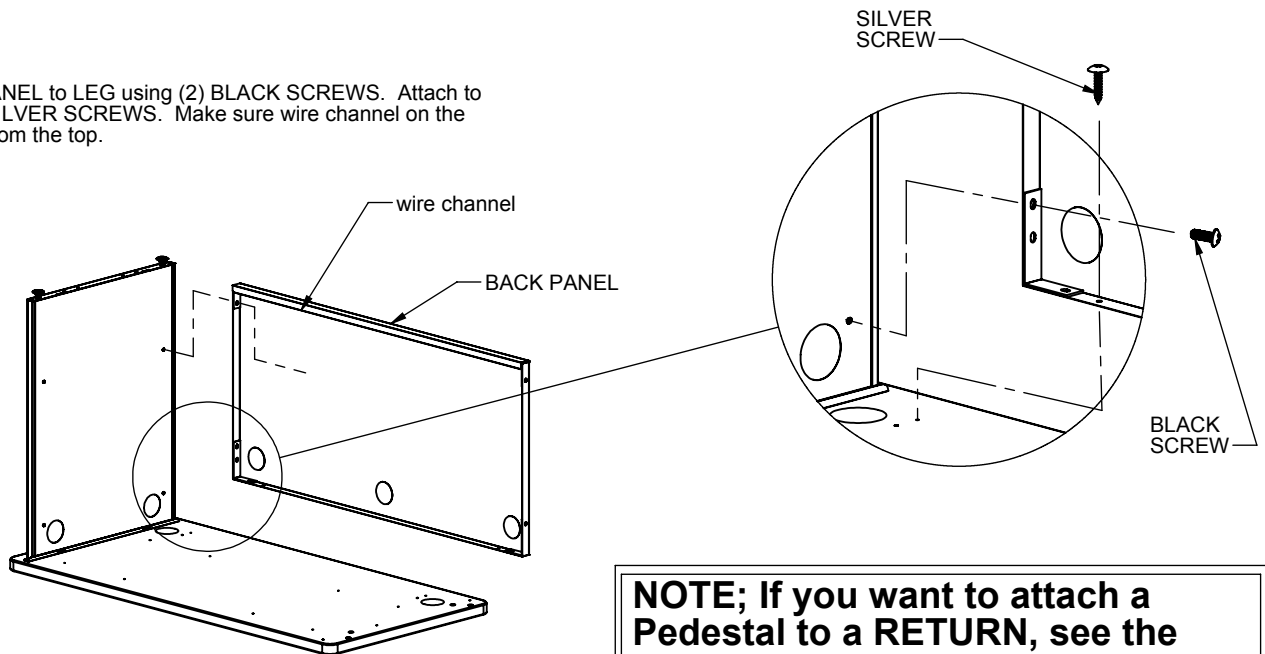

**NOTE; If you want to attach a Pedestal to a RETURN, see the DESK ASSEMBLY INSTRUCTIONS.**




# TACKBOARD ASSEMBLY


Before assembly, make sure that you have everything you need- check your parts against the parts list at the bottom of the page. If you are missing anything, please call us at 1-800-621-8846.

Remove the TACKBOARD from the metal FRAME. Set the TACKBOARD aside.


Align the metal FRAME with the Overshelf as shown. The holes in the flange at the top of the FRAME should align with the holes in the flange of the shelf.

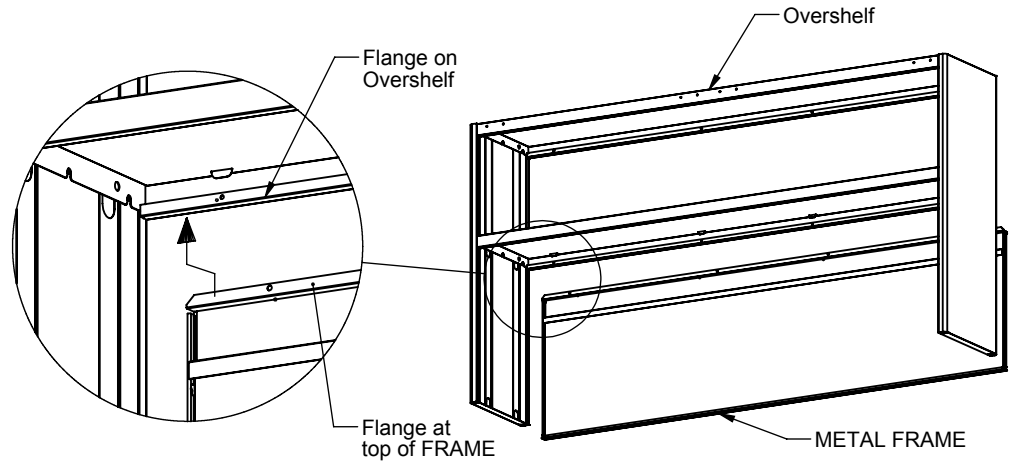


In the hardware bag, locate the six BLACK SCREWS. Line the hole in the FRAME with the hole in the side of the Overshelf. Screw the BLACK SCREWS into the sides- one on each side. Then screw in the four remaining screws into the lower shelf through the FRAME.

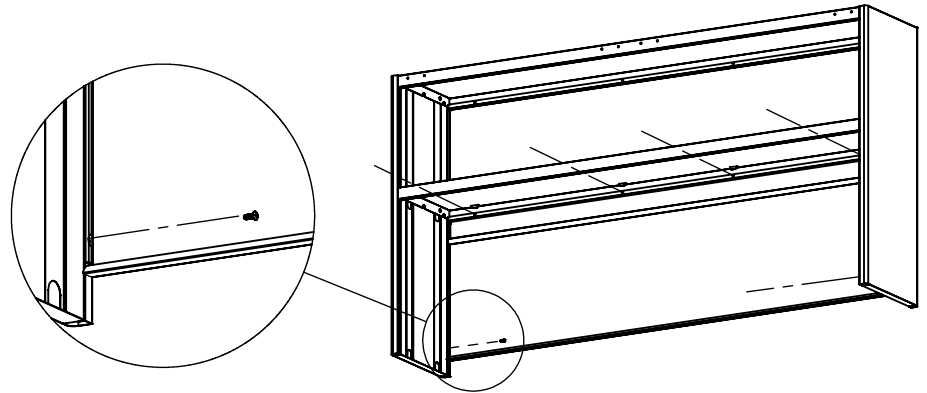

Take the TACKBOARD, and slide it up under the upper flange of the FRAME. Press it into the FRAME, and slide it down into the lower flange of the FRAME, as shown.

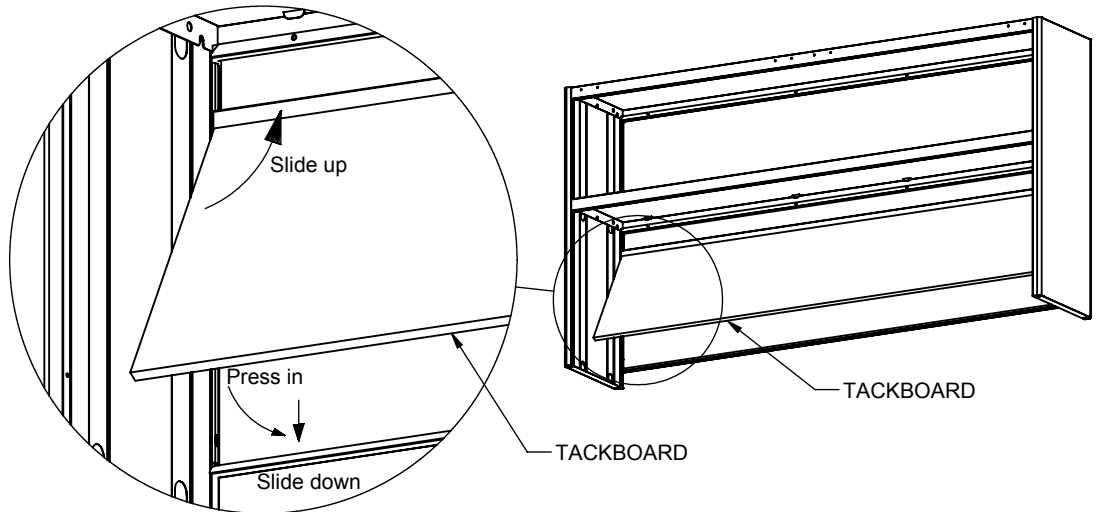

Your Tackboard is ready for use.


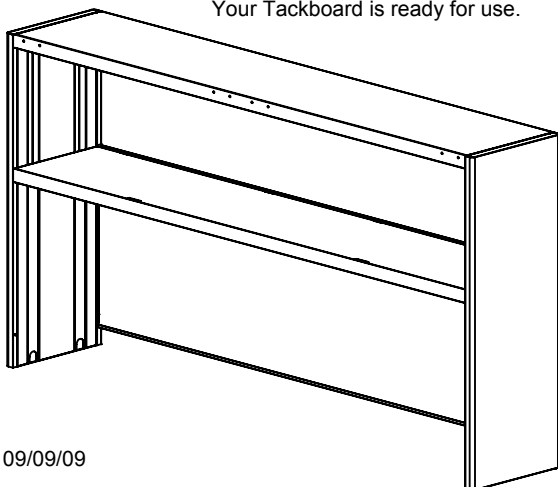


## PARTS LIST

QTY	DESCRIPTION
(1)	TACKBOARD (IN FRAME)
(1)	METAL FRAME


### HARDWARE BAG:

(6)	BLACK SCREW (#10-24 X 1/2)
-----	----------------------------

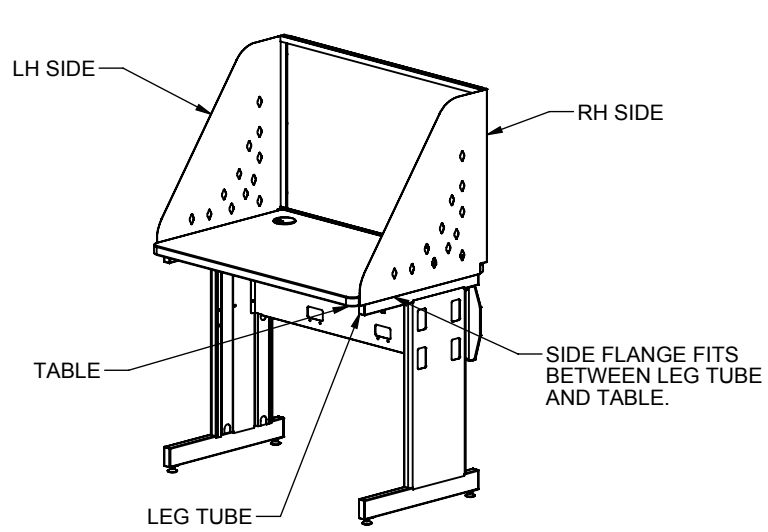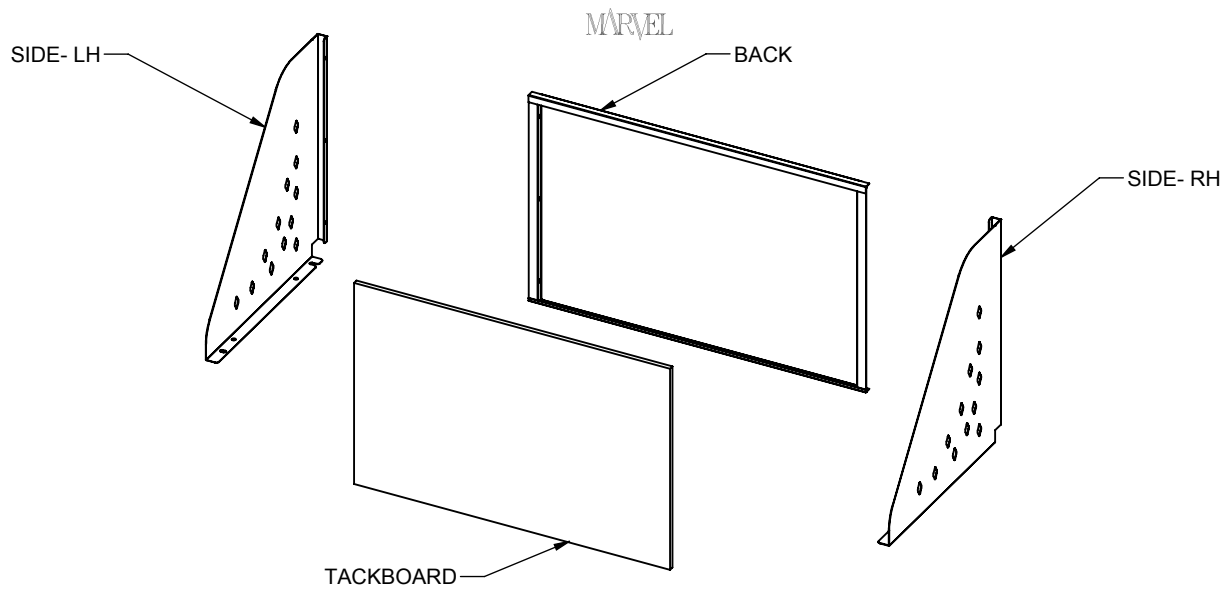


STEP 1- LOOSEN SCREWS THAT ATTACH THE TRAINING TABLE LEGS TO THE TRAINING TABLE. SLIDE THE LH AND RH SLIDES BETWEEN THE LEG TUBES AND THE TOPS.

DO NOT TIGHTEN SCREWS YET.

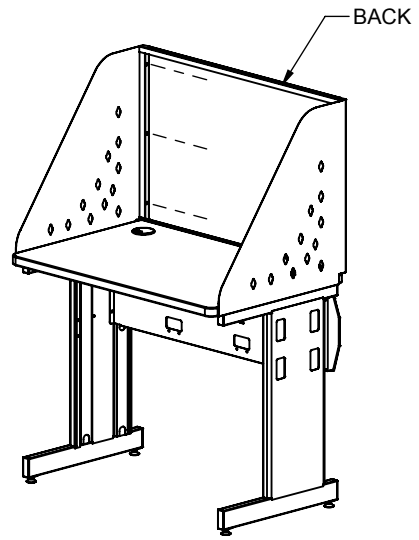


STEP 2- ATTACH BACK TO SIDES, USING THE FLAT HEAD SCREWS PROVIDED. MAKE SURE EVERYTHING IS SNUGGED UP.

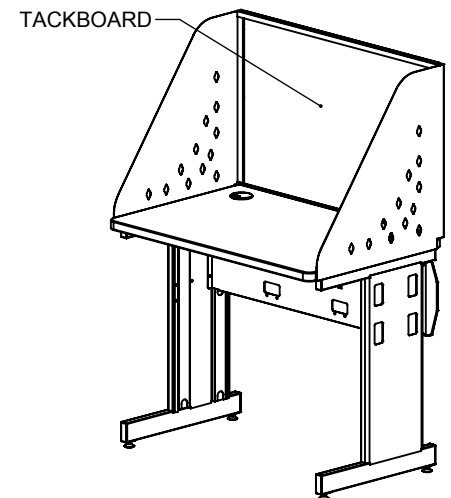

STEP 3-SLIP THE TACKBOARD INTO THE BACK.

TIGHTEN THE SCREWS ON THE TRAINING TABLE.

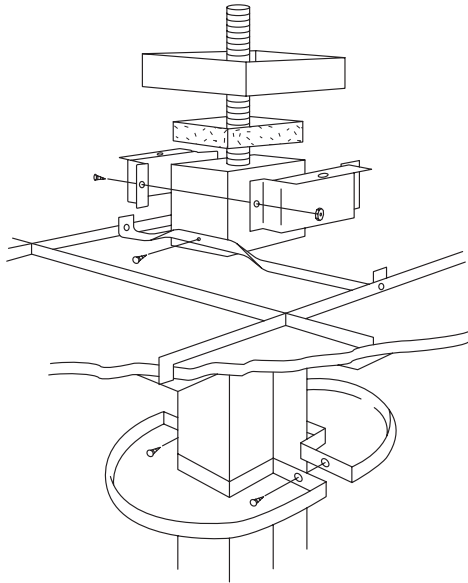

## Power Entries

### Base End Power Entry

No receptacles are displaced when using a base end power entry. Plug the end of the “whip” assembly into either a power block or harness jumper attached in a raceway.

*A certified electrician must attach the other end of the base power entry to the building power.*

### Power Pole – End of Run

Make sure a wedge block is attached to the end of the panel run. Attach the raceway cover plate to the bottom of the power pole with hardware provided. Place the cutout in the bottom of the power pole over the wedge block.

### Ceiling Attachment

- 1) Cut a 2 1/2" x 3 1/2" access hole in the ceiling tile directly above the ceiling power entry outside the footprint attachment point.
- 2) Cut the pole to size: top of pole should be about 4" above top of ceiling tile.
- 3) Push the top of the pole through the access hole in the ceiling tile.
- 4) Feed the base power entry through the cover and into the opening on the raceway frame end. Use the septum when running wires inside the pole.
- 5) Attach the power entry to the junction block. Match the curved terminal on the power entry to the curved terminal on the junction block. (See jumpers)
- 6) Install hanger strip: To gain access to the area, remove a ceiling tile adjacent to the location of the pole. Twist the hanger strip to lie flat against the pole. Use the provided 1/4-10" bolt, washer, and 1/4" nut to fasten the hanger strip to the pole. Drill 5/16" clearance holes through the ceiling grid. Fasten the hanger strip to the ceiling grid with the provided 1/4-20" bolt and 1/4" nuts. Tighten with a socket wrench. Insert the provided foam plug into top of the pole.
- 7) Install the mounting box assembly: Fit the halves of the mounting bracket together. Insert the provided #10-32 screws into the bracket holes to hold the halves together. Loosely thread nuts onto screws. Remove the center knockout from the electrical box (electrical box is supplied locally). Fit the assembly over the top of the pole. Once assembly is in position tighten nuts onto screws.
- 8) Install the trim bezel: Position the trim bezel halves around the pole. Snap the provided retaining clips through the holes in both trim bezel halves. Push trim bezel up against the ceiling tile. Replace the adjacent ceiling tile.

### NOTES



Hardware

See 2nd pg PARTS LIST for Hardware



Tools


1/4" hex socket bit

Power driver recommended

#2 Phillips bit

# POWER ENTRIES

## PECC132

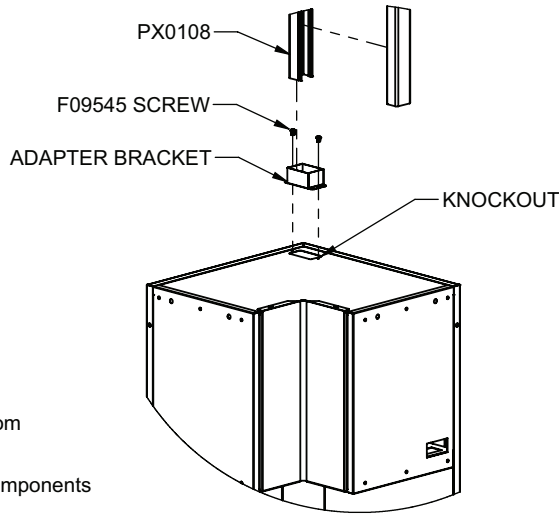


- 1) Remove KNOCKOUT from CORNER COLUMN.
- 2) Install POWER POLE components as show.

### PARTS LIST

Component	Qty	Description
914807	1	ADAPTER BRACKET
F01696	4	10-32X3/8 PH MACHINE SCREW
F03730	3	1/4-20 X 1 PH MACHINE SCREW
F09545	2	10-24X3/8 PH T/HD TF SCREW
F11770	4	10-32 KEPS LOCKNUT
F11876	3	1/4-20 KEPS NUT
F12178	3	1/4 FLAT WASHER
F37001	2	RATCHFAST FASTENER
MS0036	1	PERFORATED HANGING STRAP
MS0037	1	ELECTRICAL BOX
MS0047	1	ELECTRICAL BOX COVER
PM0078	2	TOP COVER HIPS
PX0108	2	11' PLASTIC CHANNEL

## PEDR132

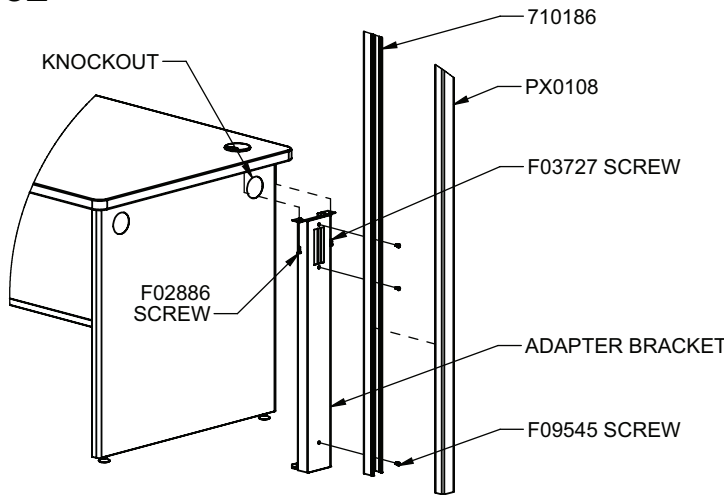


- 1) Remove KNOCKOUT from DESK LEG.
- 2) Install POWER POLE components as show.

### PARTS LIST

Component	Qty	Description
650850	1	ADAPTER BRACKET
710186	1	11' PLASTIC CHANNEL W/ CUTOUT
F01696	4	10-32X3/8 PH MACHINE SCREW
F02886	1	10 X 3/4 PH WOOD SCREW
F03727	1	1/4-20 X 1/2 PH MACHINE SCREW
F03730	3	1/4-20 X 1 PH MACHINE SCREW
F09545	3	10-24X3/8 PH TF SCREW
F11770	4	10-32 KEPS LOCKNUT
F11876	3	1/4-20 KEPS NUT
F12178	3	1/4 FLAT WASHER
F37001	2	RATCHFAST FASTENER
MS0036	1	PERFORATED HANGING STRAP
MS0037	1	ELECTRICAL BOX
MS0047	1	ELECTRICAL BOX COVER
PM0078	2	TOP COVER HIPS
PX0108	1	11' PLASTIC CHANNEL

## PETR132

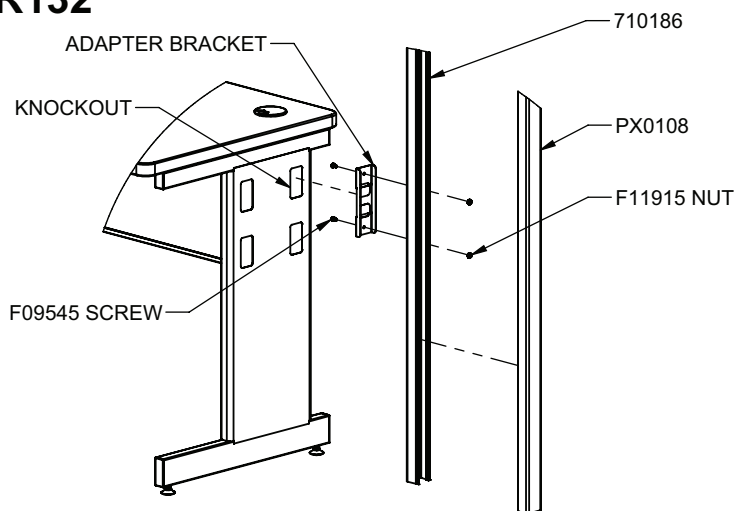

- 1) Assemble ADAPTER BRACKET to 710186 PLASTIC CHANNEL.
- 2) Remove KNOCKOUT from TRAINING TABLE LEG.
- 3) Align ADAPTER BRACKET over KNOCKOUT; bend BRACKET-flanges into opening & over KNOCKOUT edges.

### PARTS LIST


Component	Qty	Description
630727	1	ADAPTER BRACKET
710186	1	11' PLASTIC CHANNEL W/ CUTOUT
F01696	4	10-32X3/8 PH MACHINE SCREW
F03730	3	1/4-20 X 1 PH MACHINE SCREW
F09545	2	10-24X3/8 PH T/HD TF SCREW
F11770	4	10-32 KEPS LOCKNUT
F11876	3	1/4-20 KEPS NUT
F11915	2	10-24 KEPS LOCKNUT
F12178	3	1/4 FLAT WASHER
F37001	2	RATCHFAST FASTENER
MS0036	1	PERFORATED HANGING STRAP
MS0037	1	ELECTRICAL BOX
MS0047	1	ELECTRICAL BOX COVER
PM0078	2	TOP COVER HIPS
PX0108	1	11' PLASTIC CHANNEL

# ASSEMBLY INSTRUCTIONS

## TRAINING TABLE W/ MODESTY PANEL (PTRxxxxM)

### STEPS

- 1) Using (4) LONG SCREWS (No 13), attach LEFT LEG & RIGHT LEG to WORK SURFACE.
- 2) Using (4) BLACK SCREWS (No 14), (2 per side), attach MODESTY PANEL to the two LEGS.
- 3) Using (2) SILVER SCREWS (No 15), attach MODESTY PANEL to WORK SURFACE.

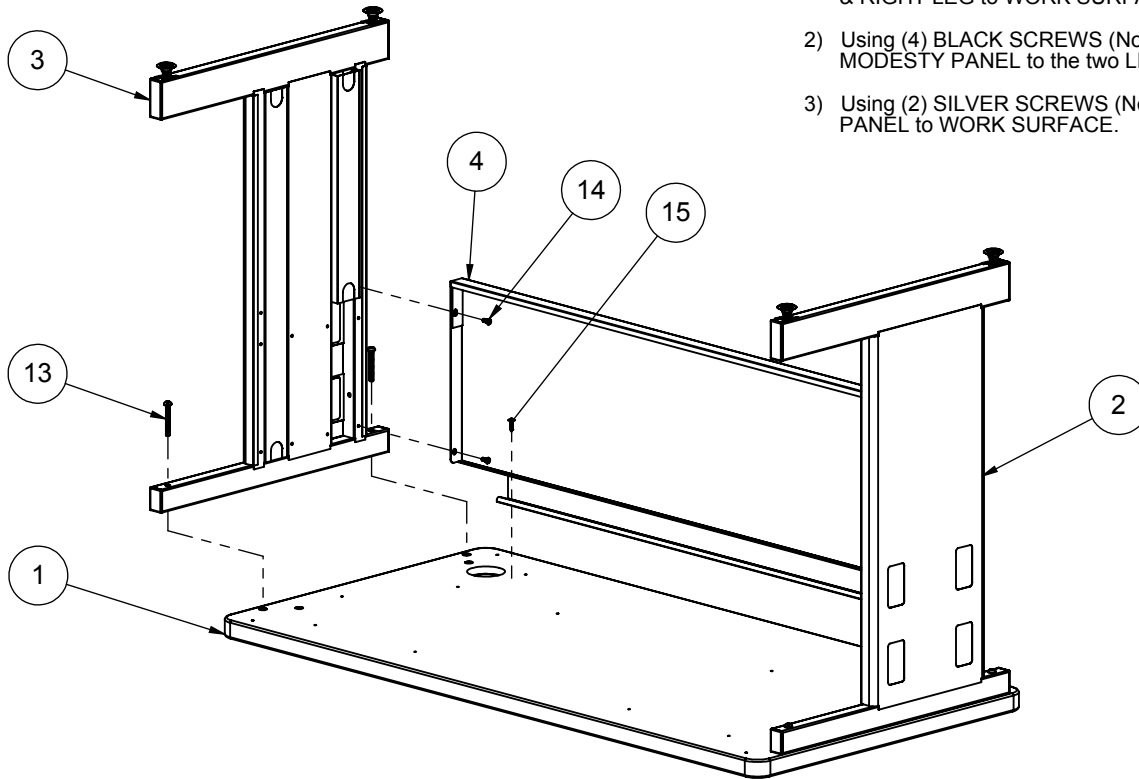

- 4) Turn the table right-side-up.
  - 5) Insert (2) GROMMETS (No 7) into the work surface.
  - 6) Use the (2) TIE BRACKETS (No 12) provided to gang tables together.
- Your table can be cleaned with a soft cloth & mild soap.

### PARTS LIST

ITEM NO	QTY	PART NO	DESCRIPTION
1	1		WORK SURFACE
2	1	772946	LEG - LH (24" DEEP)
		772948	LEG - LH (30" DEEP)
3	1	772947	LEG - RH (24" DEEP)
		772949	LEG - RH (30" DEEP)
4	1		MODESTY PANEL
5	4	PM0189	END CAP 1 X 1.5
6	4	PM0190	END CAP 1 X 2.5
7	2	PM0130	GROMMET W/ LID
8	2	772944	WIRE COVER- SHORT
9	2	772945	WIRE COVER- LONG
10	4	K10925	GLIDE 2.6" LG
11	4	F13866	5/16-18 H Nut
12	2	772950	TIE BRACKET

### HARDWARE LIST

13	4	F03060	1/4-20 x2 PH/RH M SCREW
14	4	F09542	#10-24 X 1/2" PH/RH TF SCREW
15	2	F02886	#10 X 3/4 PH TR/HD SM SCREW

