

● USE AND CARE

- Mandoline is ideal for cutting, slicing, grating and julienning
- Mandoline includes four easy-to-change blades
- Mandoline adjusts to three thickness settings with the touch of your thumb
- Side grooves allow mandoline to fit assorted bowl sizes
- Chop lid and two blades ideal for chopping and fine dicing
- Non-skid base keeps mandoline and chopper/dicer in place while working on flat surface
- 6 Cup / 1.5L capacity container and bonus lid included for easy storage

● CLEANING

- Top rack dishwasher safe.
- Hand washing recommended to extend the life of the blades.

● CAUTION

- The Allrecipes™ Adjustable Mandoline & Chopper/Dicer features extremely sharp cutting surfaces. Use caution with the blades and keep them out-of-reach of children at all times.


● MANDOLINE USAGE

- MANDOLINE CAN FUNCTION IN 3 WAYS:



1. With a cutting board: Hold mandoline at a 45-degree angle on a flat surface. Hold hand guard and slide up and down to slice.

● MANDOLINE USAGE (CONTINUED)

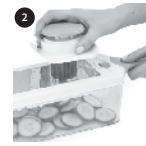

2. On the base/storage container: Securely place mandoline over storage container. Slide hand guard in a back-and-forth motion to slice.




3. Over a bowl: Securely place the mandoline over a bowl using the side groove as a guide. Slide hand guard in a back-and-forth motion to slice.


● MANDOLINE INSTRUCTIONS

- TO USE SLICER/JULIENNE BLADE:

1. Insert slicer/julienne blade into compartment until you hear a click.

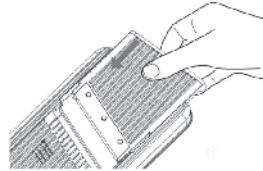

2. Adjust thumb switch clockwise for thinner slice/julienne and counter-clockwise for thicker slice/julienne.

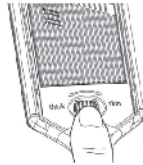


Straight slice/julienne:
Setting 1 = Thin (1mm)
Setting 2 = Medium (3mm)
Setting 3 = Thick (5mm)

- TO USE SLICER/JULIENNE BLADE (Continued):

3. Secure food with hand guard.

4. Hold the hand guard and slide back and forth to slice food.

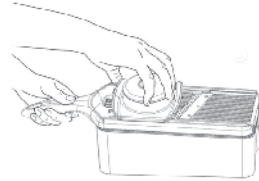


ALWAYS USE HAND GUARD TO PREVENT INJURY.

- TO USE GRATER:

1. Set adjustable plate to locked position by turning the thickness dial clockwise until it snaps in place.




2. Insert grater blade into blade compartment.

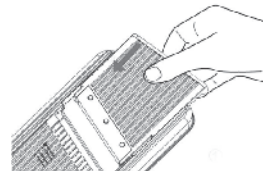

- TO USE GRATER (Continued):


3. Attach food to hand guard, then slide back and forth.

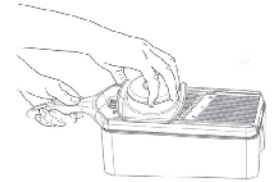


ALWAYS USE HAND GUARD TO PREVENT INJURY.

- REMOVING THE BLADE:

Place finger into finger slot and gently lift up.

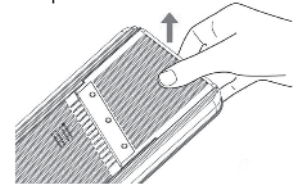


Carefully pull interchangeable blade away from the mandoline.

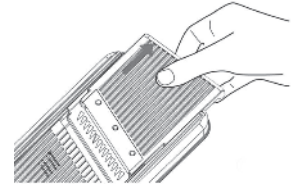

● CHOPPER/DICER INSTRUCTIONS


• TO ASSEMBLE CHOPPER/DICER:

To assemble the chop lid, push the two buttons inward to draw back the pivots and slide the chopping pusher in from underneath. Release the two buttons to lock-in chopping pusher.

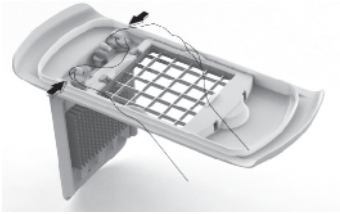


• TO USE CHOPPER/DICER:

1. Securely place chop lid over storage container.
2. Place the item to be cut in the center of the cutting blade with a flat side facing down.
3. Press down with two hands on the chopping pusher to chop or dice.

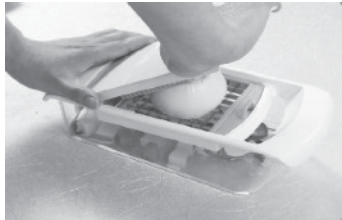

• TO CLEAN CHOPPER/DICER:

1. Turn the chop lid upside down and press the two buttons inward to release the chopping pusher from the chop lid for easy cleanup.

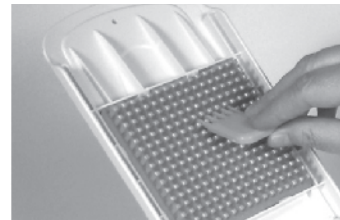

LIMITED ONE-YEAR WARRANTY

Clipper Corporation (Clipper) warrants the Allrecipes™ Adjustable Mandoline & Chopper/Dicer to be free of defects in material and workmanship under normal household use for one (1) year after the date of purchase.

Clipper agrees to repair or replace, at its option, any item found defective in material, construction or workmanship under normal household use as long as these use and care instructions are followed. The warranty does not apply to damage caused by misuse, abuse, overheating, altered product or commercial use.

This warranty is limited to the original consumer with receipt or proof of purchase and is not transferable. If the product was not purchased new from an authorized dealer, distributor, or representative of the manufacturer, this warranty is null and void.

Clipper's liability under this warranty is limited to the repair or replacement of the defective product at Clipper's sole option. Clipper shall not be liable for any special, punitive, incidental, or consequential damages, whether direct or indirect. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

To obtain warranty service, contact Clipper Corporation at 877.533.2547 during normal business hours of 9 a.m. to 5 p.m. PST, Monday through Friday. Provide model number, description, and date of original purchase along with a copy of your receipt from an authorized dealer.



Allrecipes™ is a trademark of Allrecipes.com, Inc., a subsidiary of Meredith Corporation. Used under license by Clipper Corporation. ©2016 Meredith Corporation.

Clipper Corporation
21124 Figueroa Street
Carson, CA 90745 USA
877.533.2547

Specifications subject to change without notice.

50-ARMA-A10916



allrecipes™

Adjustable Mandoline & Chopper/Dicer

- Storage Container
- Storage Container Lid
- Mandoline Handle
- Mandoline Hand Guard
- Mandoline Julienne Slicer
- Mandoline Slicer
- Mandoline Fine Grater
- Mandoline Coarse Grater
- Dicer Chop Lid
- Dicer Medium Blade
- Dicer Fine Blade
- Dicer Cleaning Tool

Warranty, Use & Care Guidelines