

CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

 Default Setting

Cycle	Fabric or Load Type	Wash Temp.	Spin Speed	Soil Level	Soak	Stain Care™	Cold Wash™	Extra Rinse	Water Plus	Turbo Wash™
Normal	Cotton, linen, towels, shirts, sheets, jeans, mixed loads	Hot	Extra high	Heavy						
		Warm	High							
		Semi Warm	Medium	Normal	●	●	●	●	●	●
		Cold	No spin	Light						
Heavy Duty	Heavily soiled cotton fabrics	Hot	Extra high	Heavy						
		Warm	High							
		Semi Warm	Medium	Normal	●	●		●	●	●
		Cold	Low	Light						
Bulky	Large items such as blankets and comforters	Hot		Heavy						
		Warm								
		Semi Warm	Medium	Normal	●		●	●		
		Cold	Low	Light						
Bright Whites™	White fabrics	Hot	Extra High	Heavy						
		Warm	High							
		Semi Warm	Medium	Normal	●			●	●	●
		Cold	Low	Light						
OXI SANITIZE™	Cotton, underwear, pillow covers, bed sheets, baby wear. (less than 11 lbs.)	Hot	Extra high	Heavy						
			High							
			Medium	Normal				●	●	●
			Low	Light						
Tub Clean	Refer to page 27.	Hot	High							
				Light						

* Use the BULKY cycle for items such as pillows, comforters, pet bedding and other articles which have difficulty absorbing water. DO NOT WASH EXCESSIVELY LARGE ITEMS. If large/bulky items do not fit easily into the tub, there may not be enough room for them to move during washing. Keep like items together; do not mix large bulky items with smaller clothing items. Failure to follow these instructions may result in damage to the clothing or to the washer.