

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8.00 a.m. – 6.00 p.m., EST, Monday-Friday
1-877-527-0313
HOMEDEPOT.COM

Care and Maintenance

Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. Treat frame with a one-step liquid wax for maximum protection against UV light and salty, damp air. When not in use, store furniture in a cool, dry place or cover with outdoor furniture covers to protect from the elements. If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water. Rinse cushion thoroughly and allow to drip dry. **Do not machine wash or tumble dry, as cushions may shrink.** Do not use bleach or solvents on fabrics. When cleaning the tabletop make sure to use a soft, clean cloth that doesn't bleed color as well.