

"TENNYSON" FIREPLACE

FA8544AO - IVORY

FA8545AO - ESPRESSO

FA8546AO - PLANTATION OAK

FA8547AO - CLASSIC MAHOGANY

FA8543AO - GLAZED PINE

Assembly Instructions

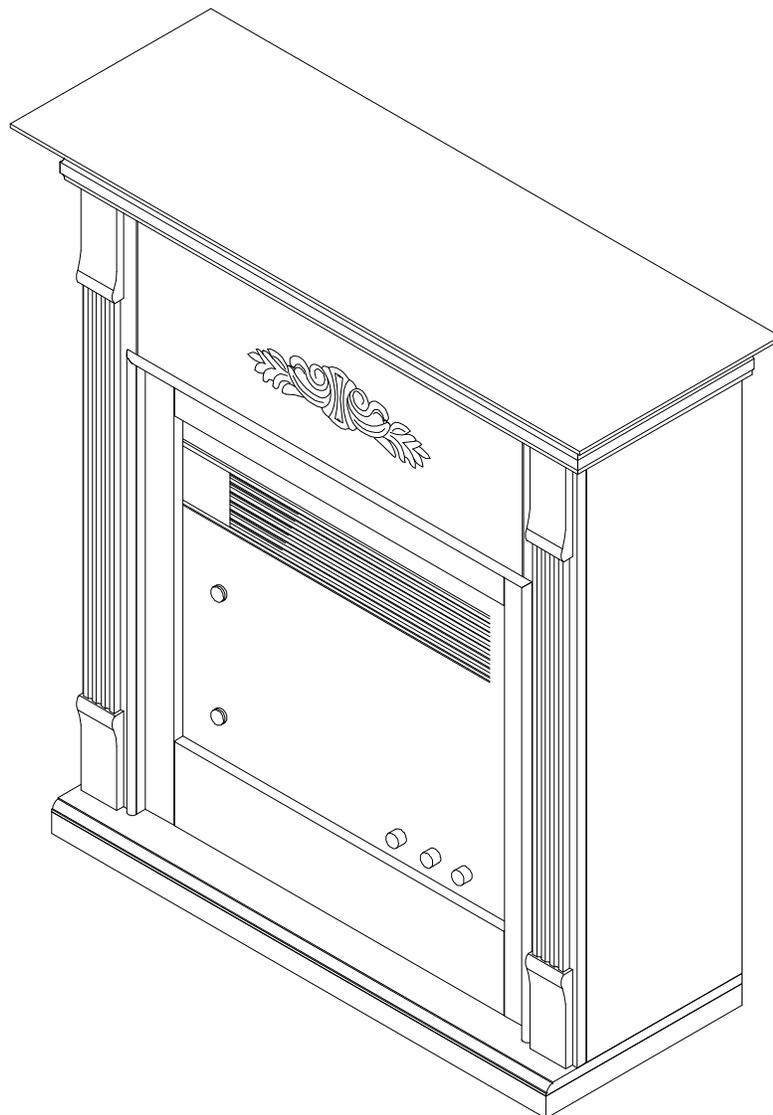


For assistance with assembly contact:
Southern Enterprises Inc.

Customer Service 1-800-633-5096

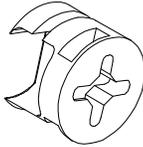
service@seidal.com

www.seidal.com



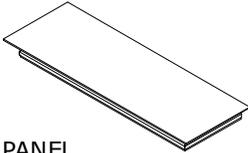
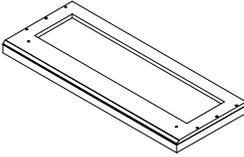
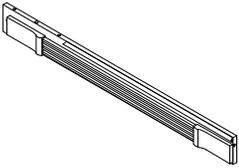
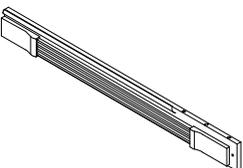
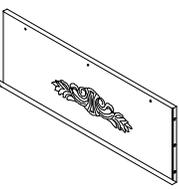
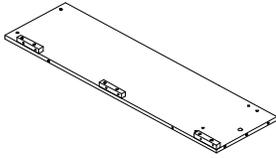
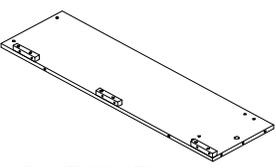
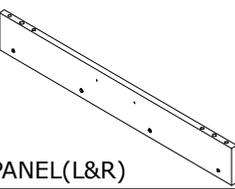
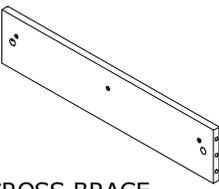
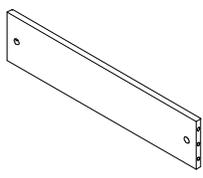
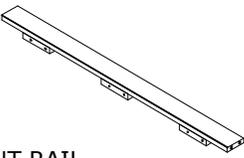
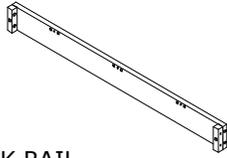
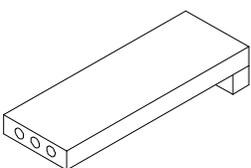
 
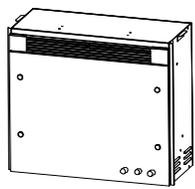
" TENNYSON " FIREPLACE Parts List

Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using a screw that is too long will cause damage.
Before beginning assembly, separate each type of screw. Carefully study the
screw diagrams below. You may receive extra hardware with your unit.

<p>A</p>  <p>Quantity of 11</p> <p>CAM BOLT</p>	<p>B</p>  <p>Quantity of 42</p> <p>WOOD DOWEL</p>
<p>C</p>  <p>Quantity of 11</p> <p>CAM LOCK</p>	<p>D</p>  <p>Quantity of 49</p> <p>FLAT HEAD LONG SCREW</p>

" TENNYSON "FIREPLACE Parts List

Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using a screw that is too long will cause damage.
Before beginning assembly, separate each type of screw. Carefully study the
screw diagrams below. You may receive extra hardware with your unit.

<p>(1) Quantity of 1</p>  <p>TOP PANEL</p>	<p>(2) Quantity of 1</p>  <p>BASE</p>	<p>(3) Quantity of 1</p>  <p>LEFT FRONT PANEL</p>
<p>(4) Quantity of 1</p>  <p>RIGHT FRONT PANEL</p>	<p>(5) Quantity of 1</p>  <p>MIDDLE FRONT PANEL</p>	<p>(6) Quantity of 1</p>  <p>LEFT SIDE PANEL</p>
<p>(7) Quantity of 1</p>  <p>RIGHT SIDE PANEL</p>	<p>(8) Quantity of 2</p>  <p>BACK PANEL(L&R)</p>	<p>(9) Quantity of 1</p>  <p>UPPER CROSS BRACE</p>
<p>(10) Quantity of 1</p>  <p>LOWER CROSS BRACE</p>	<p>(11) Quantity of 1</p>  <p>FRONT RAIL</p>	<p>(12) Quantity of 1</p>  <p>BACK RAIL</p>
<p>(13) Quantity of 3</p>  <p>WOOD CONNECTER</p>	<p>(14) Quantity of 2</p>  <p>WOOD HOLDER</p>	<p>Quantity of 1</p>  <p>FIREBOX SOLD IN A SEPARATE CARTON</p>

Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth.
Periodically apply furniture wax to renew the finish . Avoid rubbing or scratching the surface with rough or abrasive objects.

For replacement parts or questions, please
Call Customer Service at 1-800-633-5096
Do not return product to store, please call
Manufacturer for assistance, questions or
Parts.

Assembly Tool Required
No.2 Phillips Screwdriver (Not Included)



" TENNYSON " FIREPLACE Assembly Instructions

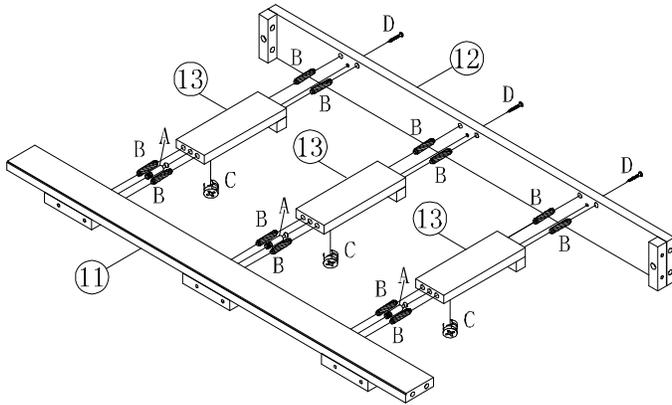


Figure 1

INSERT 3PCS CAM-BOLT (A), AND 12PCS WOOD DOWEL (B) INTO PREDRILLED HOLES ON FRONT AND BACK RAILS (11&12) , AND FIT INTO CORRESPONDING HOLES ON ENDS OF WOOD CONNECTER (13). INSERT 3PCS CAM-LOCK (C) INTO BIG HOLES ON UNDERSIDE OF WOOD CONNECTER (13) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCK (C) CLOCKWISE TO SECURE CAM-BOLT (A). THEN INSERT 3PCS FLAT HEAD LONG SCREW (D) THROUGH PREDRILLED HOLES ON BACK RAIL (12) AND TIGHTEN INTO END OF WOOD CONNECTER (13). AS FIGURE 1 SHOWN.

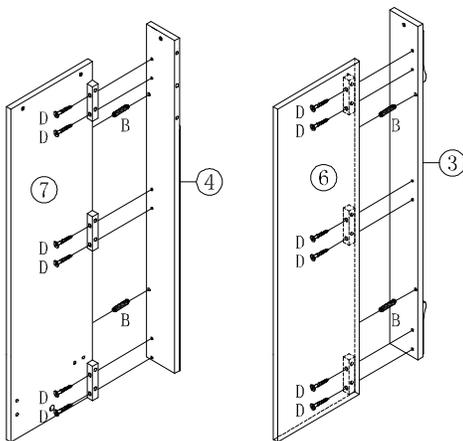


Figure 2

INSERT 4PCS WOOD DOWELS (B) INTO PREDRILLED HOLES ON LEFT AND RIGHT SIDE PANELS (6 & 7) AND FIT INTO CORRESPONDING HOLES ON LEFT AND RIGHT FRONT PANELS (3 & 4). INSERT 12PCS FLAT HEAD LONG SCREW (D) THROUGH PREDRILLED HOLES ON WOOD BARS ON INSIDE OF LEFT AND RIGHT SIDE PANELS (6.7) AND TIGHTEN INTO CORRESPONDING HOLES ON BACK OF LEFT AND RIGHT FRONT PANELS (3.4). AS FIGURE 2 SHOWN.

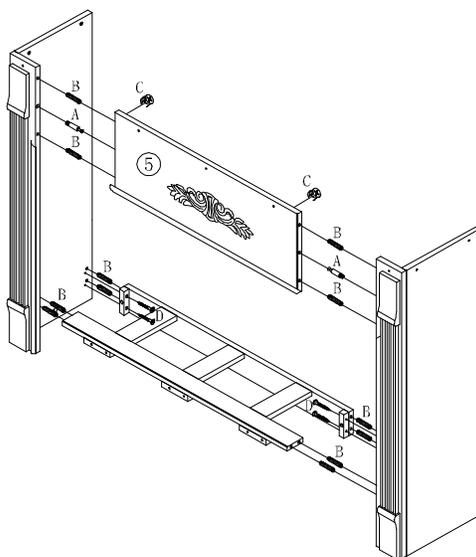


Figure 3

INSERT 2PCS CAM-BOLTS (A), 12PCS WOOD DOWELS (B) INTO PREDRILLED HOLES ON EDGES OF LEFT AND RIGHT FRONT PANELS (3.4), LEFT AND RIGHT SIDE PANELS (6.7) AND FIT INTO CORRESPONDING HOLES ON ENDS OF PARTS (5,11.12). INSERT 2PCS CAM-LOCKS (C) INTO BIG HOLES ON BACK OF MIDDLE FRONT PANEL (5) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (C) CLOCKWISE TO SECURE CAM-BOLTS (A). INSERT 4PCS FLAT HEAD LONG SCREW (D) THROUGH PREDRILLED HOLES ON END OF BACK RAIL (12) AND TIGHTEN INTO CORRESPONDING HOLES ON INSIDE OF LEFT AND RIGHT SIDE PANELS (6&7). AS FIGURE 3 SHOW

" TENNYSON "FIREPLACE Assembly Instructions

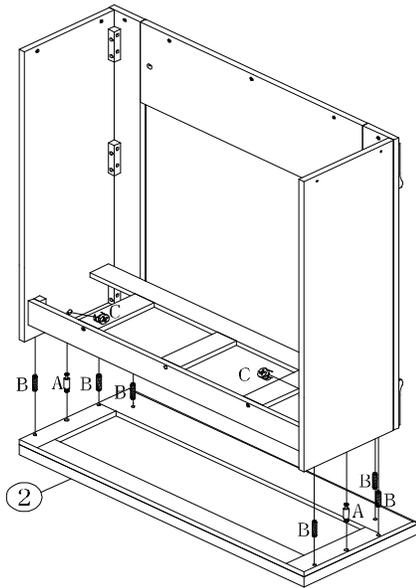


Figure 4

INSERT 2PCS CAM-BOLTS (A) AND 6PCS WOOD DOWELS (B) INTO PREDRILLED HOLES ON UPSIDE OF BASE (2) AND FIT INTO CORRESPONDING HOLES ON BOTTOM EDGES OF THE ASSEMBLED UNIT. INSERT 2PCS CAM-LOCKS (C) INTO BIG HOLES ON INSIDE OF LEFT AND RIGHT SIDE PANELS (6&7) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (C) CLOCKWISE TO SECURE CAM-BOLTS (A). AS FIGURE 4 SHOWN.

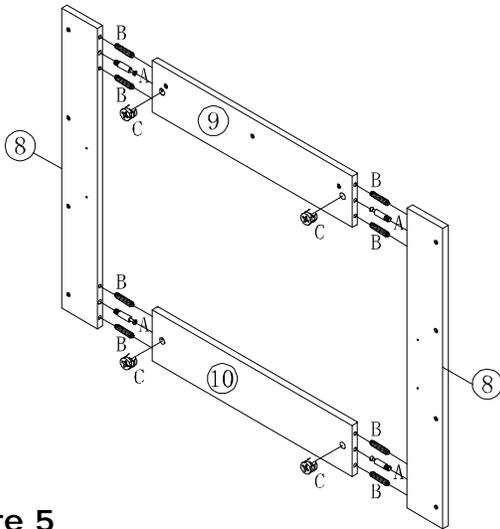


Figure 5

INSERT 4PCS CAM-BOLTS (A) AND 8PCS WOOD DOWELS (B) INTO PREDRILLED HOLES ON EDGES OF LEFT AND RIGHT BACK PANELS (8) AND FIT INTO CORRESPONDING HOLES ON ENDS OF UPPER AND LOWER CROSS BRACE (9&10). INSERT 4PCS CAM-LOCKS (C) INTO BIG HOLES ON BACK OF UPPER AND LOWER CROSS BRACE (9&10) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (C) CLOCKWISE TO SECURE CAM-BOLTS (A). AS FIGURE 5 SHOWN.

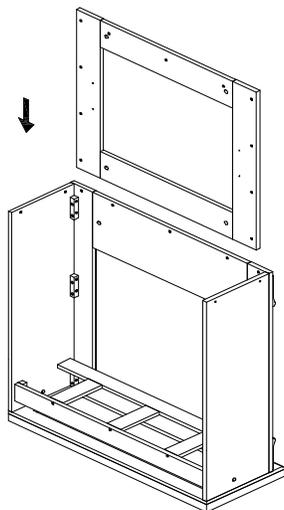


Figure 6

INSERT THE FRAME ON BACK OF ABOVE UNIT ONTO CORRESPONDING FRAME UPRIGHTLY.

" TENNYSON "FIREPLACE Assembly Instructions

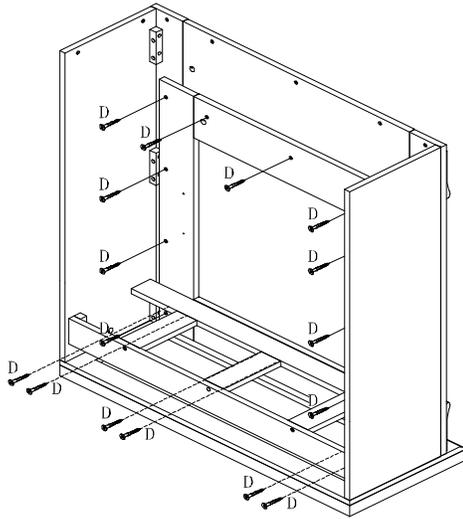


Figure 7

INSERT 17PCS WOOD SCREWS (D) THROUGH PREDRILLED HOLES ON PARTS (8,9,10) AND TIGHTEN IT CLOCKWISE.

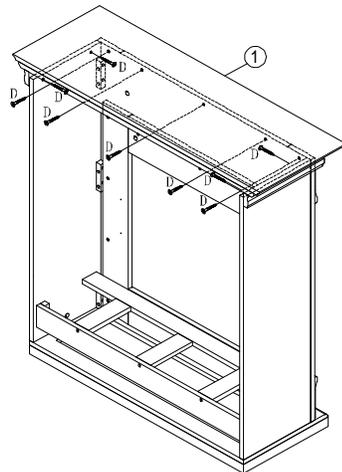


Figure 8

PLACE TOP PANEL (1) ONTO TOP EDGES, ATTACH IT TO THE UNIT BY USING 9PCS FLAT HEAD LONG SCREW (D) AS FIGURE 8 SHOWN.

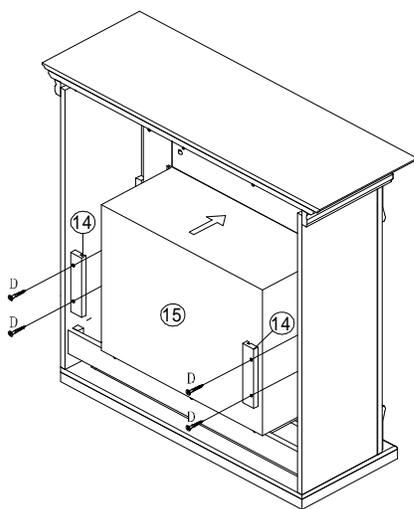
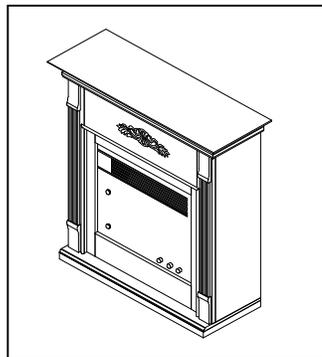


Figure 9

INSERT THE FIREBOX TO THE UNIT. MAKE SURE THE FIREBOX IS PRESSED TIGHTLY AGAINST THE ASSEMBLED UNIT. ATTACH THE WOOD HOLDERS (14) ON THE SIDES OF FIREBOX (15). INSERT 4PCS FLAT HEAD LONG SCREW (D) THROUGH PREDRILLED HOLES ON WOOD HOLDER (14) AND TIGHTEN INTO CORRESPONDING HOLES ON BACK OF LEFT AND RIGHT BACK PANELS (8). AS FIGURE 9 SHOWN.





Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas, 75019

FA8543/44/45/46/47AO - Parts Replacement Form

Customer Information

Name _____

Address _____

City/State/Zip Code _____

Phone Number _____

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Missing or damaged hardware and/or parts will be replaced free of charge. We do not sell parts. Southern Enterprises Inc. will provide replacement parts for only those items purchased within the last 9 months. If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled. Parts will be sent if available from SEI

Please contact Southern Enterprises at 800-633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues with your purchase. Please ask for a customer service representative for issues involving damages or replacement parts. Please ask for a technical assistance representative for any issues with product assembly and product construction.

Please contact the retailer that you purchased from for returns.

We'd love to hear from you! Email us photos of our products in your home at sei@seidal.com and we might feature it on our site or use it to model one of our inspirational photos.

"TENNYSON" PAIR OF BOOKCASES

FA8544BO - IVORY

FA8545BO - ESPRESSO

FA8546BO - PLANTATION OAK

FA8547BO - CLASSIC MAHOGANY

FA8543BO - GLAZED PINE

Assembly Instructions



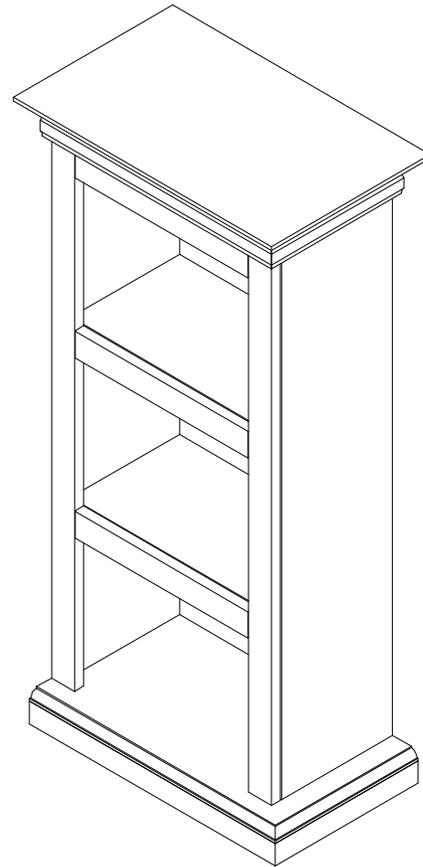
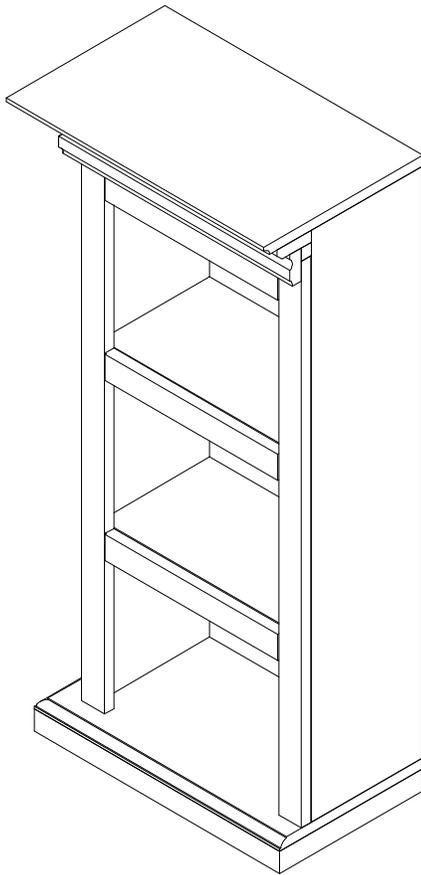
For assistance with assembly contact:

Southern Enterprises Inc.

Customer Service 1-800-633-5096

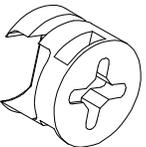
 
 
service@seidal.com

www.seidal.com



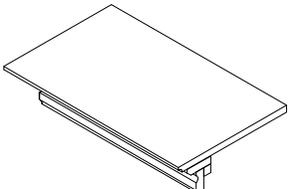
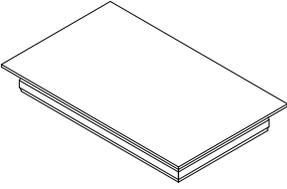
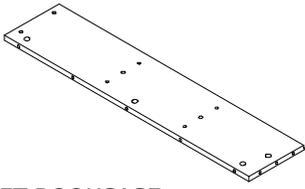
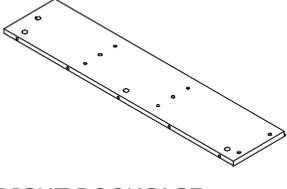
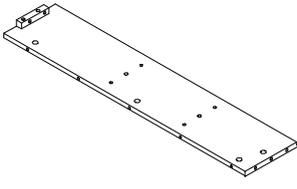
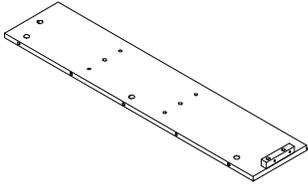
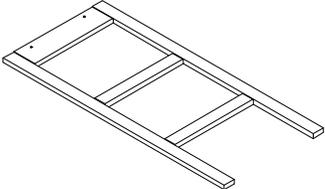
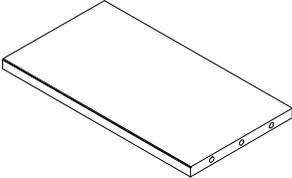
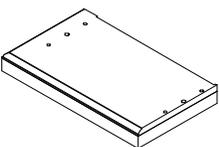
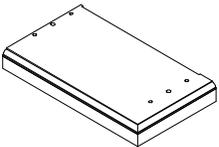
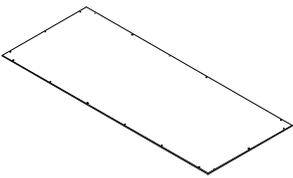
" TENNYSON "PAIR OF BOOKCASES Parts List

Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware. Do not return to store/retailer.
Using a screw that is too long will cause damage.
Before beginning assembly, separate each type of screw. Carefully study the
screw diagrams below . You may receive extra hardware with your unit.

<p>A</p>  <p>Quantity of 24</p> <p>CAM BOLT</p>	<p>B</p>  <p>Quantity of 32</p> <p>WOOD DOWEL</p>
<p>C</p>  <p>Quantity of 24</p> <p>CAM LOCK</p>	<p>D</p>  <p>Quantity of 12</p> <p>FLAT HEAD LONG SCREW</p>
<p>E</p>  <p>Quantity of 16</p> <p>COVER</p>	<p>F</p>  <p>Quantity of 36</p> <p>WOOD SCREW</p>

"TENNYSON" PAIR OF BOOKCASES Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

<p>(1)  Quantity of 1</p> <p>LEFT BOOKCASE TOP</p>	<p>(2)  Quantity of 1</p> <p>RIGHT BOOKCASE TOP</p>
<p>(3)  Quantity of 1</p> <p>LEFT SIDE OF LEFT BOOKCASE</p>	<p>(4)  Quantity of 1</p> <p>RIGHT SIDE OF RIGHT BOOKCASE</p>
<p>(5)  Quantity of 1</p> <p>LEFT SIDE OF RIGHT BOOKCASE</p>	<p>(6)  Quantity of 1</p> <p>RIGHT SIDE OF LEFT BOOKCASE</p>
<p>(7)  Quantity of 2</p> <p>FRONT FRAME</p>	<p>(8)  Quantity of 4</p> <p>FIXED SHELF</p>
<p>(9)  Quantity of 1</p> <p>LEFT BOOKCASE BASE</p>	<p>(10)  Quantity of 1</p> <p>RIGHT BOOKCASE BASE</p>
<p>(11)  Quantity of 2</p> <p>BACK PANEL</p>	

Care and Cleaning Instructions:
 Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

For replacement parts or questions, please Call Customer Service at 1-800-633-5096 Do not return product to store, please call Manufacturer for assistance, questions or Parts.

Assembly Tool Required
 No.2 Phillips Screwdriver (Not Included)



" TENNYSON "PAIR OF BOOKCASES Assembly Instructions

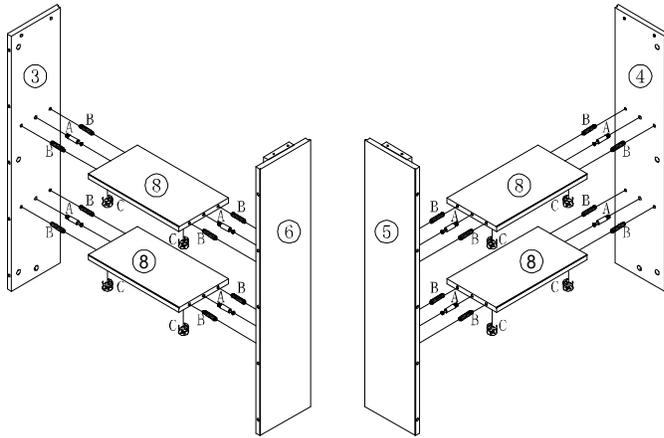


Figure 1

USE GLUE (F) TO FILL 1/4 CORRESPONDING HOLES OF LEFT/RIGHT SIDES OF BOOKCASES (3,4,5,6), INSERT 8PCS CAM-BOLTS (A), 16PCS WOOD DOWELS (B) INTO PREDRILLED HOLES ON INSIDES OF LEFT AND RIGHT SIDES OF BOOKCASES (3,4,5,6) AND FIT INTO CORRESPONDING HOLES ON ENDS OF FIXED SHELVES (8). INSERT 8PCS CAM-LOCKS (1) INTO BIG HOLES ON UNDERSIDE OF FIXED SHELVES (8) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (C) CLOCKWISE TO SECURE CAM-BOLTS (A). PUSH COVERS (E) INTO CAM-LOCKS (C). AS FIGURE 1 SHOWN.

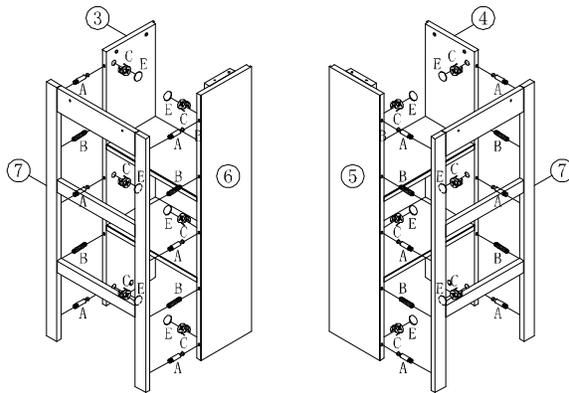


Figure 2

INSERT 12PCS CAM-BOLTS (A), 8PCS WOOD DOWELS (B) INTO PREDRILLED HOLES ON BACK OF FRONT FRAMES (7) AND FIT INTO CORRESPONDING HOLES ON FRONT EDGES OF LEFT AND RIGHT SIDES OF BOOKCASES (3,4,5,6). INSERT 12PCS CAM-LOCKS (C) INTO BIG HOLES ON INSIDES OF LEFT AND RIGHT SIDES OF BOOKCASES (3,4,5,6) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (C) CLOCKWISE TO SECURE CAM-BOLTS (A). PUSH COVERS (E) INTO CAM-LOCKS (C). AS FIGURE 2 SHOWN.

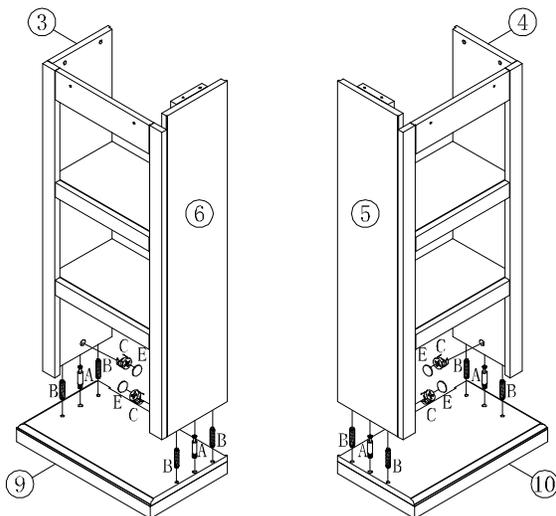


Figure 3

INSERT 4PCS CAM-BOLTS (A), 8PCS WOOD DOWELS (B) INTO PREDRILLED HOLES ON UPSIDE OF LEFT AND RIGHT BASES (9&10) AND FIT INTO CORRESPONDING HOLES ON BOTTOM EDGES OF LEFT AND RIGHT SIDES OF BOOKCASES (3,4,5,6). INSERT 4PCS CAM-LOCKS (C) INTO BIG HOLES ON INSIDES OF LEFT AND RIGHT SIDES OF BOOKCASE (3, 4, 5, 6) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (C) CLOCKWISE TO SECURE CAM-BOLTS (A). PUSH COVERS (E) INTO CAM-LOCKS (C). AS FIGURE 3 SHOWN.

" TENNYSON "PAIR OF BOOKCASES Assembly Instructions

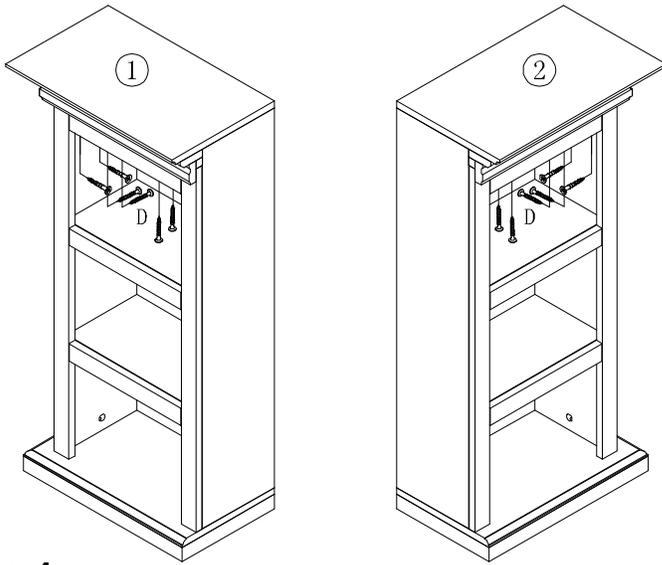


Figure 4

PLACE THE BOOKCASE TOPS (1,2) ONTO TOP EDGES OF LEFT AND RIGHT SIDES OF BOOKCASES (3,4,5,6). INSERT 12PCS FLAT HEAD LONG SCREWS (D) THROUGH PREDRILLED HOLES ON PARTS (3, 4, 5, 6) AND TIGHTEN INTO CORRESPONDING HOLES ON UNDERSIDE OF BOOKCASE TOPS (1.2). AS FIGURE 4 SHOWN.

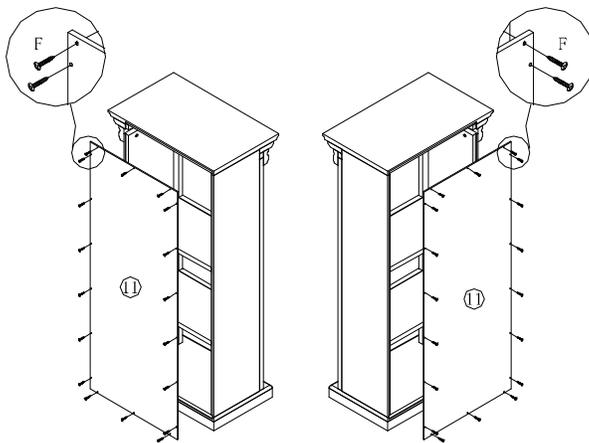


Figure 5

ATTACH THE BACK PANELS (11) ONTO THE UNITS BY USING 36PCS WOOD SCREWS (G) AS FIGURE 5 SHOWN.

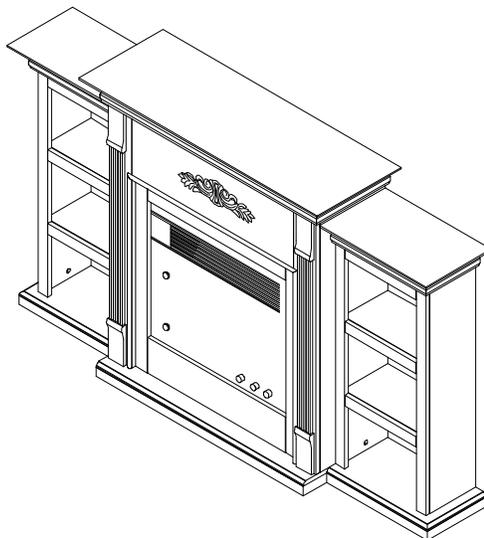


Figure 6

PLACE THE TERRI BOOKCASES BESIDE THE TERRI FIREPLACE.



Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas, 75019

FA8543/44/45/46/47B0 - Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Missing or damaged hardware and/or parts will be replaced free of charge. We do not sell parts. Southern Enterprises Inc. will provide replacement parts for only those items purchased within the last 9 months. If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled. Parts will be sent if available from SEI

Please contact Southern Enterprises at 800-633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues with your purchase. Please ask for a customer service representative for issues involving damages or replacement parts. Please ask for a technical assistance representative for any issues with product assembly and product construction.

Please contact the retailer that you purchased from for returns.

We'd love to hear from you! Email us photos of our products in your home at sei@seidal.com and we might feature it on our site or use it to model one of our inspirational photos.