

EXPLODED VIEW AND PARTS LIST

No.	Part Number	Description	Qty.	No.	Part Number	Description	Qty.
1	40415-001	Battery Housing	1	13.4	40415-015	Screw	2
2	40415-002	Switch	1	13.5	40415-016	626 Bearing	1
3	40415-003	Switch Spring	2	13.6	40415-017	Spindle Bushing	1
4	40415-004	Trigger	1	13.7	40415-018	Gear	1
5	40415-005	PCB Board	1	13.8	40415-019	Output Shaft	1
6	40415-006	PCB Guard	1	13.9	40415-020	608Z Bearing	2
7	40415-007	Battery Spring	1	13.1	40415-021	Output Shaft Assembly	1
8	40415-008	Left Housing	1	13.10.1	40415-022	Output Shaft	1
9	40415-009	Handle Assembly	1	13.10.2	40415-023	Drive Gear	1
9.1		Countersunk Screws	4	13.10.3	40415-024	Wobbler	2
9.2		Left Plate	1	13.10.4	40415-025	Blade Assembly	1
9.3		Right Plate	1	13.10.5	40415-026	Blade Spacer	1
9.4		Front Handle	1	13.10.6	40415-027	Base Blade	1
9.5		Spring	1	13.10.7	40415-028	Pin	2
9.6		Handle Support	1	13.11	40415-029	Bushing	1
9.7		Hand Guard	1	13.12	40415-030	607 Bearing	1
9.8		Screws	2	13.13	40415-031	End Cover	1
10		40415-010	Switch	1	13.14	40415-032	Screw
11	40415-011	Insulator	2	14	40415-033	Guide Bar Sheath	1
12	40415-012	Screw	2	15	40415-034	Battery Latch	1
13	40415-013	Gear Box Assembly	1	16	40415-035	Insulator	2
13.1	40415-M	Motor Assembly	1	17	40415-036	Screw	2
13.1.1		Stator/Rotor	1	18	40415-037	Right Housing	1
13.1.2		Motor Gear	1	19	40415-038	Screws	15
13.2	40415-014	Hex Nuts	2	20	40401	Battery	1
13.3	40415-015	Gear Box	1	21	40400	Charger	1