



SKU # 1003 081 561
 OMS THD SKU # 1003 002 178
 Model # TY086-1824-2



Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 6 ft 120 Light LED Stacked Jack-O-Lantern. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home decoration needs. Thank you for choosing Home Accents!

1-877-527-0313
 HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Hat	1
B	Head Top Section	1
C	Left Hand	1
D	Right Hand	1
E	Front Half of Middle Section	1
F	Back Half of Middle Section	1
G	Front Half of Lower Section	1
H	Back Half of Lower Section	1
I	Motor Vertical Pole	1
J	Vertical Pole	1
K	Horizontal Metal Bar	1

Hardware List		
Locater	Name	Qty.
L	Cotter Pin	4
M	Ground Stake	4
N	Plastic Tie	10
O	Spare Fuse	1
P	Spare Bulb	3

ASSEMBLY INSTRUCTIONS

6 ft 120 Light LED Stacked Jack-O-Lantern

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Please note that many of the parts are connected by the lighting string that runs throughout the item. Remove the parts with care not to damage the lighting string or parts. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return the item to place of purchase with purchase receipt. Assembly of this product may require more than one person.

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 12Watts (0.1Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product, inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

Care and Cleaning

- a. Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and stable.
- b. Wipe the unit with a damp cloth and allow the unit to dry before storing.
- c. Store the product neatly in a cool, dry location protected from sunlight.

Guarantee


What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.


What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

Diagram of Parts

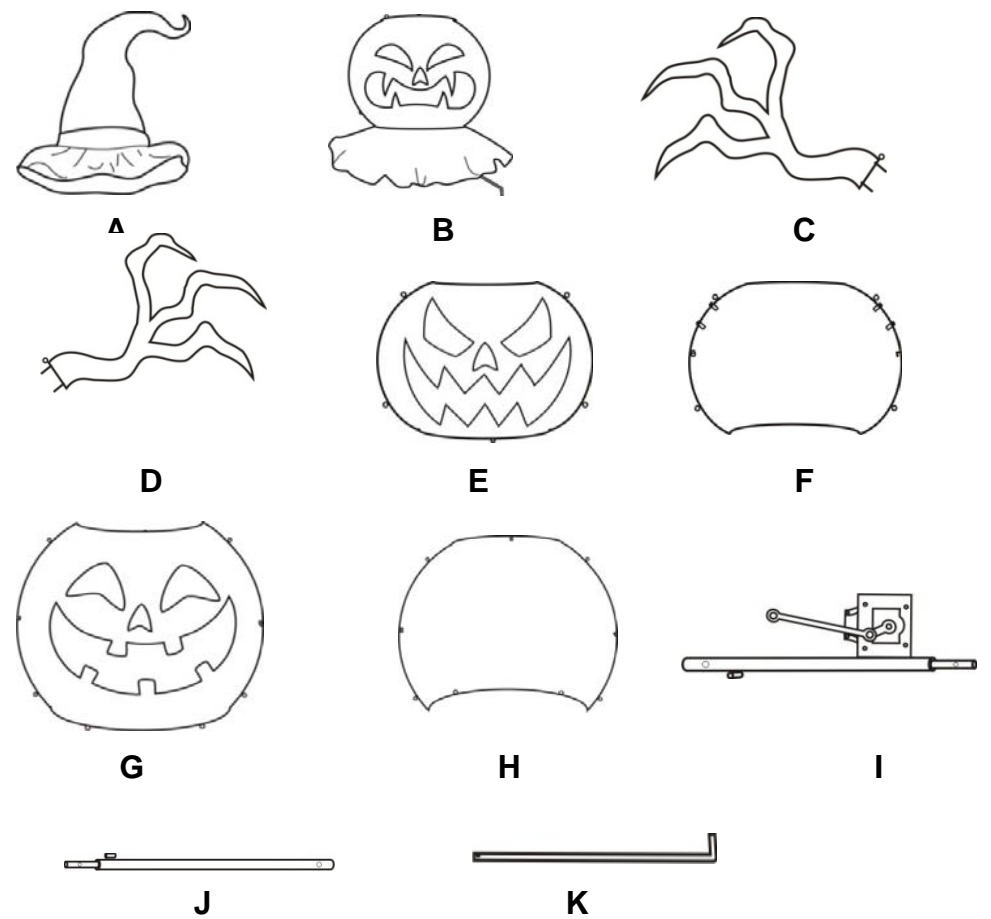


Hardware

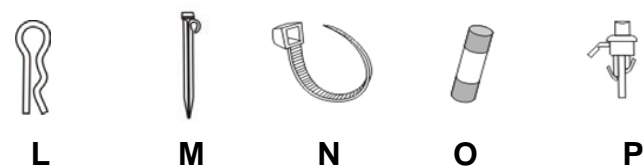

ASSEMBLY


1 Assembling the Vertical Pole to the Front Half of Lower Section

Stack the Vertical Pole (J) into the short metal rod at the base of the Front Half of Lower Section (G) with the tapered end upwards. Secure with built in locking pin. Insert the free end of a hook attached to the metal frame on the Front Half of Lower Section (G) into the matching hole on the side of the Vertical Pole (J).

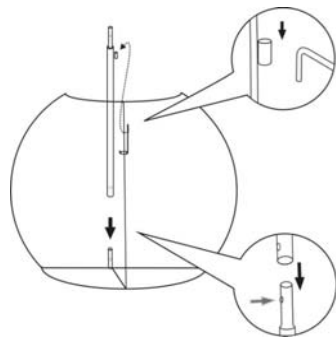


2 Assembling the Front Half of Lower Section to the Back Half of Lower Section

Align the Front Half of Lower Section (G) with the Back Half of Lower Section (H) then insert the connecting rods into the matching holes.

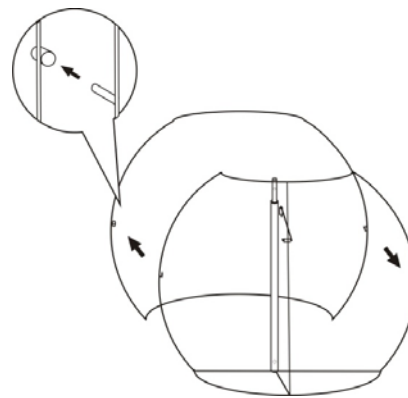


3 Assembling the Motor Vertical Pole

Stack the Motor Vertical Pole (I) onto the Vertical Pole (J). Secure with built in locking pin.

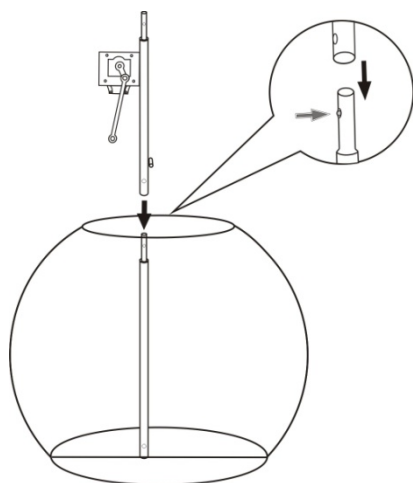


4 Assembling the Front Half of Middle Section to the Lower Section and connecting the Motor Arm

Find the Horizontal Metal Bar (K). This Bar is used to stabilize the Middle Section and Lower Section of the Pumpkin. Insert (K) thru the matching holes on the upper rim of Lower Section and the holes on the lower rim of the Front Half of Middle Section (E) and one hole in the pole of the Motor and Vertical Pole then lock at the end with the Cotter Pin (L). Connect the plastic motor arm to the hook on the left inside of the Front Half of Middle Section then secure with Cotter Pin.

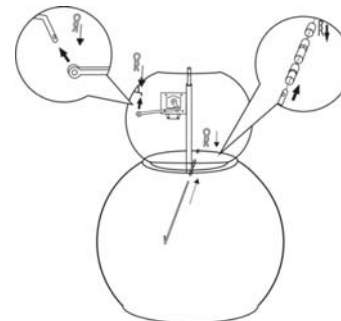


5 Assembling the Head to the Front Half of Middle Section

Insert the small vertical connecting pole located at the base of the Head Top Section (B) onto the top of the Motor Vertical Pole (I) then secure with built in locking pin. Insert the free end of long metal connecting bar attached to the Head Top Section (B) into matching tube on the right inside of the Front Half of Middle Section (E) then lock with the Cotter Pin (L).

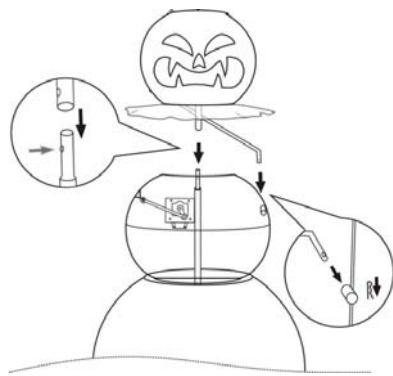


6 Assembling the Back Half of Middle Section to the Front Half of Middle Section

Align the Back Half of Middle Section (F) with the Front Half of Middle Section (E) then insert the connecting rods into the matching holes.

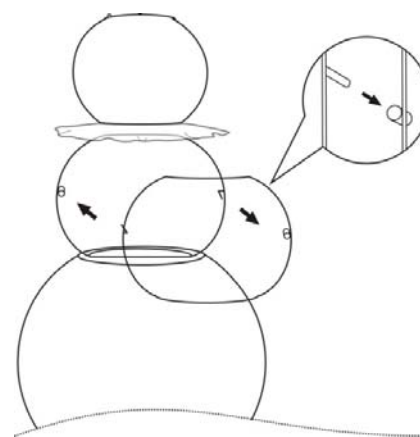

7 Assembling the Hat and Hands

Insert the connecting rods on the Hands (C, D) into the matching holes on the sides of the Front Half of Middle Section (E). Insert the connecting rods on the bottom of the Hat (A) into the holes on the top of the Head Top Section (B). Fasten all parts together at the connecting loops with the Plastic Ties (N).

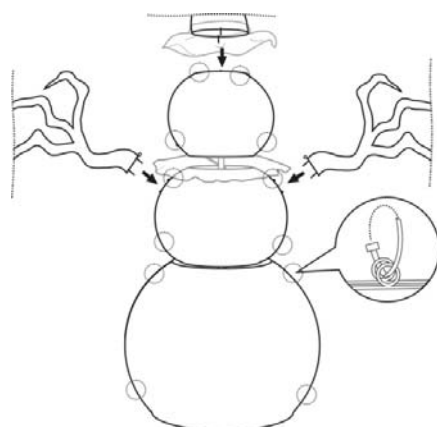

8 Assembling the Ground Stakes

Place the Ground Stakes (M) over the metal frame at the base of the Lower Section of Pumpkin at four points then into the Ground.

