




ROYALTON Equipment Sizing Guide

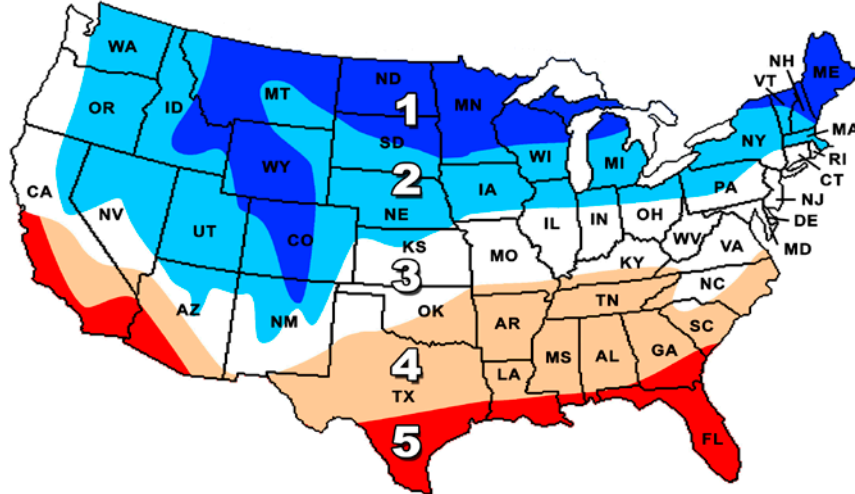

Use the map above to determine your region and compare to the chart below to find your application size.

96% AFUE Gas Furnace Upflow/Horizontal and Downflow (UH & DF) Selection

Square Footage	Region 1	Region 2	Region 3	Region 4	Region 5	Furnace Model
	820-1025	885-1105	990-1235	1200-1500	1345-1680	96G2__045
	1025-1510	1105-1630	1235-1825	1500-2215	1680-2480	96G2__070
	1510-2075	1630-2235	1825-2500	2215-3035	2480-3400	96G2__090
	2075-2560	2235-2765	2500-3088	3035-3750	3400-4200	96G2__110
	2560-3075	2765-3315	3088-3706	3750-4500	4200-5040	96G2__135

Residential Sizing: The table and charts are intended to be used as a guideline for Residential applications only. The information is based on conventional window space (<15%), insulation and building construction (8 ft. ceiling height). When including a finished basement, use 1/2 of the finished basement square footage with the rest of the area being calculated.

Mobile/Manufactured Home Sizing: Refer to the Date Plate located in the electrical box or kitchen cabinets. For further assistance, call Hamilton's customer service department (800) 879-0123.