


LOCATION OF CONTROLS:

1. ON/OFF Tap Lens
2. Light Battery Compartment
3. Remote Control
4. Power Buttons
5. Dimmer
6. Preset Dimmer
7. Timer
8. Remote Battery Compartment


FIG. 1



 FIG. 2

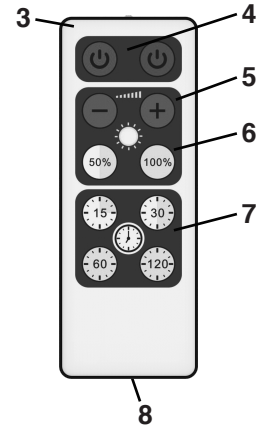

INSTALLATION:

When mounting the puck lights make sure the  icon is facing out, towards the remote (Fig. 3). This will ensure that the puck lights receive the signal from the remote.

Adhesive Tape:

1. Make sure the area where you want to attach the light is clean and clear of debris and dust.
2. Attach adhesive tape to mounting bracket (Fig. 4).
3. Place mounting bracket in desired location. Press firmly to ensure adhesive sticks.

FIG. 3


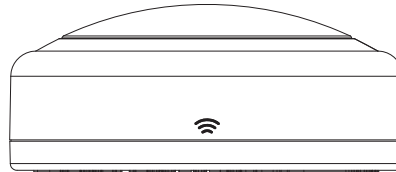


FIG. 4

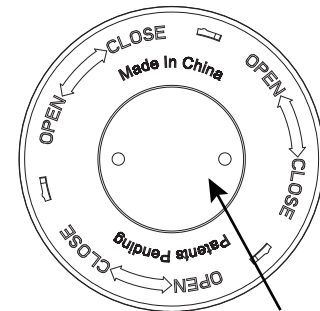

Attach adhesive tape here

CAUTION: Adhesive tape may remove paint or damage surface when removed.

Screws:

1. Remove mounting bracket from light.
2. Use the mounting bracket as a guide to drill two (2) pilot holes. Secure mounting bracket to surface with screws (included). Do not over tighten screws.
3. Attach light to mounting bracket.

OPERATING INSTRUCTIONS:

ON/OFF Tap Lens:

1. Press lens to turn light ON/OFF.

Remote Control Operation: REMOVE PLASTIC TAB FROM REMOTE PRIOR TO USE

The remote control will operate the puck lights within 15 feet. The remote uses Infra Red technology. It is best to point the remote control at the puck lights. Physical objects between the remote and the puck lights may interfere with the Infra Red signal. Up to 10 puck lights can be controlled by one remote control.

Power Buttons:

Red – Turns puck lights OFF.
Green – Turns puck lights ON.

Dimmer Buttons:

When puck lights are ON:
Hold - to decrease brightness.
Hold + to increase brightness.

Preset Dimmer Buttons:

When puck lights are ON press 50% or 100%.

NOTE: Brightness level can only be controlled by the remote. Lights will default to last brightness setting.

Timer:

When puck lights are ON press desired timer option (15, 30, 60 or 120 minutes). Lights will flash to confirm setting. Reset timer by turning puck lights OFF.

BATTERIES:

If the LEDs appear to be dim the batteries need to be replaced.

REPLACING THE BATTERIES IN THE PUCK LIGHTS:

1. Remove battery compartment cover.
2. Remove old batteries (if replacing batteries).
3. Insert three (3) new AA batteries (not included)
4. Make sure to follow the battery polarity guide when installing new batteries (Fig. 5).
5. Replace battery compartment cover.


REPLACING THE BATTERIES IN THE REMOTE CONTROL:

The remote control comes with a CR2025 battery pre-installed. Remove the plastic tab from the remote prior to use.

This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.

1. Loosen the screw on the bottom of the remote control.
2. Slide out battery compartment.
3. Remove old battery (if replacing battery).
4. Insert one (1) new CR2025 battery.
5. Make sure to follow the battery polarity guide.
6. Replace battery compartment.
7. Tighten screw.

FIG. 5

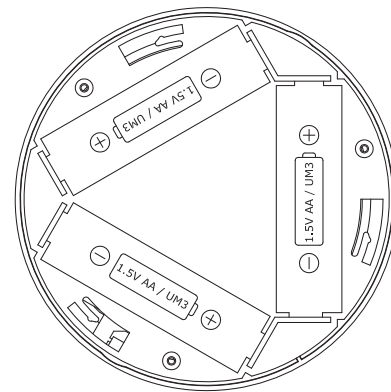

PRODUCT INFORMATION CHART:

Light Output (Lumens)	55
Correlated Color Temperature (CCT)	3000 (Warm White)
Run Time	100 hours
Batteries (not included)	AA x 3
Number of LEDs	3
LED Beam Angle	120°

Dimensions: 3-3/8" diameter / 1-1/4" high

WARNING:

To reduce the risk of electrical shock, do not put the unit in water or other liquid. To clean, use a soft dry cloth. Do not place or store appliance where it can fall or be pulled into a tub or sink.

BATTERY PRECAUTIONS:

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade of battery most suitable for the intended use.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment.
Reversed batteries may cause damage to the device.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Do not dispose of batteries in fire.
8. Remove batteries if consumed or if product is to be left unused for an extended period of time.

INDOOR USE ONLY

ONE-YEAR LIMITED WARRANTY:

This product is warranted to the original purchaser that the product will be free from defects in materials and workmanship for a period of one year from the date of purchase. Additional details are available at www.brilliantevolution.com.

© 2017 London Johnson, Inc. All Rights Reserved.

www.brilliantevolution.com

Made in China