

## 58536

### Installation Instructions

1. Turn off water supply.
2. Remove retaining screw or nut from handle and save.
3. Remove handle by pulling straight out.
4. Align new handle on valve stem.
5. Thread retaining screw into valve stem and secure handle.
6. Turn on water supply.

**Tools needed for installation:** • Screwdriver

