Model No. LYRA20-PC-4K-BZ
Mfr. SKU 103-04900003-1

PROBRITET LYRA LED WALLPACK

INSTALLATION,
USAGE, & CARE GUIDE



#### Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email PROBRITE Customer Service 9am-5pm EST Monday to Friday.

1-844-507-5651

support@PROBRITE.com

PROBRITE.COM

Visit us online anytime or call us to get information on our product range, download detailed spec & photometric files, find product and mounting accessories, view installation tutorials and videos, and learn about our DLC\* rebate eligible products.

### **Table of Contents**

Table of Contents	2
Safety Information	
Pre-Installation	
Planning Installation	3
Specifications	3
Tools Required	3
Hardware Included	4

Package Contents	4
nstallation	5
Care & Cleaning	
Troubleshooting	
Warranty	

## **Safety Information**

#### **IMPORTANT**

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

#### **PRECAUTIONS**

- ☐ Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- ☐ This light fixture requires a 120-277Volt AC power source.
- Some codes require installation by a qualified electrician.
- ☐ This light fixture must be properly grounded.
- Make sure connections are secure using wire nuts, crimp-on lugs or other approved connecting devices
- This light fixture should be installed outdoors to the wall.
- This product may contain chemicals known to be hazardous. Thoroughly wash hands after installing, handling, cleaning or otherwise touching the product.



WARNING: Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the



WARNING: Risk of fire. Keep the lamp heads at least 3 in. (76mm) from combustible materials.



CAUTION: Burn hazard. Allow the light fixture to cool before touching.



NOTICE: Do not connect this fixture to a dimmer switch.



NOTICE: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorization to operate this equipment.



INFORMATION: The device is tested and found to comply with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference and, (2) this device must accept any interference received, including any interference that may cause undesired operation.

These limits are designed to provide reasonable protections against harmful interference when the equipment is operated in a commercial environment.

### **Pre-Installation**

#### PLANNING INSTALLATION

Before installing the light fixture, ensure that all parts are present. Compare parts with the Hardware Included and Package Contents sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture.

Estimated installation time: 20 minutes

#### **SPECIFICATIONS**

Lumens (Light Output)	2500 Lumens
Watts (Power Consumption)	20 Watts LED
Replaces	70 Watt Metal Halide
Lumens/Watts (Efficacy)	125 lumens per watt
Power Requirements (Input Voltage)	120-277VAC
Light Color (CCT)	4000 Kelvins (Bright White)
Dimmable	Non-Dimming (Do not wire to dimming switch)
Operating Modes	<b>Dusk-to-Dawn:</b> Automatically turns light fixture ON during night and OFF during day.
	<b>Switch-Controlled:</b> Flip switch to turn light fixture ON and OFF. <i>Use included light sensor cap on fixture's light sensor to utilize this mode setting.</i>

#### **TOOLS REQUIRED**



Phillips Screwdriver



Wire strippers/ cutters



Circuit tester





Work gloves







Flat head hammer

Please call 1-844-507-5651 or email support@probrite.com for further assistance

## **Pre-Installation (continued)**

#### **HARDWARE KIT**



NOTE: Hardware not shown to actual size.










Part	Description	Quantity
AA	#8-32 x 3/4" philips mounting bracket screw	2
ВВ	Wire nut	3
СС	Photocell Black Cover Label	1

#### **PACKAGE CONTENTS**

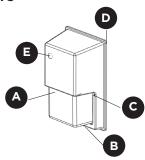

Part	Description	Quantity
Α	Light fixture	1
В	Conduit entry plug	1
С	Mounting base tightening screw (pre-installed)	2
D	Mounting base plate	1
E	Photocell lens	1


### Installation

## For best results

- The fixture can be mounted in the following two ways:
  - ☐ Junction Box Mount: Use a junction box to mount the fixture.
  - ☐ Surface Conduit Mount: The fixture can also be mounted directly on the wall surface using conduit entry.
- ☐ When mounting fixture, for Dusk to Dawn operation, make sure the photocell orientation is at the top for wall mount, in an area that receives daylight and not too close to reflective surfaces.
- ☐ When installing two fixtures on one switch, make sure the switch is rated for at least a 1A inductive load.
- Do NOT wire to dimming switch.



NOTE: Mounting base (D) mounts to recessed mounted standard junction boxes or to the surface directly. Junction box must be at least 1-1/2 inch in depth for proper installation for recessed mount application (fig 2).

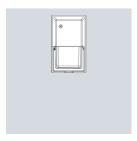

**Wall Mount** 







## Shut electric power off

- ☐ At wall switch verify it is in the off position (fig 1).
- ☐ At the main electrical panel turn off the circuit breaker that supplies power to the outlet box you are working on (fig 2).
- ☐ For screw-in type fuses unscrew the fuse that supplies power to the outlet box you are working on (fig 3).





(fig 2).



(fig 3).

## **Installation (continued)**


## Remove the mounting base plate



- Loosen the two mounting base tightening screws (C) using a philips screwdriver and remove the refractor. (Fig. 1)
- ☐ Remove the reflector from the base plate (D) by loosening the two small screws. (Fig. 2)




CAUTION: DO NOT touch the LED and Photocell lens (E) inside the fixture. DO NOT damage or soil the reflector

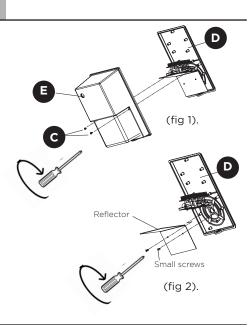

## **Knock out holes on** mounting base

- ☐ Measure the distance of the mounting threaded holes on the junction box and find the corresponding knock-out holes in the fixture's mounting base (D).
- ☐ Use a flat head hammer and screw driver to knock out two holes in the mounting base (D) in the desired location to align properly with the junction box. (Fig. 1)

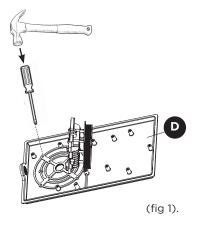


## **Installation (continued)**

## Installing the mounting base


#### **Junction box Mount**

- Route the junction box wires through the large center hole in the mounting base (D).
- Align the holes on the mounting base (D) with the holes on your junction box. Use two #8 screws (AA), depending on the size of the holes in your junction box, attach the mounting base (D) to your junction box. (Fig. 1)

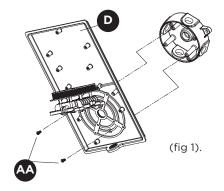

#### **Surface Conduit Mount**

- Mark and drill two holes on the wall surface as per the desired location for fixing the mounting plate (D).
- Use two or more suitable screws (provided by others) applicable to the surface of mounting and fix the mounting plate (D) on the surface. (Fig. 2)

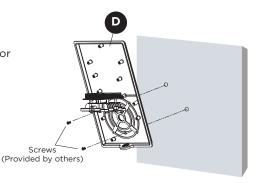


(fig 2).

## Making the electrical connections

#### **Junction box Mount**

Follow the wiring instructions given below to make the electrical connections. (Fig. 1)

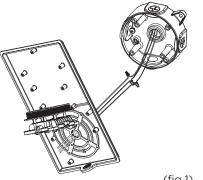

(fig 1).

PROBRITE.COM


### **Installation (continued)**

#### **Surface Conduit Mount**

- Remove conduit plug from the bottom of the fixture from the where conduit will enter. (Fig. 2)
- Make wiring connections inside the fixture as per the instructions given below.

#### Wiring Instructions

- ☐ If necessary, strip 3/8" of insulation from junction box or fixture (A) wires (fig 3).
- ☐ Connect fixture black wire to house black wire, the (+) line, and fixture white wire to house white wire, the (-) common by twisting the exposed wires together and using the wire nuts (BB). Ensure no loose wires.
- Connect house ground wire to the green fixture ground wire, by twisting the exposed wires together and using the wire nuts (BB).

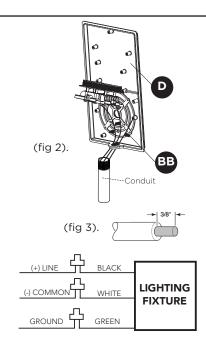




**TIP:** Hold stripped ends near each other and align any frayed strands (do not twist wires).

Push the wires into wire nut (BB) and use your fingers to twist the wire nut clockwise until tight Check for tightness by pulling wires.

# **7** Securing the light fixture on the mounting base


- Replace the reflector on the mounting base plate (D) using the two small screws, using a philips screwdriver, removed in the Step1.
- Close the fixture by tightening the mounting base tightening screw (C), using a philips screwdriver, which was removed earlier in Step 1. (Fig. 1)

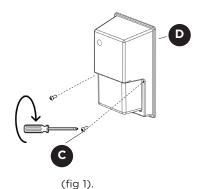

## **Installation (continued)**

# 8 Caulking around the light fixture

 Caulk around the mounting plate (D) and surface with silicone sealant (not included).

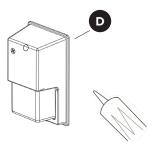



NOTICE: Failure to properly caulk around the surface and mounting plate (D) could lead to water damage and is not covered under warranty.



**NOTE:** When attaching this fixture (A) to an external, surface mount junction box, caulk the inside of the light fixture before attaching to the mounting plate (D).

## **Operation**

## Selecting Dusk-to-Dawn or Switch-Activated control

#### **OPTION 1: DUSK-TO-DAWN OPERATION**

 
Dusk-to-dawn operation enables the light fixture to automatically turn ON when dark outside and turn OFF when the sun rises, thus saving you energy.



- To enable dusk-to-dawn operation remove temporary black label cover and ensure the photocell (E) has no cover on it and is unobstructed.
- Ensure the switch powering the outlet connected to the light fixture is turned to the ON position and leave it ON at all times to enable dusk-to-dawn functionality to operate automatically.



**TIP:** To test if the light fixture (A) and photocell (E) works properly run power to the fixture and cover the photocell to turn fixture ON. Shine a light into the photocell to see if fixture turns OFE.



(No cover on photocell for Dusk-to-Dawn Operation)



**NOTE:** If photocell (E) is located in an area under heavy shade the photocell may not detect enough light and may turn the light fixture on.

8


PROBRITE.COM

## **Operation (continued)**

#### **OPTION 2: SWITCH ACTIVATED**

Switch activated operation enables the light fixture to turn ON and OFF by flipping a switch that controls the electricity to the outlet powering the fixture. The light fixture will not turn ON and OFF automatically, but is manually controlled.

 To enable switch activated operation paste the black cover sticker (provided in the hardware kit) on the photocell (E).

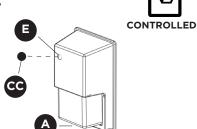

(Paste the black label cover provided in the kit)

**SWITCH** 

8

## **Care and Cleaning**

- ☐ Shut off main power supply before cleaning the product. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- □ Do not spray the light fixture with a hose or power washer.

## **Troubleshooting**

Problem	Possible Cause	Solution
	No power to the fixture	Check if circuit breaker is tripped
		Confirm wall switch is ON
Light does not turn ON		Verify wiring to fixture is correct (turn power off to fixture beforehand)
	Fixture is sensing daylight	Cover photocell. Wait several seconds until fixture turns ON.
Light cycles ON and OFF continuously	Photocell light sensor is sensing reflected light	Relocate light fixture to a location where there is no reflected light.
		OR place the optional photocell cover over the photocell light sensor and use the wall switch to turn the light ON and OFF.
Light FLICKERS	The light fixture is wired through a dimmer switch.	Do not use a dimmer switch to control the light fixture. Replace the dimmer with a standard ON/OFF switch.

## **Troubleshooting (continued)**

Problem	Possible Cause	Solution
Light sensor is in a shaded area  Light stays ON  Light Sensor is faulty	- Control of the cont	Shine a flashlight into the light sensor and wait a couple minutes. If the light turns OFF, the fixture should be moved to a location with enough light in the daylight hours for the light sensor to work.
		OR place the optional opaque cover over the photocell light sensor and use the wall switch to turn the light ON and OFF.
	If the light does not turn off when a flashlight is shined on the light sensor for a few minutes, then the sensor may be faulty. Please contact customer service.	



**NOTE:** Photocell (E) may have a few minute delay, to reduce it's sensitivity to sudden light changes. When testing shine a light/cover the photocell for a few minutes to check if fixture functions properly

## 5-Year Limited Warranty

This is a limited warranty offered by Probrite for a period of five years from the date of purchase to its customers. Probrite warrants to customers that the products will be free from defects in material and workmanship. The obligation of Probrite under this warranty is limited to the provision of replacement of products and is extended to the original purchaser of the product on presenting valid purchase receipt or other proof of date of original purchase acceptable to Probrite. The receipt is required for rendering the warranty performance. Any warranty claims without original proof of purchase would not be accepted.

It should be noted that the warranty does not apply to Probrite products that have been altered or repaired by unauthorized personnel, have been subjected to neglect, abuse, misuse or accident or damages caused during shipping. Any other products not manufactured by Probrite which have been supplied, installed and/or used in conjunction with Probrite products are not covered under this warranty. Any damages caused by replacements bulbs, LEDs or corrosion or discoloration of brass components are also not covered by this warranty.

#### **Limitation of Liability:**

In no event Probrite shall be liable for indirect, consequential, incidental or special damages, or lost profits. Probrite is not liable for any claims or damage arising out of or connected with the manufacture, sale, delivery, use, maintenance and repair or modification of Probrite products, or supply of any replacement parts that, exceed the purchase price of Probrite products giving rise to a claim. Labor charges to remove or install the fixtures will not be accepted.

#### To Claim:

Please contact PROBRITE customer service at 1-844-507-5651 or email support@PROBRITE. com and include your name, address and contact number, along with a copy of the purchase receipt and a brief description of the problem.

## **PROBRITE**

#### Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email PROBRITE Customer Service 9am-5pm EST Monday to Friday.

1-844-507-5651

support@PROBRITE.com

PROBRITE.COM

#### **RETAIN THIS MANUAL FOR FUTURE USE**

Para las translaciones en español, visit www.probrite.com/install