 


Panda[®]

INSTRUCTION MANUAL MANUAL DE INSTRUCCIONES

Model Number/ No. de Modelo: PAN875W

CLOTHES DRYER
SECADORA DE ROPA

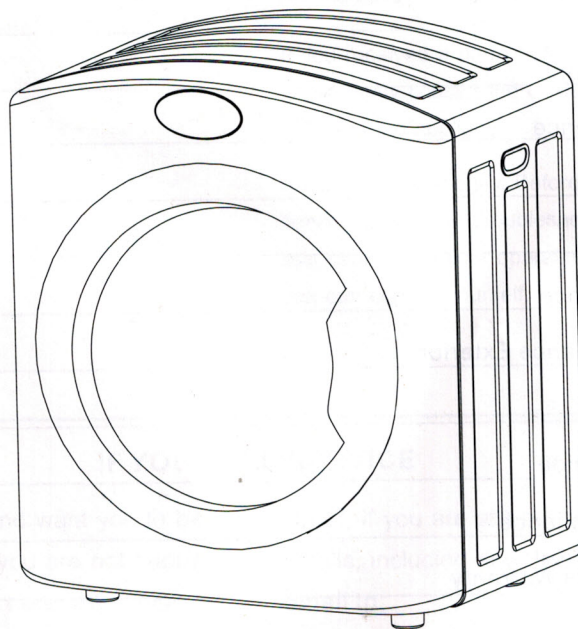

CAUTION:

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

Panda has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice.

Panda Products
Toll Free: 1-866-371-2888
email: service@ezbyonline.com
www.ezbyonline.com

FOR ANY TECHNICAL SUPPORT, PLEASE CONTACT OUR TOLL FREE CUSTOMER SERVICE HOTLINE OR EMAIL US

TABLE OF CONTENTS

Help Us Help You	3
Parts and Features	4
This dryer can not be used upside down	5
For Your Safety	6
Important Safety Instructions	7
Installation Instructions	7
Before Using Your Dryer	7
Wall Mounting Instructions	8
Leveling Legs	9
Electrical Connection	9
Control Panel	9
Operating Instructions	10
Drying Time Reference	10
Sorting Fabrics	11
Fabric Care Sheet	12
Care and Maintenance	13
Cleaning Your Appliance Exterior	13
Cleaning the Filters	13
Troubleshooting Guide	14
Service for Your Appliance	14
Your Panda Products Warranty	15

HELP US HELP YOU...

Read this guide carefully.

It is intended to help you operate and maintain your new appliance properly.

Keep it handy to answer your questions. If you don't understand something or your need more help, please call:

Panda Products
1-866-371-2888

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

Write down the model and serial numbers.

You'll find them on a plate located on the back wall of the appliance.

Please write these numbers here:

Date of Purchase

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your appliance.

If you received a damaged appliance, immediately contact the dealer (or builder) that sold you the appliance.

Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct yourself.

IF YOU NEED SERVICE

 
 
We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are some steps to follow for further help.

FIRST, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

NEXT, if you are still not pleased, write all the details, including your telephone number, and email to:

service@ezbyonline.com

PARTS AND FEATURES

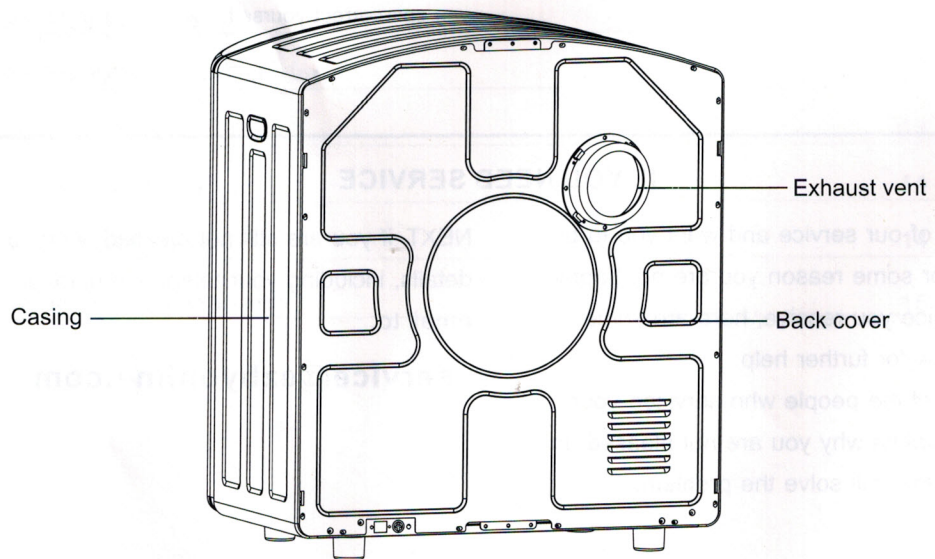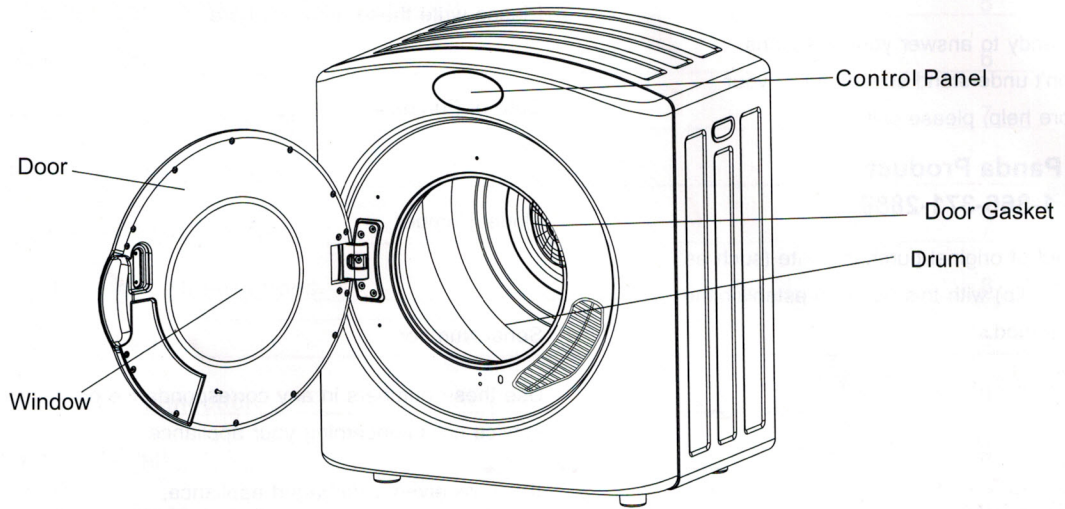



Caution, danger

This dryer can not be used upside down

WARNING

-Risk of Fire

Clothes dryer installation must be performed by a qualified installer.

Install clothes dryer according to the manufacturers instructions and local codes.

Do not install a clothes dryer with flexible plastic venting materials. If flexible metal (foil type) duct is installed, it must be of a specific type identified by the appliance manufacturer as suitable for use with clothes dryers. Flexible venting materials are known to collapse, be easily crushed, and trap lint. These conditions will obstruct clothes dryer airflow and increase the risk of fire.

To reduce the risk of severe injury or death, follow all Installation instructions.

Connect To Individual Branch Circuit.

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounded in accordance with all local codes and ordinances.

WARNING

- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative or personnel if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

It must be placed on firm horizontal ground. Do not place the dryer on carpet as this will block the intake. There should be at least 5 inches between the dryer and the walls.

Place the dryer in a dry well ventilated area. It should be positioned away from heat and direct sunlight.

Do not wash directly with water.

Do not use gasoline or alcohol.

Do not use any type of spray cleaner when cleaning the interior. If dryer drum becomes stained, clean the drum with a damp cloth.

Remove any residue before drying the next load.

Clean cabinet with mild soap and water. Do not use harsh or abrasive cleaners, this could damage the dryer.



Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

For Your Safety

Read all instructions carefully, even if you are quite familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- **INDOOR USE ONLY** – this appliance is not intended for outdoor use.
- Do not place naked flame sources, such as candles, on the appliance.
- Do not locate the appliance or cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
- Do not block any of the ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc.
- Do not run the cord under floor coverings. Instead, arrange the cord away from traffic areas where it will not become a trip hazard.
- To disconnect the appliance, turn the appliance off, switch off the power outlet and remove the plug from the power outlet.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not operate the appliance if it has a damaged cord or plug; after the appliance malfunctions; or has been dropped or damaged in any way. Consult the manufacturer.
- Do not attempt to repair, disassemble or modify this appliance. The warranty becomes void if not serviced or repaired by a qualified person.
- Do not reach into the appliance if the drum is moving.
- Do not place items that have been soiled with flammable liquids inside the dryer without washing them with detergent thoroughly before hand.
- Do not excessively bend, stretch, twist or bind the power cord or place heavy objects on it.
- This appliance is only to be serviced by a qualified person. There are no user-serviceable parts inside.
- Do not install in a tight fitting cabinet.
- Do not overload the tumble dryer.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapours that could ignite or explode.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Ensure foreign objects do not find their way into the tub of the tumble dryer.
- Clean lint screen before or after each load.

Important Safety Instructions

⚡ WARNING ⚡

To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- **DANGER or WARNING:** Risk of child entrapment.
- Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous. . . even if they will “just sit in the garage a few days.”
- **Before you throw away your old appliance:** Take off the door so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not place the dryer in steamy rooms or where the dryer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
- During spinning, don't put your hand in the spin basket: Because the spin basket is rotating at high speed, rotating parts may injure your hand.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.

-Save these instructions-

INSTALLATION INSTRUCTIONS

➤ **Before Using Your Appliance**

- Remove the exterior and interior packing.
- Check to be sure you have all of the following parts:
- Instruction Manual
- Allow at least 5 inches of space between the sides of the appliance.
- Put your laundry into the dryer evenly. Uneven laundry may cause noise or vibration.
- Before drying, check all pockets. If nails or pins remain in pockets, they may damage the dryer or clothes.
- Never splash water on the control panel.
- Plug the dryer into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and or grounding should be directed toward a certified electrician or an authorized Panda Products service center.

➤ **Selecting a Location**

Before you install the dryer, select a location with the following characteristics:

- A hard level surface (if the surface is uneven, see “Adjusting the Leveling Legs”).
- If you are going to wall mount your dryer using the wall mounting kit included (see “Wall Mounting Instructions”)
- Away from direct sunlight. Direct sunlight may affect the acrylic coating, plastic and electrical components.
- Adequate ventilation
- Room temperature that will not fall below 32°F.
- Away from sources of heat such as coal or gas. Make sure that the dryer does not stand on its power cord. Ventilation openings must not be obstructed by carpeting when the dryer is installed on a carpeted floor.






 
➤ Wall Mounting Instructions

1. Determine dryer position on wall and mark required bracket position. This dryer is not suitable to be directly placed on top of a washing machine.


* A minimum 50mm is needed between the top of the dryer and the ceiling for ease of installation.

* If mounting above a washing machine, allow sufficient room to open the lid of the washer.


Tools Required		
Tools and parts required for Plaster and or Wood Installation	Drill & Drill Bit	1
	Phillips Head Screw Driver	1
	Wood screws 50mm long	4

Wall Mounting Kit Includes the following			
Description	Wall Hanging Bracket		2
	Wall Hanging Hook		2
	Exhaust connector		1
	12mm long Screws		4
	25mm long Screws		4
	Exhaust Pipe		1 set

 2. Fix the wall hanging brackets (2 supplied) to the wall securely (e.g. into the stud). Fit a timber slat between the studs to mount the brackets onto if the stud position is too wide.

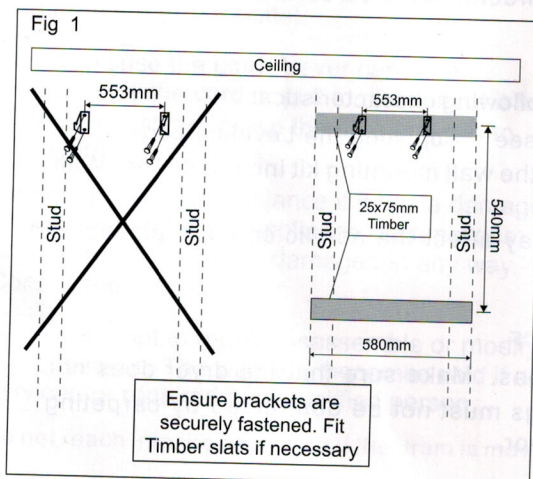


 3. Install the Wall Hanging Hooks as shown in illustration (Fig. 2).

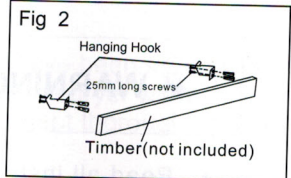


4. Align hanging hooks and fasten screws tightly.

 5. Install the Exhaust Connector. Adjust the direction to suit the installation (as per Fig. 3).

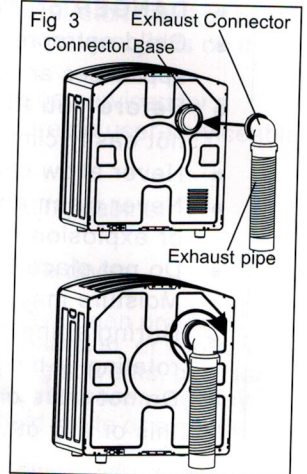


6. Rotate the Connector clockwise to fix the pipe to the Connector Base. Tighten.

 7. Using 4x12mm screws (provided) to fix the 2 Wall Hanging Bracket as per Fig 4.

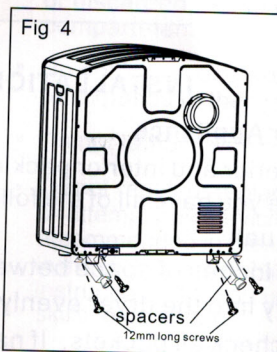

 8. With assistance, mount dryer on wall bracket. See Fig 5.

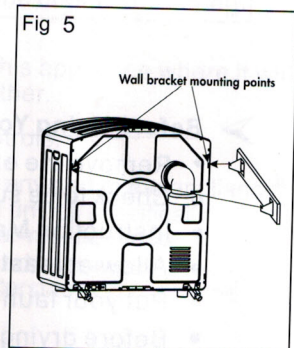


The appliance shall not be exhausted into a chimney, a wall, a ceiling, an attic, a crawl space, or a concealed space of a building.

Only rigid or flexible metal duct shall be used for exhausting.

In Canada, that only those foil-type flexible ducts, if any, specifically identified for use with the appliance by the manufacturer shall be used. In the United States, that only those foil-type flexible ducts, if any, specifically identified for use with the appliance by the manufacturer and that comply with the outline for Clothes Dryer Transition Duct, Subject 2158A, shall be used.

➤ **Adjusting the leveling legs**

 Your dryer is shipped with the legs in the bag containing your user's guide. To install and adjust the leveling legs see the illustration to the right.

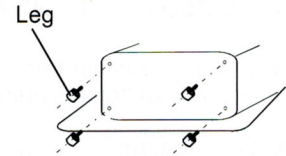

If the floor is uneven adjust the legs (do not insert pieces of wood, or any other objects under the legs)

- Adjust the height level of the legs accordingly.

Place the dryer on a sturdy flat surface.

If the dryer is placed on an uneven or weak surface, noise or vibration will occur. (Allowable is 1°)

➤ **Electrical Connection**

⚡ Warning ⚡

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized Panda Products service center.

 
This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Do not under any circumstances cut or remove the third ground prong from the power cord supplied.

Use of extension cord is not recommended.

This appliance requires a standard 110/120-volt, 60Hz electrical outlet with three-prong ground. The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.

➤ **CONTROL PANEL**

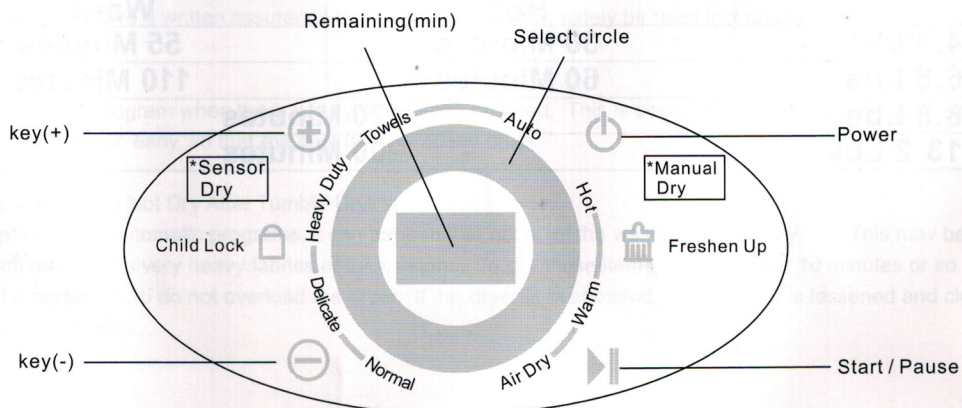

➤ **OPERATING INSTRUCTIONS**

For towels, baby clothes, shirt, jeans, push "POWER" key, then match the select circle accordingly to 'towels or delicate or normal or heavy duty', then push "start" key.

Pls be noted, under such mode, drying time is fixed, because the inside humid sensor can tell the cloth humidity and select automatically drying mode

For clothes assorted, can use below two different choices

1. push "power" key, match the select circle to "auto", push start key. Pls be noted, under such mode, time is fixed, because the inside humid sensor can tell the cloth humidity and select automatically drying mode
2. push "power" key, match the select circle to "hot, or warm or air dry", which is non-intelligence mode, then push start key. Pls be noted, under such mode, time can be set, because there is no inside humid sensor which can tell the cloth humidity and select automatically drying mode, so need to mechanically set time.

Lock key: push key + and key - simultaneously for 3 seconds. Conversely, lock the control panel

Fresh up key: after being used for 6 times, clean key warning automatically after the drying procedure finish, which means the filter inside needed to be cleaned

Power key: when the dryer is plugged, this key be dimming, when push this key, the key shining with beep

Indicat window: display the remaining time

Key +, key -: Time setting, each push for 20 minutes

Start and Pause key 

➤ **DRYING TIME REFERENCE**

**** LOAD WEIGHTS AND RESPECTIVE DRYING TIMES ARE APPROXIMATE ****

Drying Capacity	Drying Times	
	Hot	Warm
4.4 Lbs	30 Minutes	55 Minutes
6.6 Lbs	60 Minutes	110 Minutes
8.8 Lbs	120 Minutes	
13.2 Lbs	200 Minutes	

Sorting Fabrics

For the best drying results, clothes should be sorted properly. Separate the lint shedders (chenille and terry cloth) from the lint collectors (synthetics, flannel and fabrics with a nap, such as velveteen and corduroy). Separate non-colorfast from light colored items, heavy fabrics from light weight fabrics and permanent press from heavy, bulky items.

Do not tumble dry

Read all permanent care labels carefully. If a garment's care label says "Drip Dry", Line Dry or "Dry Flat", do not dry in the dryer. Certain materials will melt or become dangerously flammable if heated, while others may lose their shape. Other items that should not be tumble dried are:

- Items that have been dry-cleaned at home.
- Wool (unless the garment's manufacturer recommends it)
- Fiberglass
- Laminated or rubber coated items
- Vinyl or plastic
- Do not use fabric softeners or products to eliminate static unless recommended by manufacturer of the fabric softener or product.

WARNING:

To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

Drying Time

Drying time depends on many factors, such as the amount of washing, how damp it is, the type of fabrics, rated power of the machine and the temperature of the room. It also, of course, depends on how dry you want the washing when you take it out of the machine.

Shrinkage

Knitted fabrics in particular are liable to shrink. Do not use the extra dry program for these materials, and always stretch them out directly after drying.

Dryer Added Fabric Softeners

Because some dryer added fabric softeners may cause damage to automatic dryers, use only ones that the manufacturers give a written assurance that their softeners can safely be used in your dryer.

Single Items

Use the timed program when there is only one item to be dried. This is because the automatic program may turn off the heating too early, so that the item is not properly dried.

If The Washing Is Not Dry After Tumble-Drying

When using the automatic programs, it can happen that not all of the washing is properly dry. This may be due to such reasons as very heavy fabrics or thick seams. To dry these items, give a further 10 minutes or so in the timed program. Also do not overload the dryer. If the dryer is overloaded, its efficiency is lessened and clothes may not dry evenly.

Do not over-dry

When using the timed program, it is possible to over-dry fabrics, if too long a time has been set. This can cause the fabrics to wrinkle, shrink or feel harsh. Synthetic materials can also become charged with static electricity.

Fabric Care Chart



Resistant material



Delicate fabric



Item may be washed at 203°F



Item may be washed at 140°F



Item may be washed at 104°F



Item may be washed at 86°F



Item may be hand washed



Dry clean only



Can be bleached in cold water



Do not bleach



Can be ironed at 392°F max



Can be ironed at 302°F max



Can be ironed at 212°F max



Do not iron



Can be dry cleaned using any solvent



Dry clean with perchloride, lighter fuel, pure alcohol or R113 only



Dry clean with aviation fuel, pure alcohol or R113 only



Do not dry clean



Dry flat



Can be hung to dry



Dry on clothes hanger



Tumble dry, normal heat



Tumble dry, reduced heat



Do not tumble dry

 
 
 
CARE AND MAINTENANCE



➤ Cleaning the Exterior

- Wipe the dryer surfaces, including the control panel, with a soft cloth and non-abrasive household detergents.
- Use a soft cloth to dry the surfaces.
- Do not pour water on the dryer.

➤ Cleaning the Filters

Unplug the power cord prior to any cleaning.

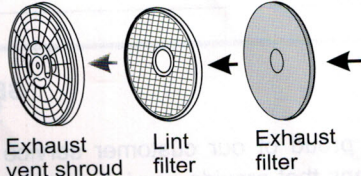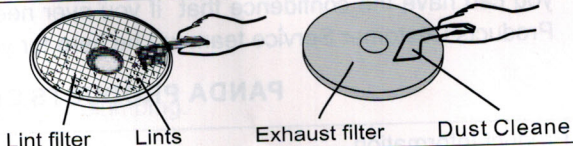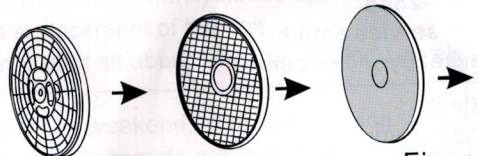Cleaning the Lint Filter:	
<p>a) Removing the Lint Filters: Remove by pulling outward using the four (4) grip holes in the filter assembly.</p>	<p>ALL FILTERS MUST BE IN PLACE WHEN DRYING</p> <p>FILTERS MUST BE CLEANED BEFORE AND AFTER EACH USE.</p>
<p>b) The filter assembly consists of three (3) parts (See illustration)</p> <ol style="list-style-type: none"> a) Exhaust Vent Shroud b) Lint Filter c) Exhaust Filter 	 <p style="text-align: center;">Exhaust vent shroud Lint filter Exhaust filter</p>
<p>c) Separate each of the above parts and clean the individual pieces using a SOFT brush or vacuum cleaner. DO NOT damage the filters</p>	 <p style="text-align: center;">Lint filter Lints Exhaust filter Dust Cleaner</p>
<p>d) Re-install the filter assembly Reassemble the filter assembly in order Exhaust Filter - Lint Filter - Exhaust Shroud Align the entire assembly with the recessed position in the back of the drum and press firmly until the entire assembly is secure.</p>	 <p style="text-align: right;">Figure 3</p>

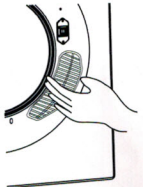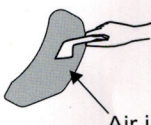  Cleaning the Air Intake Filter	
<p>a) Removing the Air Intake Filter: Remove by pulling outward holding the filter housing by the top and bottom.</p>	
<p>b) Remove the filter inside the housing and clean using a SOFT brush or vacuum cleaner.</p>	 <p style="text-align: center;">Air intake filter</p>
<p>c) Replace the filter housing by pushing upwards with your thumb until the latch is secure.</p>	

PROBLEMS WITH YOUR DRYER?

You can solve many common appliance problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Timer knob will not rotate Dryer does not operate.	Not plugged in. The circuit breaker tripped or blown fuse. Door is not closed.
Drum does not rotate Laundry not completely dry	Clean the Filter Reduce the amount of clothing loaded in the dryer. Re-dry the loaded items Ensure items are not knotted or bulked together. Dryer is not located in a well ventilated area.

SERVICE FOR YOUR DRYER

We are proud of our customer service organization and the network of professional service technicians that provide service on your Panda appliances. With the purchase of your Panda dryer, you can have the confidence that if you ever need additional information or assistance, the Panda Products Customer Service team will be here for you. Just call us toll-free.

PANDA PRODUCTS CUSTOMER SERVICES

Product Information 1-866-371-2888 customer service email: service@ezbyonline.com	Whatever your questions are about our products, help is available.
Part Orders 1-866-371-2888 customer service email: service@ezbyonline.com	You may order parts and accessories that will be delivered directly to your home. You may order these items by personal check, money order, Master Card, or Visa.

YOUR Panda Products WARRANTY

Staple your sales receipt here. Proof of original purchase date is needed to obtain service under warranty.

WHAT IS COVERED LIMITED ONE-YEAR WARRANTY

For one year from the date of purchase by the original owner, Panda Products will, at its option, repair or replace any part of the appliance that proves to be defective in material or workmanship under normal use. During this period Panda Products will provide all parts necessary to correct such defects free of charge. In rental or commercial use, the warranty period is 90 days.

WHAT IS NOT COVERED

- Incidental or consequential damages.
- Service calls to:
 - Correct the installation of your dryer.
 - Instruction on how to use your dryer.
 - Replace house fuses or incorrect house wiring or plumbing.
- Repairs performed by unauthorized servicers.
- Repairs when your dryer is used in other than normal, single-family household use.
- Shipping and handling costs associated with the replacement of the unit.
- Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, or floods.
- Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the State of Alaska, Hawaii.
- Failure of the product if it is used for other than its intended purpose.
- Repairs caused by unauthorized modifications made to the appliance.

YOUR PANDA PROTECTIVE WARRANTY

WHAT IS COVERED UNDER THE WARRANTY?

For one year from the date of purchase, we will repair or replace, at our option, any part of the product that is defective in material or workmanship under normal use and this period includes the time spent waiting for parts and correct such defects. There is no charge for shipping or handling charges to transport the product to the repair center. We will also pay for the cost of shipping the product back to you. We will not be responsible for any damage to the product caused by misuse, accident, or unauthorized modifications made to the product.

WHAT IS NOT COVERED?

- Accidental or intentional damage, including damage caused by fire, flood, lightning, or other natural or man-made disasters.
- Damage caused by misuse, accident, or unauthorized modifications made to the product.
- Contact the installer for any problems related to the installation of the product.
- Instruction on how to use the product.
- Repairs to the product that are not covered by the warranty.
- Repairs performed by the installer or other third parties (not family members).
- Repairs when your driver is not in the area of the product.
- Shipping and handling charges associated with the repair of the product.
- Service calls that are not related to normal problems covered by the warranty, including power accidents, fire, or other natural or man-made disasters.
- Shipping and handling charges for any other parts, accessories, or service calls for the product, including those for service calls to repair damage to the product.
- Changes in the product's appearance that are not intended or caused by unauthorized modifications made to the product.