



WARRANTY

Register your product within 30 days of purchase to activate your one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTER WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period starting from the date of purchase from an authorized retailer. In the event that the product is defective, please contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to misuse, commercial use, accidents, or natural wear and tear.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

Customer Support: [ovente.com/support](https://www.ovente.com/support)

Visit us at [ovente.com](https://www.ovente.com)



Facebook.com/ovente



@OventeTweets



@Ovente

OVENTE®

Double Portable Ceramic Infrared Cooktop Burner

BGI202 Series



Before using please read the instruction manual and keep it for future use.



IMPORTANT SAFEGUARDS


When using your cooktop, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before use.
- Before plugging in the appliance, check that the socket and power matched those of the appliance. Attention shall be paid to whether the rated value of input supply voltage is according to that of rated input value or not.
- Provide close supervision when the burner is being used near children.
- Do not submerge the cooktop unit or electrical cord in liquid, touch the unit with wet hands, or use in a wet outdoor environment.
- Do not use the cooktop when the cooktop surface is cracked.
- Do not operate if the electrical cord is frayed or if wires are exposed.
- Do not let the electrical cord hang over the edge of a table or countertop.
- To disconnect, turn the control OFF, then remove the plug from wall outlet.
- Do not touch the cooktop surface for several minutes after using as it will be hot.
- Do not move the cooktop while cooking or with hot cookware on the cooktop surface.
- Do not place on or near a hot gas, electric burner or in a heated oven.
- Do not use the appliance for other than its intended use. Do not use outdoors.
- Do not use without a pot on the heating surface or it may lead to internal damage.
- Always unplug from the socket when the hot plate is not in use.



COOKTOP MAINTENANCE

- Unplug the power plug prior to cleaning the device. Do not use any caustic cleaning agents and make sure that no water penetrates the device.
- After cool down, wipe off the ceramic field with a damp cloth or use a mild, non-abrasive soap solution.
- Wipe off the casing and the operating panel with a soft cloth or a mild detergent.
- Do not use any petrol products to not damage the plastic parts and the casing/operating panel.
- Do not use any flammable, acidic or alkaline materials or substances near the device, as this may reduce the service life of the device and lead to deflagration when the device is turned on.

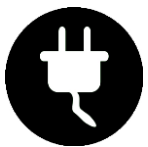

TECHNICAL SPECIFICATIONS

Input Voltage: 120V

Power: 1700W

Hertz: 60Hz

Heating Select Switch

| Knob | Temperature |
|------|-------------|
| 1 | |
| 2 | |
| 3 | |
| 4 | |
| 5 | |

6. Place a saucepan or skillet designed to be used on an electric range on the preheated burner.

For best results: Use a saucepan or skillet as close to the size of the burner as possible. Cookware that is too small or too large will not produce acceptable cooking results.

Important: Use pot holders whenever to using or moving cookware on the burners.

7. Put the food into the cookware and put the cookware on the center of heating plate.




Note: The better the pot, the better the cooking result. The base should be flat as possible.

Caution: Do not leave food unattended.

8. When cooking is completed. turn the temperature control knob to (●●●).

Unplug the appliance.

Important: Be sure to turn burner(s) off completely after use by unplugging the appliance. Never leave the appliance on or plugged in when not in use.

- Allow it to cool before putting or taking parts off. Do not touch or insert the plug with wet hands to avoid electric shock.
- Do not remove the pan when in use as the temperature on the glass is high. The glass is hot when in use or shortly after use, power cord and other non heat-resistant items are strictly prohibited from touching hot surfaces.
- When using the appliance or the appliance is still hot, please protect the appliance from touching inflammable materials, such as oil, curtains, cloth, etc
- Never put plastic foils, paper or other inflammable objects on the cooker or cover the plate exhaustively with metallic foil.
- Keep the cooktop out of the reach of children. Do not leave children unsupervised with the cooktop.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by the person who is responsible for their safety.
-  The center surface gets extremely hot; refrain from touching the appliance.
- The hot plate is designed only for heating and cooking food, and must only be used with cooking pots and pans placed on it.
- For the most efficient operation of the hot plate, the pots and pans that you use must be in good shape: having a solid base, the bottom of pans should be flat and even for maximum heat efficiency.

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord: and
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

COOKTOP PARTS





USING YOUR COOKTOP

1. Remove all packaging materials.
2. Wipe the base and burners with a damp soft cloth or sponge and wipe dry.
3. Select a location on flat smooth surface where this unit is to be used allowing enough space (we suggest 4 to 6 inches) from the appliance and the wall or any cabinets to allow heat to flow without damage to cabinets and walls.
4. Unwind the cord and plug it into a standard electrical outlet.

Caution: Do not use this appliance in a tilted position.

Before first use, turn the temperature control knob(s) on burner(s) to high (5) and allow the burner(s) to run for 5 minutes to burn off any residue resulting from the manufacturing process.

5. Turn the temperature control knob beside the heating element to be used to select the desired heat setting. The on indicator light next to the temperature control knob will be illuminated until the selected temperature has been reached and then will cycle on and off to indicate the burner is operating.

Note: Preheat the burner for about 1 minute before placing a saucepan or skillet on the burner.