

Model No. LUNA20-PC-4K-BZ
Mfr. SKU 103-02300011-1

PROBRITE™

**LUNA LED
WALLPACK**

**INSTALLATION,
USAGE, & CARE GUIDE**



Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email PROBRITE
Customer Service 9am-5pm EST Monday to Friday.

1-844-507-5651

support@PROBRITE.com

PROBRITE.COM

Visit us online anytime or call us to get information on our product range, download detailed spec & photometric files, find product and mounting accessories, view installation tutorials and videos, and learn about our DLC® rebate eligible products.

Table of Contents

Table of Contents.....	2	Installation.....	5
Safety Information.....	2	Operation.....	9
Pre-Installation.....	3	Care & Cleaning.....	10
Planning Installation.....	3	Troubleshooting.....	10
Specifications.....	3	Warranty.....	11
Tools Required.....	3		
Hardware Included.....	4		
Package Contents.....	4		

Safety Information

IMPORTANT

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

PRECAUTIONS

- Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- This light fixture requires a 120-277Volt AC power source.
- Some codes require installation by a qualified electrician.
- This light fixture must be properly grounded.
- Make sure connections are secure using wire nuts, crimp-on lugs or other approved connecting devices
- This light fixture should be installed outdoors to the wall.
- This product may contain chemicals known to be hazardous. Thoroughly wash hands after installing, handling, cleaning or otherwise touching the product.



WARNING: Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the light fixture.



WARNING: Risk of fire. Keep the lamp heads at least 3 in. (76mm) from combustible materials.



CAUTION: Burn hazard. Allow the light fixture to cool before touching.



NOTICE: Do not connect this fixture to a dimmer switch.



NOTICE: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorization to operate this equipment.



INFORMATION: The device is tested and found to comply with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference and, (2) this device must accept any interference received, including any interference that may cause undesired operation.

These limits are designed to provide reasonable protections against harmful interference when the equipment is operated in a commercial environment.

Pre-Installation

PLANNING INSTALLATION

Before installing the light fixture, ensure that all parts are present. Compare parts with the *Hardware Included* and *Package Contents* sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture.

Estimated installation time: 20 minutes

SPECIFICATIONS

Lumens (Light Output)	1800 Lumens
Watts (Power Consumption)	20 Watts LED
Replaces	150 Watt Incandescent Bulbs
Lumens/Watts (Efficacy)	90 lumens per watt
Power Requirements (Input Voltage)	120-277VAC
Light Color (CCT)	4000 Kelvins (Bright White)
Dimmable	Non-Dimming (Do not wire to dimming switch)
Operating Modes	<p>Dusk-to-Dawn: Automatically turns light fixture ON during night and OFF during day.</p> <p>Switch-Controlled: Flip switch to turn light fixture ON and OFF. Use included light sensor cover on fixture's light sensor to utilize this mode setting.</p>

TOOLS REQUIRED



Phillips Screwdriver



Flathead Screwdriver



Circuit tester



Silicone Sealant



Wire strippers/cutters



Ladder



Safety goggles



Flat head hammer




Work gloves

Pre-Installation (continued)

HARDWARE KIT




NOTE: Hardware *not* shown to actual size.

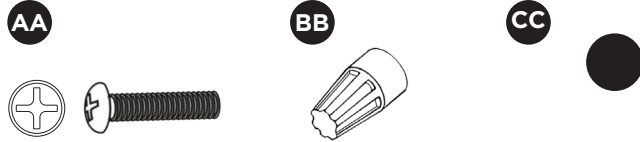

Part	Description	Quantity
AA	#8-32 x 3/4" philips mounting bracket screw	2
BB	Wire nut	3
CC	Photocell Black Cover Label	1

PACKAGE CONTENTS

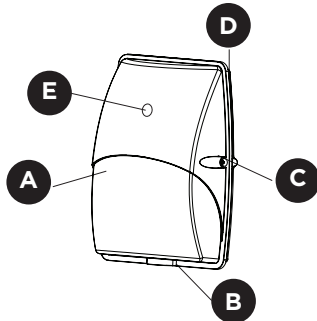

Part	Description	Quantity
A	Light fixture	1
B	Conduit entry plug	1
C	Mounting base tightening screw (pre-installed)	2
D	Mounting base plate	1
E	Photocell lens	1


Installation

1 For best results


- The fixture can be mounted in the following two ways:
 - Junction Box Mount:** Use an junction box to mount the fixture.
 - Surface Conduit Mount:** The fixture can also be mounted directly on the wall surface using conduit entry.
- When mounting fixture, for Dusk to Dawn operation, make sure the photocell orientation is at the top for wall mount, in an area that receives daylight and not too close to reflective surfaces. When mounting fixture, make sure the photocell orientation is at the top for wall mount.
- When installing two fixtures on one switch, make sure the switch is rated for at least a 1A inductive load.
- Do NOT wire to dimming switch.



NOTE: Mounting base (D) mounts to recessed mounted standard junction boxes or to the surface directly. Junction box must be at least 1-1/2 inch in depth for proper installation for recessed mount application (fig 2).

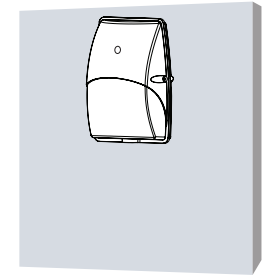

Wall Mount

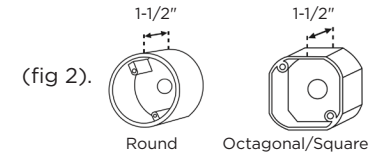


2 Shut electric power off


- At wall switch verify it is in the off position (fig 1).
- At the main electrical panel turn off the circuit breaker that supplies power to the outlet box you are working on (fig 2).
- For screw-in type fuses unscrew the fuse that supplies power to the outlet box you are working on (fig 3).



(fig 1).

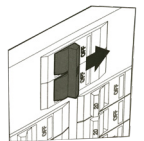

(fig 2).

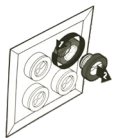

(fig 3).

Installation (continued)

3 Remove the mounting base plate




NOTE: The mounting plate tightening screws (C) comes pre-installed on the light fixture.

- Loosen the two mounting base tightening screws (C) using a philips screwdriver and remove the refractor.
- Remove the refractor from the base plate (D) by loosening the two small screws.




CAUTION: DO NOT touch the LED and Photocell lens (E) inside the fixture. DO NOT damage or soil the refractor.

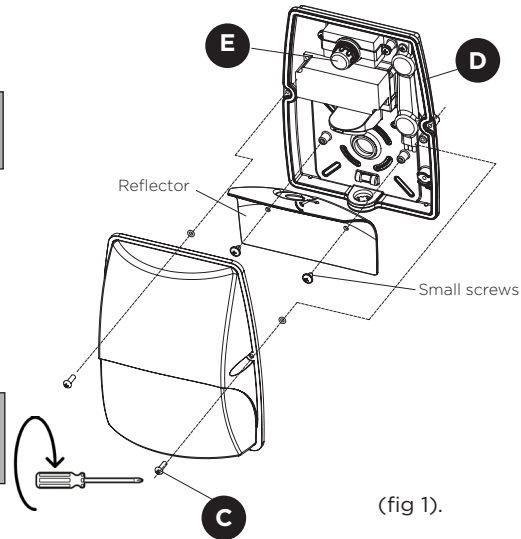

(fig 1).

4 Knock out holes on mounting base

- Refer to the guide in Fig. 1a to select the holes to knock out or measure your junction mounting holes and determining proper knock-outs on the fixture's back housing.
- Use a flat head hammer and screw driver to knock out two holes in the mounting base (D) in the desired location to align properly with the junction box. (Fig. 1b)

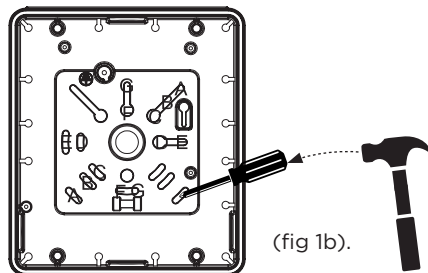

(fig 1b).

Junction Box Mounting Guide

A-A	4" Square Box	E-E	4" Round Box
B-B	4" Octagonal Box	F-F	2-3/4" Hole Pattern
C-C	3-1/2" Square/Octagonal Box	G-G	Single Gang
D-D	Masonry Box		


(fig 1a).

Installation (continued)

5 Installing the mounting base

Junction box Mount


- Route the junction box wires through the large center hole in the mounting base (D).
- Align the holes on the mounting base (D) with the holes on your junction box. Use two #8 screws (AA), depending on the size of the holes in your junction box, attach the mounting base (D) to your junction box. (Fig. 1)

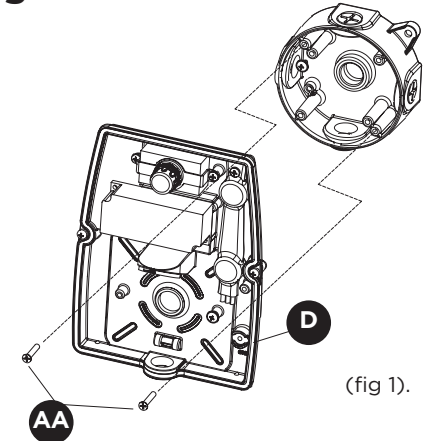

(fig 1).

Surface Conduit Mount

- Mark and drill two holes on the wall surface as per the desired location for fixing the mounting plate (D).
- Use two or more suitable screws (provided by others) applicable to the surface of mounting and fix the mounting plate (D) on the surface. (Fig. 2)

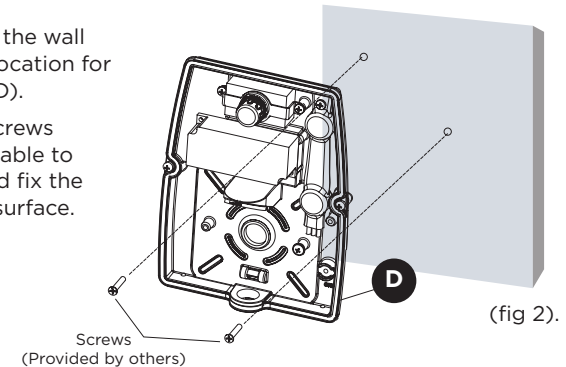


(fig 2).

6 Making the electrical connections

Junction box Mount

- Follow the wiring instructions given below to make the electrical connections. (Fig. 1)

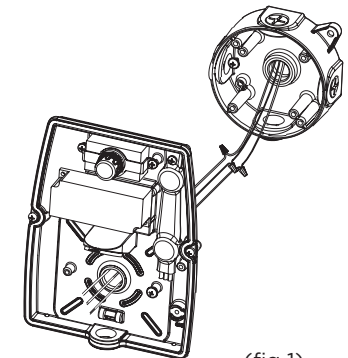

(fig 1).


 

Installation (continued)

Surface Conduit Mount

- Remove conduit plug from the bottom of the fixture from the where conduit will enter. (Fig. 2)
- Make wiring connections inside the fixture as per the instructions given below.

Wiring Instructions

- If necessary, strip 3/8" of insulation from junction box or fixture (A) wires (fig 3).
- Connect fixture black wire to house black wire, the (+) line, and fixture white wire to house white wire, the (-) common by twisting the exposed wires together and using the wire nuts (BB). Ensure no loose wires.
- Connect house ground wire to the green fixture ground wire, by twisting the exposed wires together and using the wire nuts (BB).

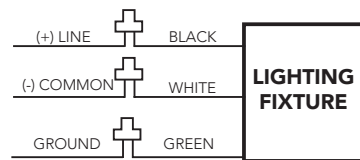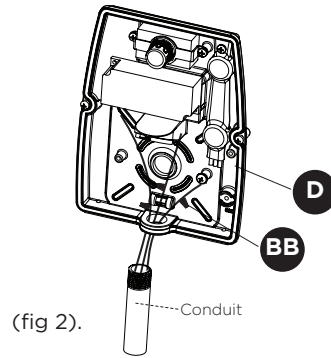


TIP: Hold stripped ends near each other and align any frayed strands (do not twist wires).

Push the wires into wire nut (BB) and use your fingers to twist the wire nut clockwise until tight. Check for tightness by pulling wires.

7 Securing the light fixture on the mounting base

- Replace the reflector on the mounting base plate (D) using the two small screws, using a philips screwdriver, removed in the Step 1.
- Close the fixture by tightening the mounting base tightening screw (C), using a philips screwdriver, which was removed earlier in Step 1. (Fig. 1)

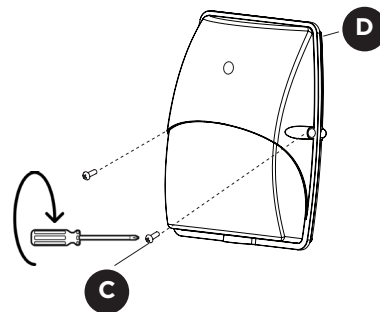


(fig 1).

Installation (continued)

8 Caulking around the light fixture

- Caulk around the mounting plate (D) and surface with silicone sealant (not included).

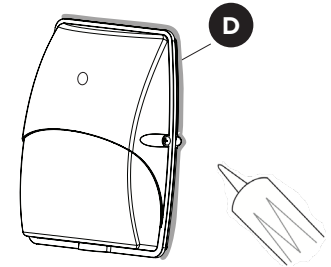

NOTICE: Failure to properly caulk around the surface and mounting plate (D) could lead to water damage and is not covered under warranty.



NOTE: When attaching this fixture (A) to an external, surface mount junction box, caulk the inside of the light fixture before attaching to the mounting plate (D).

Operation

1 Selecting Dusk-to-Dawn or Switch-Activated control

OPTION 1: DUSK-TO-DAWN OPERATION


Dusk-to-dawn operation enables the light fixture to automatically turn ON when dark outside and turn OFF when the sun rises, thus saving you energy.

AUTOMATIC NIGHTTIME ON



DAYTIME OFF

- To enable dusk-to-dawn operation remove temporary black label cover and ensure the photocell (E) has no cover on it and is unobstructed.
- Ensure the switch powering the outlet connected to the light fixture is turned to the ON position and *leave it ON* at all times to enable dusk-to-dawn functionality to operate automatically.

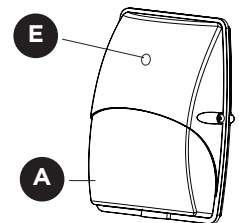

(No cover on photocell for Dusk-to-Dawn Operation)



TIP: To test if the light fixture (A) and photocell (E) works properly run power to the fixture ON and cover the photocell to turn fixture ON. Shine a light into the photocell to see if fixture turns OFF.




NOTE: If photocell (E) is located in an area under heavy shade the photocell may not detect enough light and may turn the light fixture on.

Operation (continued)

OPTION 2: SWITCH CONTROLLED

Switch controlled operation enables the light fixture to turn ON and OFF by flipping a switch that controls the electricity to the outlet powering the fixture. The light fixture will not turn ON and OFF automatically, but is manually controlled.

- To enable switch activated operation paste the black cover sticker (provided in the hardware kit) on the photocell.

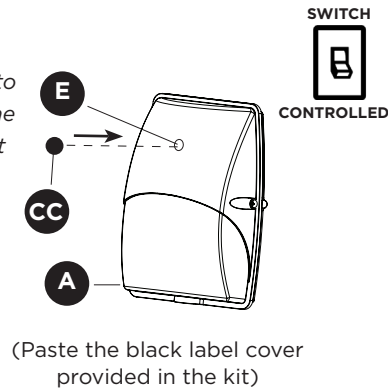

Care and Cleaning

- Shut off main power supply before cleaning the product. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- Do not spray the light fixture with a hose or power washer.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn ON	No power to the fixture	Check if circuit breaker is tripped Confirm wall switch is ON Verify wiring to fixture is correct (turn power off to fixture beforehand)
	Fixture is sensing daylight	Cover photocell. Wait several seconds until fixture turns ON.
Light cycles ON and OFF continuously	Photocell light sensor is sensing reflected light	Relocate light fixture to a location where there is no reflected light. OR place the optional opaque photocell cover over the photocell light sensor and use the wall switch to turn the light ON and OFF.

Troubleshooting (continued)

Problem	Possible Cause	Solution
Light FLICKERS	The light fixture is wired through an unsuitable dimmer	Replace the dimmer with a 0-10V dimming switch or a standard ON/OFF wall switch.
Light stays ON	Light sensor is in a shaded area	Shine a flashlight into the light sensor and wait a couple minutes. If the light turns OFF, the fixture should be moved to a location with enough light in the daylight hours for the light sensor to work. OR place the optional opaque cover over the photocell light sensor and use the wall switch to turn the light ON and OFF.
	Light Sensor is faulty	If the light does not turn off when a flashlight is shined on the light sensor for a few minutes, then the sensor may be faulty. Please contact customer service.

5-Year Limited Warranty

This is a limited warranty offered by Probrite for a period of five years from the date of purchase to its customers. Probrite warrants to customers that the products will be free from defects in material and workmanship. The obligation of Probrite under this warranty is limited to the provision of replacement of products and is extended to the original purchaser of the product on presenting valid purchase receipt or other proof of date of original purchase acceptable to Probrite. The receipt is required for rendering the warranty performance. Any warranty claims without original proof of purchase would not be accepted. It should be noted that the warranty does not apply to Probrite products that have been altered or repaired by unauthorized personnel, have been subjected to neglect, abuse, misuse or accident or damages caused during shipping. Any other products not manufactured by Probrite which have been supplied, installed and/or used in conjunction with Probrite products are not covered under this warranty. Any damages caused by replacements bulbs, LEDs or corrosion or discoloration of brass components are also not covered by this warranty.

Limitation of Liability:

In no event Probrite shall be liable for indirect, consequential, incidental or special damages, or lost profits. Probrite is not liable for any claims or damage arising out of or connected with the manufacture, sale, delivery, use, maintenance and repair or modification of Probrite products, or supply of any replacement parts that, exceed the purchase price of Probrite products giving rise to a claim. Labor charges to remove or install the fixtures will not be accepted.

To Claim:

Please contact PROBRITE customer service at 1-844-507-5651 or email support@PROBRITE.com and include your name, address and contact number, along with a copy of the purchase receipt and a brief description of the problem.

PROBRITE™

Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email PROBRITE
Customer Service 9am-5pm EST Monday to Friday.

1-844-507-5651

support@PROBRITE.com

PROBRITE.COM

RETAIN THIS MANUAL FOR FUTURE USE

**Para las translaciones en español,
visit www.probrite.com/install**