

OVENTE®

**Cyclonic Bagless Canister Vacuum with Sofa
and Multi-Angle Brush, 1400W
ST2620 Series**



Before using please read the instruction manual and keep it for future.



WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)
Visit us at [ovente.com](https://www.ovente.com)**



Facebook.com/ovente



@OventeTweets



@Ovente

 
TRANSPORT AND STORAGE

- You can lift and carry the vacuum cleaner using the carrying handle. Never pull or lift the vacuum cleaner by the cord.
- Before putting the vacuum away, rewind the cord. Switch off the socket, unplug, and press the cord rewind button until the cord is fully rewound.
- To save space, the vacuum can be stored upright on its end cover. The telescopic tube can be hung on the vacuum cleaner by inserting the parking fixture into the vertical parking holder.

VACUUM MAINTENANCE

- Unplug the vacuum cleaner from the mains
- Clean the vacuum cleaner body by wiping it with a slightly damp cloth.
- You must not use any form of strong, solvent or abrasive cleaning agent.
- Wait until dry before next use

Never wash the appliance or power cord; the housing may be cleaned by means of a slightly dampened cloth only

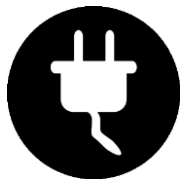

ELECTRICAL REQUIREMENTS

Voltage: 120V

Hertz: 60Hz

Power: 1400W

1400W Cyclonic Canister Vacuum

Compact yet powerful as compared to the rest of the vacuums available in the market. The singular cyclone that was being produced by the cyclonic vacuum enables the speeding up of the airflow and forcing the dust away from the filter and into the bin. Boasting its 1400-watt of power, this cyclonic vacuum provides very powerful suction and clean areas seamlessly. Speed Control function that adjusts power depending on how you like it and when you want it. It uses Hepa filter that protects against over 99 percent dust and allergens -- this makes filters very easy and convenient. This cyclonic vacuum has an automatic cord rewinder with the press of a button. It comes with a translucent dust compartment.

- Adjustable Speed Control that regulates the power of the vacuum to your liking
- With 1400-Watts, this vacuum can clean in-depth surfaces easily, comes with integrated accessories for different floor types
- Compact and move around easily, can also be used for travel
- Permanent bagless design with translucent dust compartment, Lightweight and expandable metallic wand
- Step buttons for ON and automatic cable rewinder for easy access, 360-degree hose swivel



IMPORTANT SAFEGUARDS



When using your vacuum, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS.**
- Check to ensure your electricity supply corresponds to that shown on the rating plate, which can be found on the base of the vacuum between the wheels. The vacuum must only be used as rated.
- Do not leave appliance when plugged in. Unplug from electrical outlet when not in use.
- Do not use outdoors or on wet surfaces or to vacuum water or other liquids – electric shock and personal injury might occur.
- Do not use with a damaged cord or plug; do not pull or carry by the cord; do not use the cord as a handle; do not close a door on the cord or pull the cord around sharp edges or corners. Do not run the machine over the cord. Keep the cord away from heated surfaces and open flames.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or vacuum with wet hands.
- Do not use the vacuum without the canister and the filter in place.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not allow use by anyone unable to operate the vacuum properly.
- Use only as described in this manual. Use only with Ovente recommended attachments, accessories, and replacement parts.

CLEANING THE EXHAUST AIR FILTER

The exhaust air filter cleans the air a final time before it leaves exhaust sponge filter the vacuum cleaner. You can clean the exhaust air filter as follows:

- Switch off the vacuum cleaner and disconnect the plug from the mains. To do this, always pull on the plug and not on the cable.
- Remove the dust container
- Open the exhaust sponge cover.
- Rinse the sponge filter under cold running water and allow dry.
- Put the exhaust air filter back into place.
- Close the exhaust sponge cover.

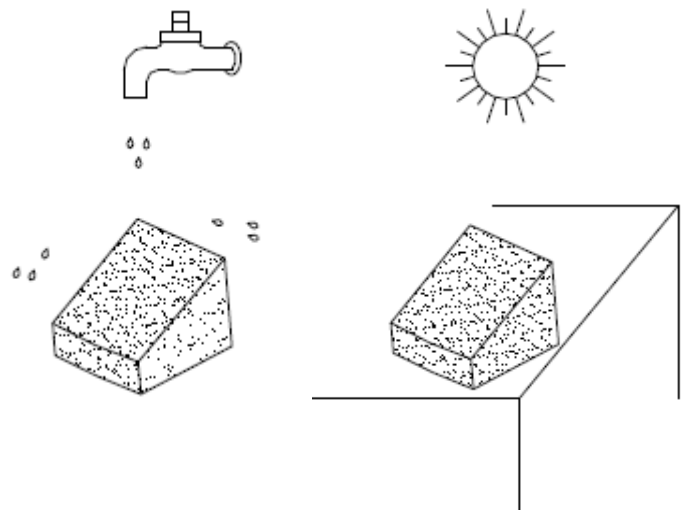
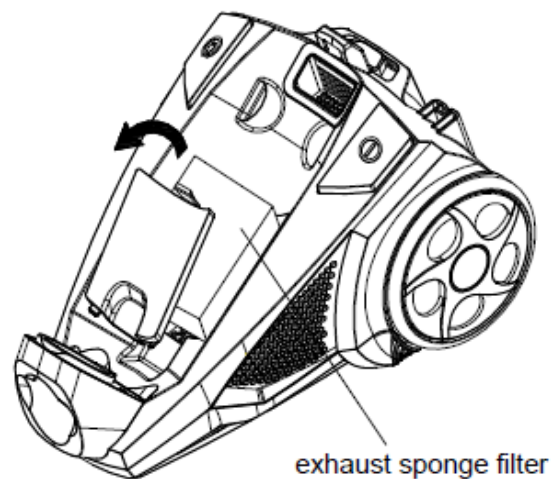


- Do not put any objects into openings in the vacuum. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.



CLEANING THE MOTOR FILTER

- Turn off and unplug cleaner.
- Remove the dust container.
- Open the dust container cover and take the filter out.
- Hold the protective motor filter over a dustbin. For a rough clean, gently knock over a dustbin.
- Insert the dry protective motor filter back into its holder.
- Place protective motor filter together back into its receptacle.
- Replace the filter cover by hooking it precisely from above first, and then engage the lock by pressing it until audibly clicks into place.
- Place the dust container onto the cylinder vacuum cleaner.
- Check whether the dust container is securely seated.

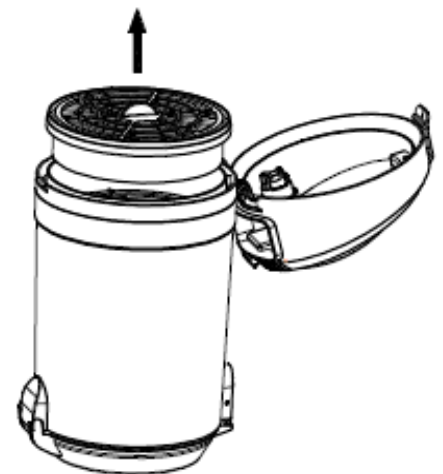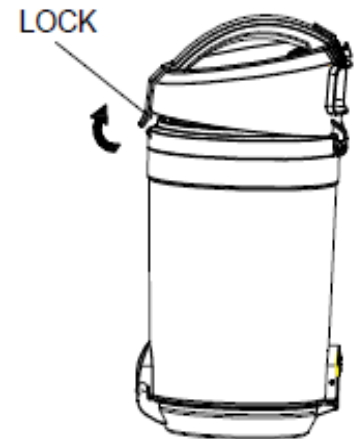


IMPORTANT! Never use the vacuum cleaner without a motor filter.

- Keep hair, loose clothing, fingers, and all parts of body away from openings in the vacuum and moving parts such as the floor brush.
- Do not use without filter in place.
- Ensure that the cord is fully extended.
- Do not use the vacuum to pick up sharp hard objects, small toys, pins, paper clips, etc. They may cause damage to the vacuum.
- The use of an extension cord is not recommended.
- Store the vacuum indoors. Put the vacuum away after use.
- Turn off all controls before unplugging.
- Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- Take extra care when cleaning on stairs; always work with the machine at the bottom of the stairs. Keep vacuum on the floor. Do not put on chairs, tables, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Ensure that the power cable never becomes wet or moist during operation.
- Never submerge the appliance or the power cable in water, and do not clean these components under running water.

VACUUM PARTS




1. Floor Nozzle
2. Telescopic Tube
3. Parking Fixture
4. Storage lip
5. Air Slide
6. Suction Hose
7. Carrying Handle
8. Suction Hose Connection
9. ON/OFF Button
10. Release Button
11. Cord Rewind Button
12. Power adjustment button
13. Crevice and Bristle Brush
14. Furniture Nozzle

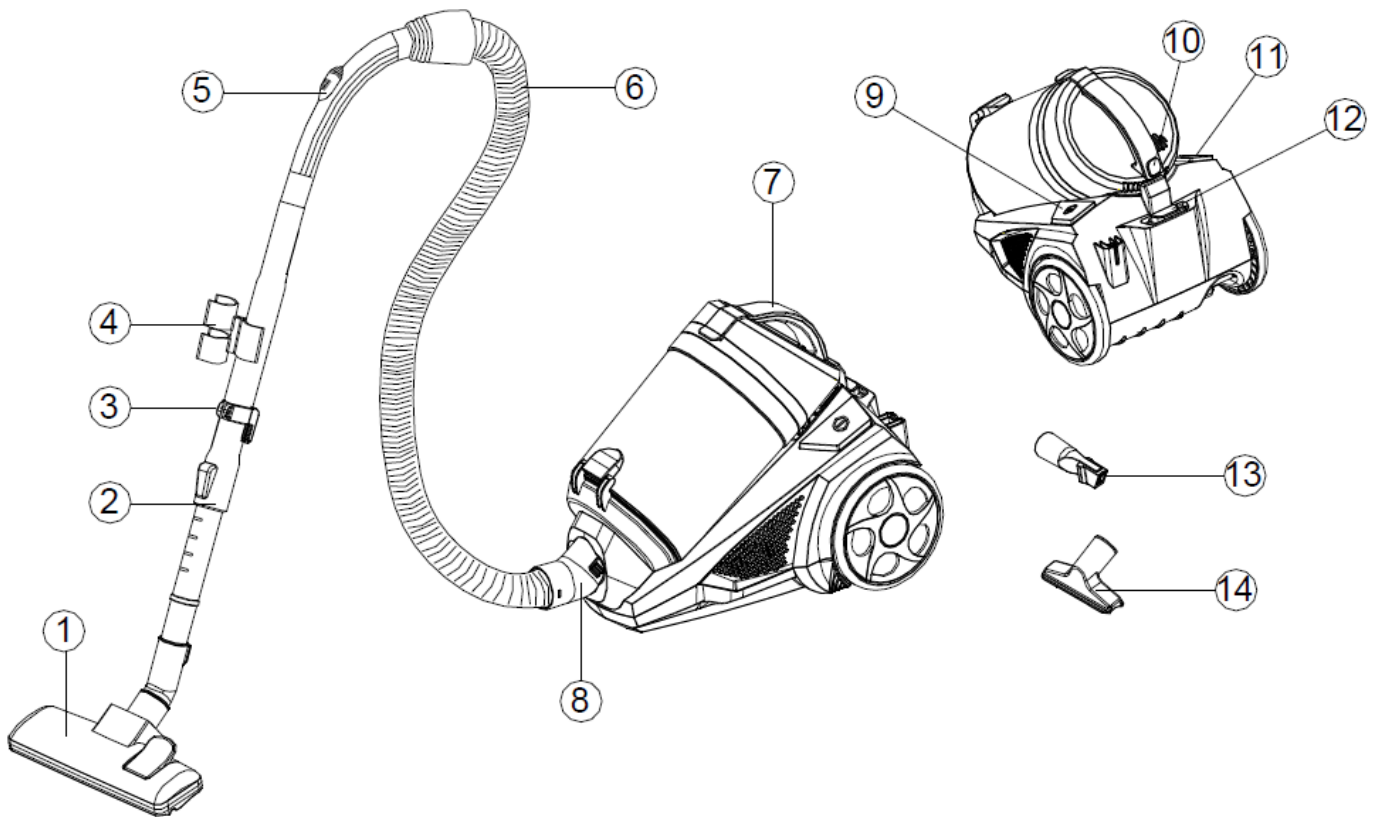

EMPTYING DUST CONTAINER

Empty the dust container regularly, at the latest when the quantity of dirt in the dust container has reached the "MAX" mark or the suction power has dropped.

   
- Switch off the vacuum cleaner and disconnect the plug from the mains. To do this, always pull on the plug and not on the cable.
- Release the dust container by pressing down the release button (1).
- Lift the dust container forwards out of the cylinder vacuum cleaner (2).
- When emptying the dust container, hold it low over a dustbin.
- Press the open button. The base opens and the dust runs into the dustbin (3).
- Carefully knock the remaining dust loose.
- Close the base.
- Place the dust container onto the cylinder vacuum cleaner.
- Check whether the dust container is securely seated.

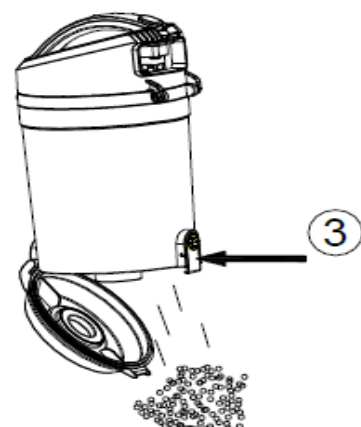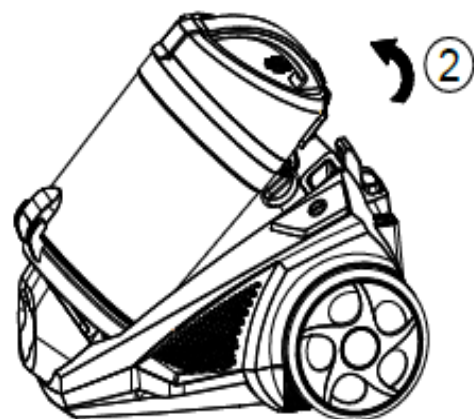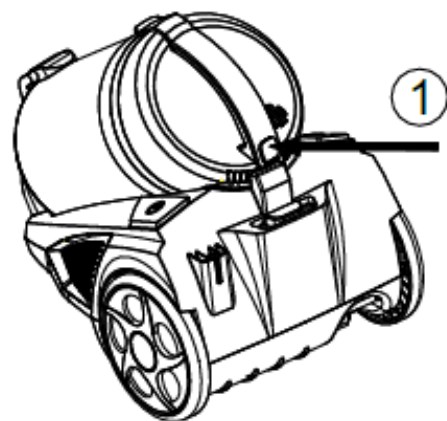

USING THE VACUUM

Before using the vacuum, first roll out a sufficient of electric flex cable and then plug the cleaner into mains socket.

The yellow mark on the electric cable is the maximum length, this must not be exceeded.

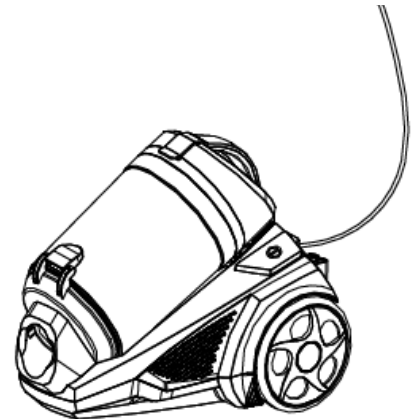


To switch on the device, press the foot pedal button casing with your foot.



To rewind the power cable, press the button with one hand and guide the cable with the other hand to ensure that it does not whip causing damage.



ENERGY SAVING

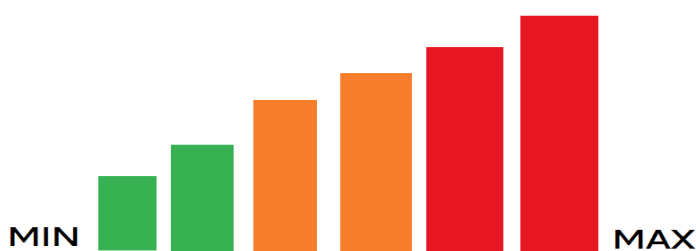


Conserve energy by using the speed control.

ASSEMBLING THE VACUUM


- Fit the hose on the vacuum cleaner by inserting the rotating hose connection into the vacuum cleaner until you hear a click. To remove the hose, press the button at the side of the hose connection and then pull it out.




- Fit the telescopic tube into the other end of the hose.

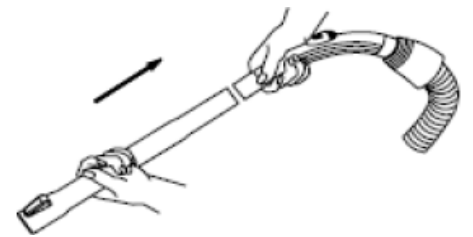

- Adjust the length of the telescopic tube by pushing the locking mechanism down and pulling in the bottom section of the tube to a suitable length. When parking, shorten the tube as far as possible.

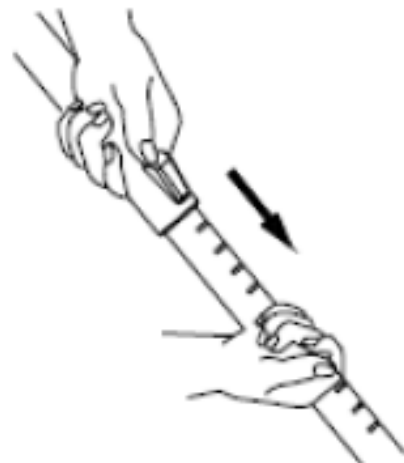


- Fit the floor brush into the telescope tube.

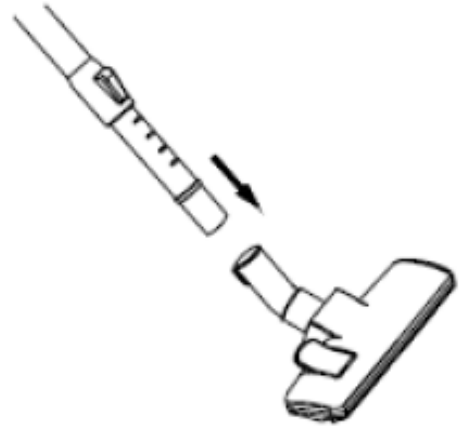

Floor Nozzle


The floor nozzle has two settings. When cleaning hard surfaces (parquet flooring, flooring tiles, etc.), the nozzle brushes should be extended. When cleaning carpets and mats, the brushes should be retracted into the nozzle.

Press the brush change button to switch between the two settings

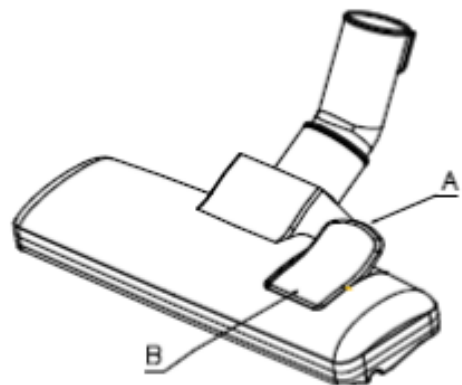

Crevice and Bristle Brush

For radiators, corners, skirting boards, etc.

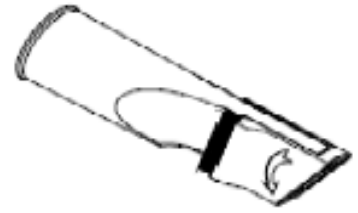

Furniture Nozzle

For furniture, curtains, drapes, etc.



Pet/Sofa Brush

For upholstery/sofa, etc.



Multi-Angle Brush

For high reach ceiling, lighting, furniture tops, etc.

