



 
decora smart™ Wi-Fi App Guide



Adding a Device


Device Screen

1

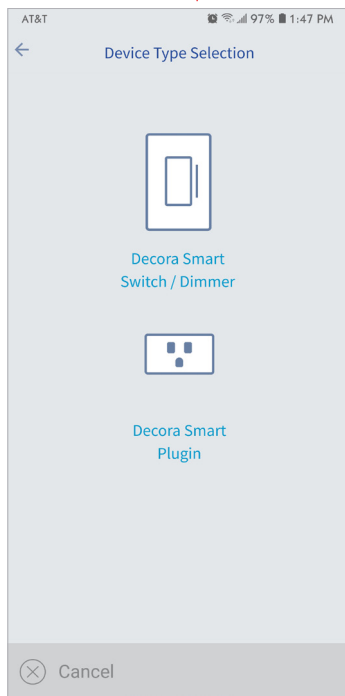


Select Device Type

 2

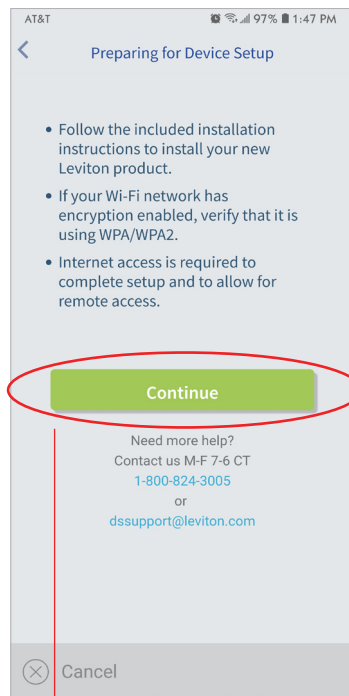


Tap 'Continue'

 3

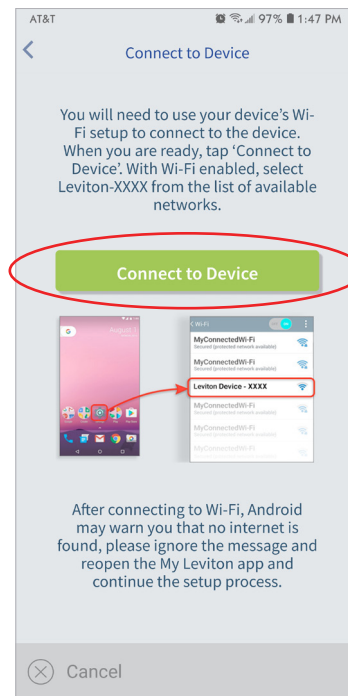


4

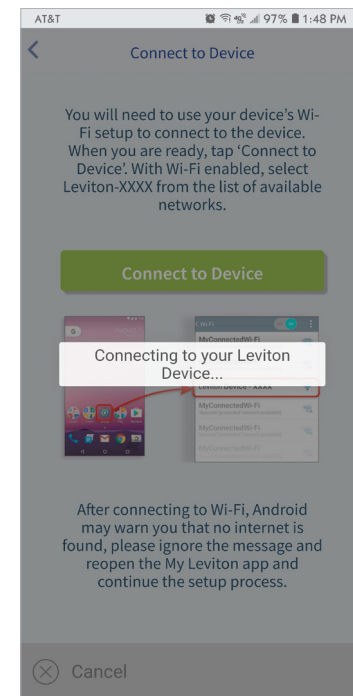 


Adding a Device

 
5

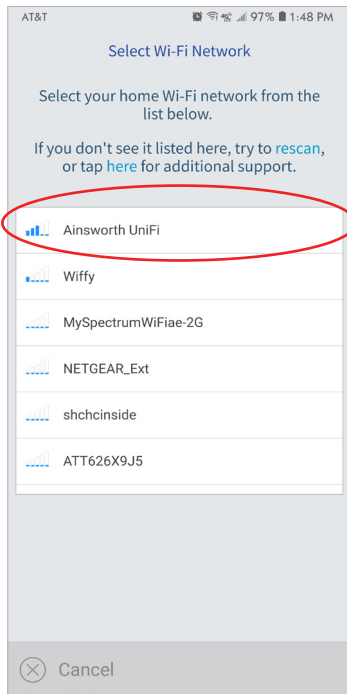

6

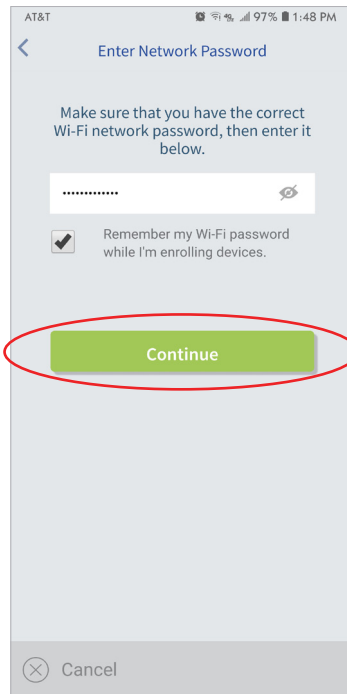 


7

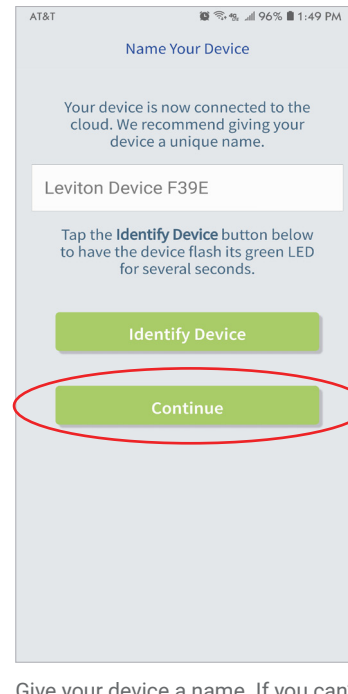 


Give your device a name. If you can't remember which one it is, tap 'Identify Device.' Once ready, tap 'Continue.'

 8

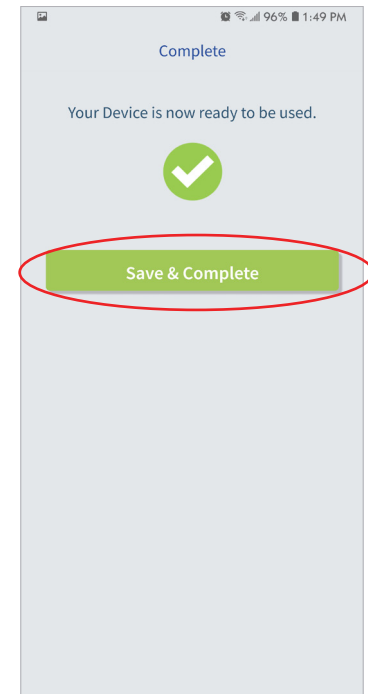


Adding an Activity

 
1

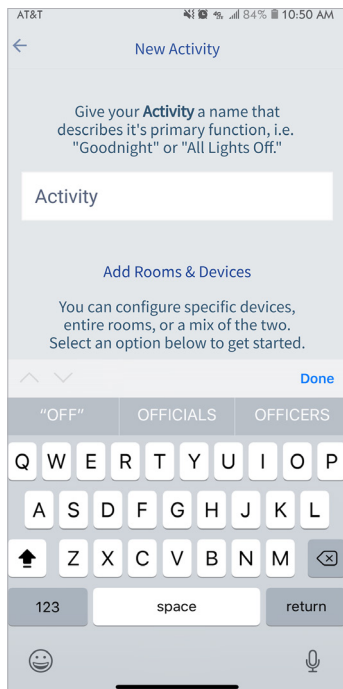


2

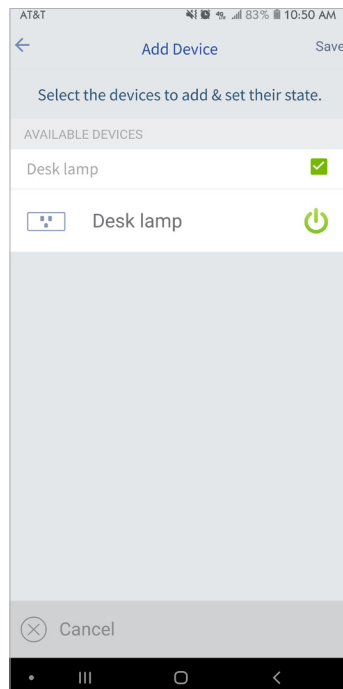 

3

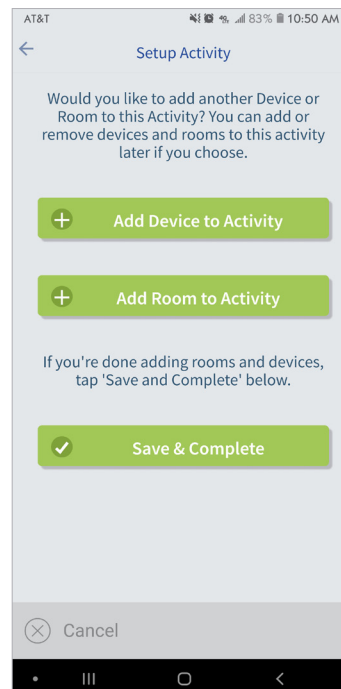 


4

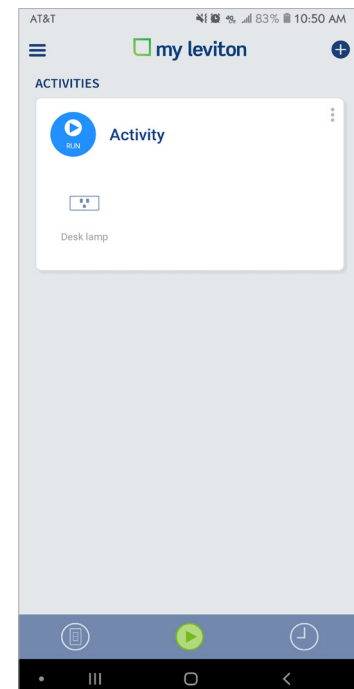 


Adding a Schedule

 
1

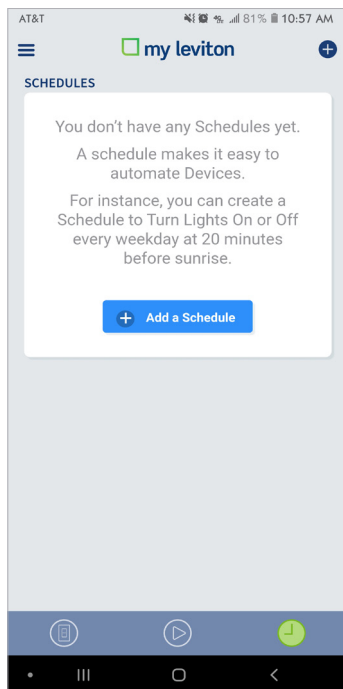


2

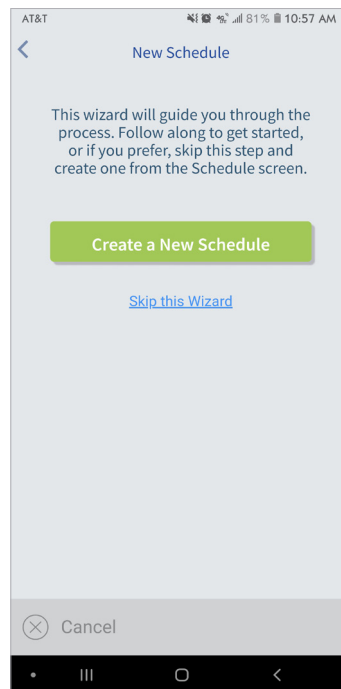 

3

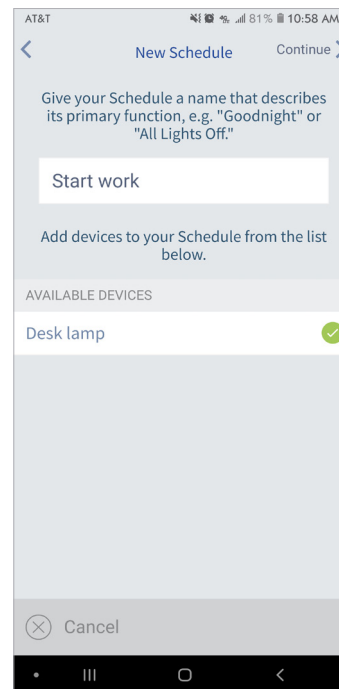 


4

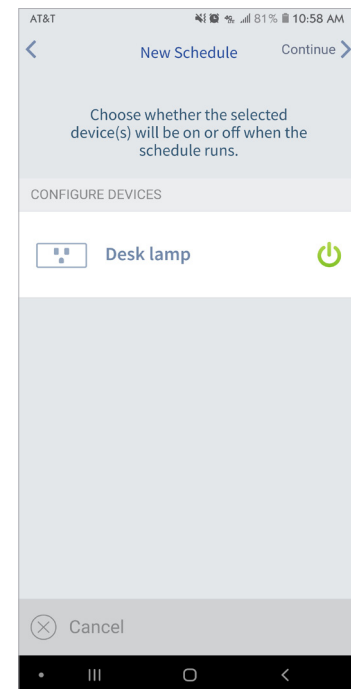 


Adding a Schedule

 
5

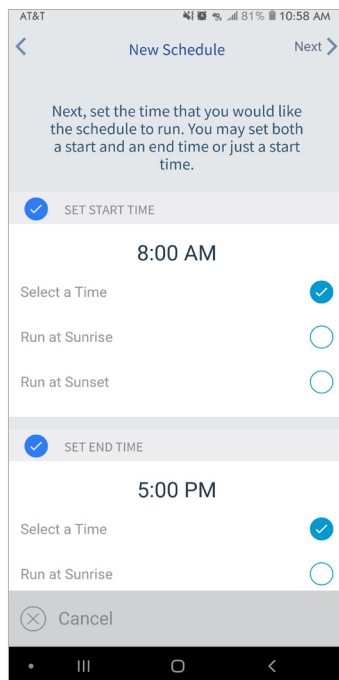

6

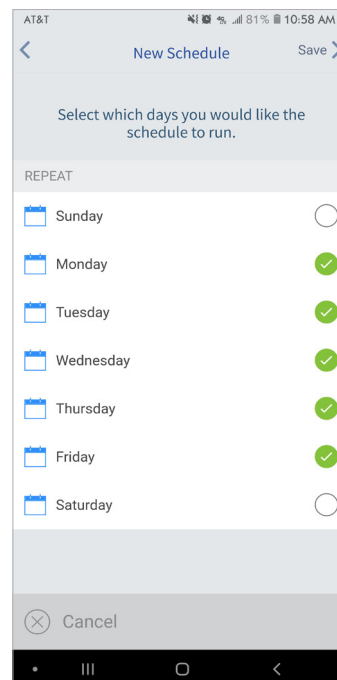 


7

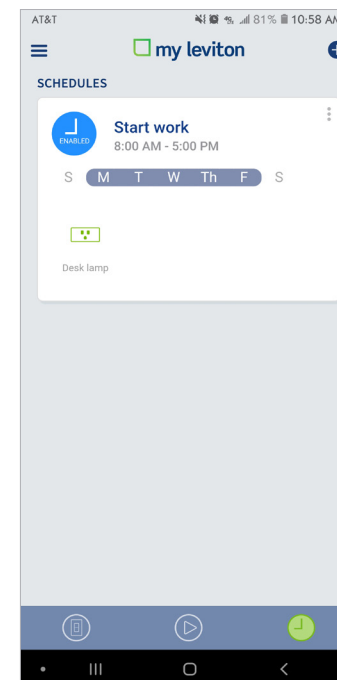 


Adding a Room

 
1

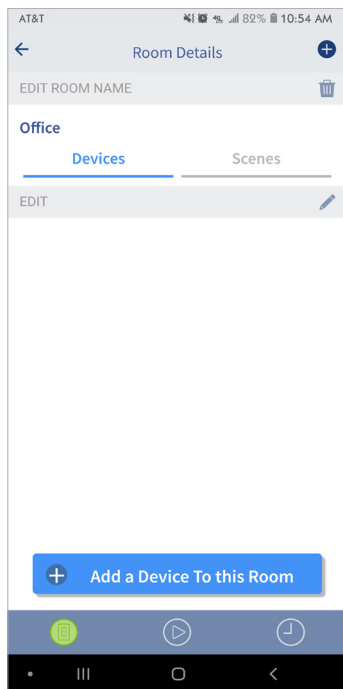


2

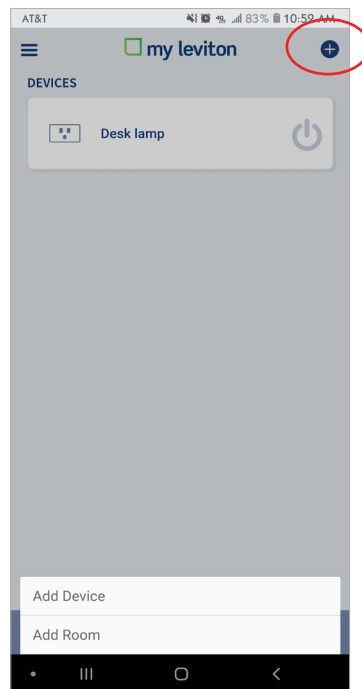 

3

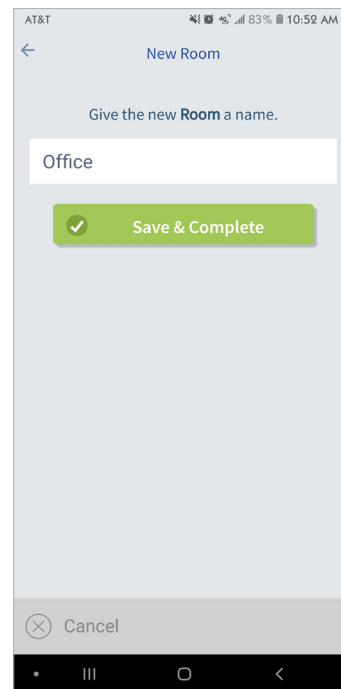 

4

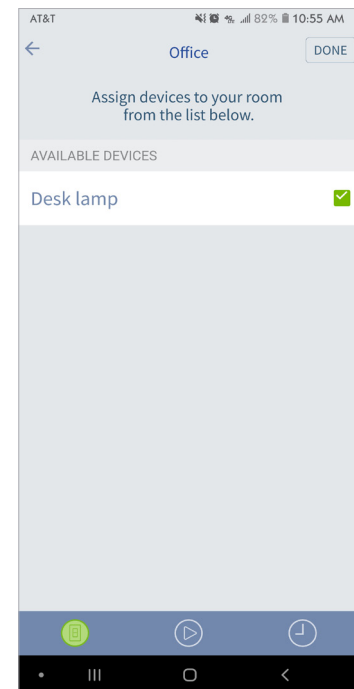 


decora smart™ Wi-Fi App Guide




Assign a Device to a Room



 
1

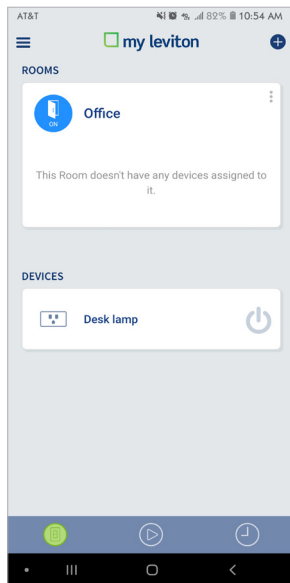


4

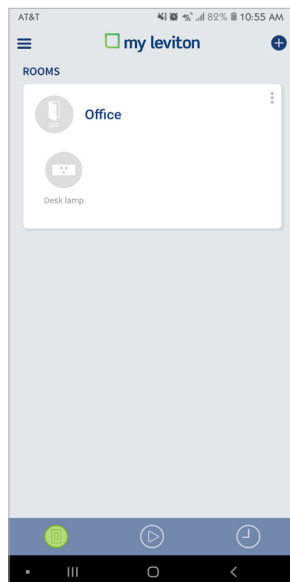 

2


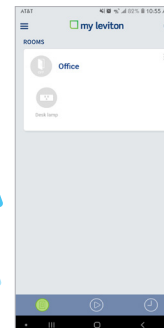 
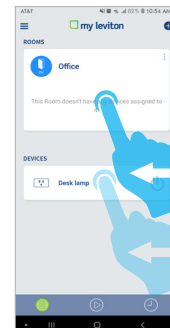 
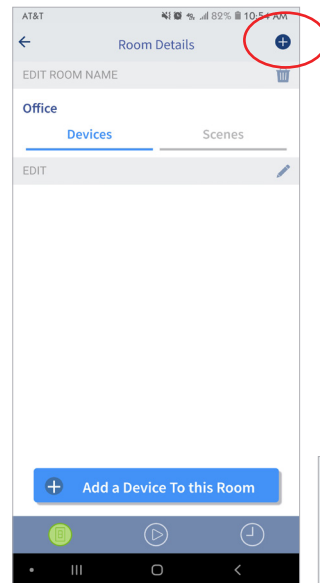 


3

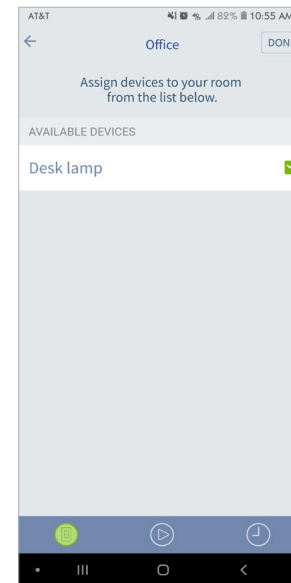 

Advanced Dimmer Settings

    To access the advanced Dimmer controls, expand the dimmer card in the UI and tap 'Device Setup & Configuration'.

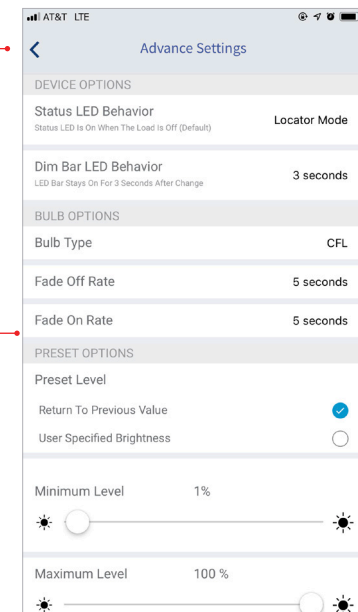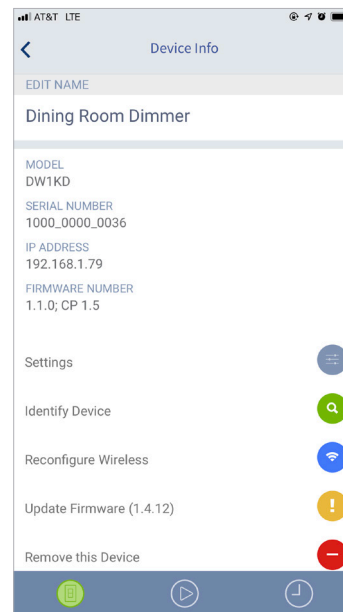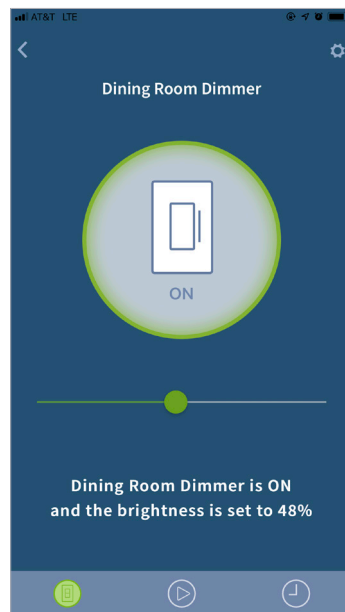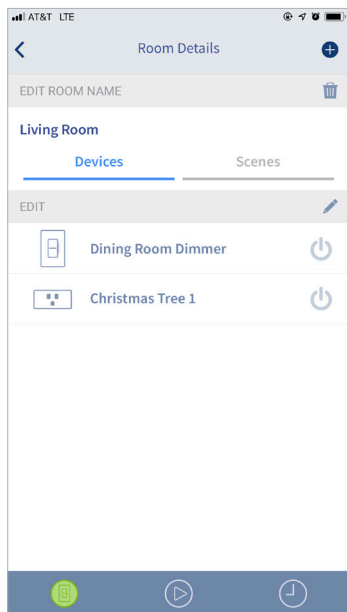

Advanced Dimmer controls allow granular control.

- * Bulb Type
- * Fade Rate
- * LED Behavior
- * Preset Levels