


PRODUCT OVERVIEW

Parts

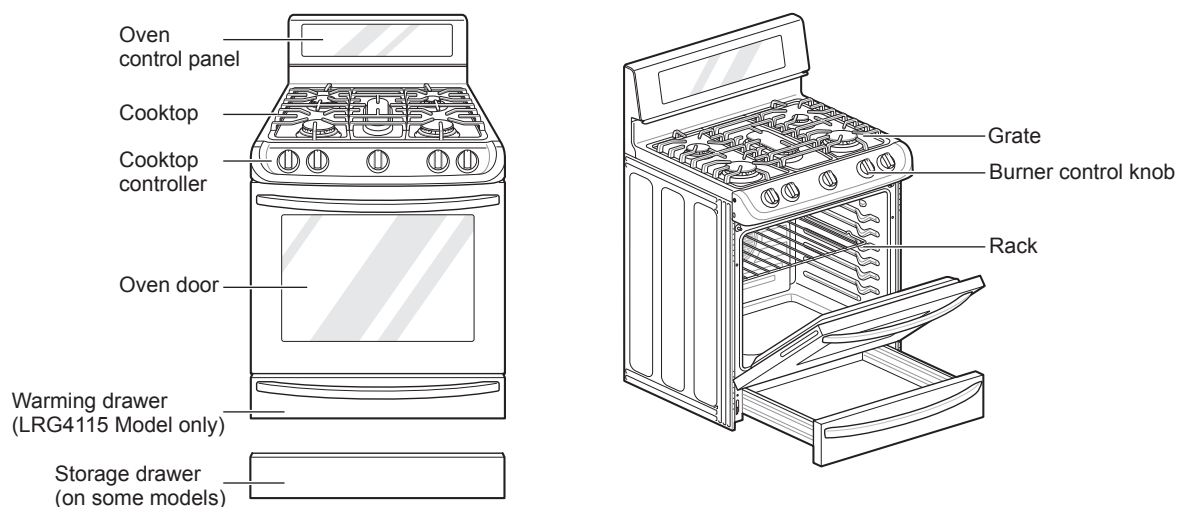

Accessories

Included Accessories



Standard rack

LRG4115 / LRG4113 (3ea)
LRG4111 (2ea)

 
 


Griddle (1ea)

(LRG4115 Model only)



Spray bottle (1ea)

Non-scratch
scouring pad (1ea)

Anti-tip

 


Nozzles (7ea)

-Cooktop (5ea)
-Oven (2ea)



Screws (6ea)

 


Anchors (6ea)

 


Template

Optional Accessories



Grid



Broiler pan

NOTE

- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, only use authorized components.
- The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased, unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer without prior notice for product improvement purposes.