

General Information

PLEASE READ THROUGH BEFORE BEGINNING ASSEMBLY. IMPORTANT: Check boxes for Contents Listed

Check inside of parts as some parts are packaged inside of others

In the event of missing, damaged or defective parts please call our customer service dept. at 1-877-258-6020

When assembling components, place on a clean, flat non-abrasive surface to avoid scratches

Tools Required

- ... Battery or Electric Drill with #2 phillips bit
- ... Tape Measure
- ... Hammer or Rubber Mallet (recommended)

Providence Arbor

Model# 11178 (M) Assembly Instructions

Part #	<u>Description</u>	Qty
1	2" sq. x 84" Left Post	2
2	2" sq. x 84" Right Post	2
3	⅓ x 1½ x 22" Top/Bottom Cross Rail	4
4	% x 1½ x 22" Center Cross Rail	16
5	¼ x 1½ x 59½" Vertical Slat	
6	1½ x 4 x 64" Arbor Top	
7	% x 1½ x 28" Arbor Top Cross Rail	7
8	% x 1½ x 16" Corner Brace	
9	5 ¾" Arbor Top End Cap	4
10	Hardware Bag (includes:)	1
	2" sq. Post Cap	4
	% x 1½" End Cap	14
	1¼" Painted Screw	38
	Super Glue Tube	1
11	Arbor Ground Anchor Kit (includes:)	1
	16" Steel Ground Anchor (L-Shaped)	4
	#8 - 1" Painted Self Tapping Screw	8



Warranty Statement

20 Year Guarantee

Please call manufacturer direct with questions concerning missing or defective parts at Toll Free: 877-258-6020.

Dura-trel, Inc. products are warranted to be free from manufacturing defects resulting in delaminating, peeling, flaking, corroding, cracking, crazing, or extreme amounts of fading or bleaching causing the PVC to change to its natural color for a period of 20 years from the date of purchase.

Normal weathering is defined as exposure to sunlight and extremes of weather and atmosphere which will cause any colored surface to gradually fade.

CONDITIONS NOT COVERED BY THIS WARRANTY:

- A. Physical abuse, misuse, neglect, or improper storage.
- B. Improper installation or installation not in strict adherence to the instructions written by Dura-Trel, Inc.
- C. This warranty does not apply if materials are painted, varnished, or coated with any substance.
- D. Dura-Trel, Inc. is not responsible for damages to product during shipping.
- E. Damage attributable to atmospheric pollutants, hail, lightning, hurricane, tornado, wind borne objects, earthquake, fire, mildew, casualty, act of God, building or ground settlement, or subjection to stress or weight.

CLAIMS AND REMEDIES:

If a Dura-Trel, Inc. product is determined to have a manufacturing defect which is covered by this warranty, Dura-Trel, Inc. will replace the material containing the defect (labor not included) F.O.B from the point of manufacture. Dura-trel, Inc. will not be responsible for any cost incurred in the removal or reinstallation of the product.


Important: An claims must be sent to the following address and should describe the defect claim.

Dura-Trel, Inc., P.O. Box 122, Sheboygan Falls, WI 53085

Dura-Trel, Inc. reserves the right to discontinue or change its design, and or color. If the original color or style is not available, Dura-Trel, Inc. shall have the right to substitute a product designated by Dura-Trel, Inc.

Dura-Trel, Inc. shall not be liable for any incidental, special, or consequential damages arising out of the use of these products




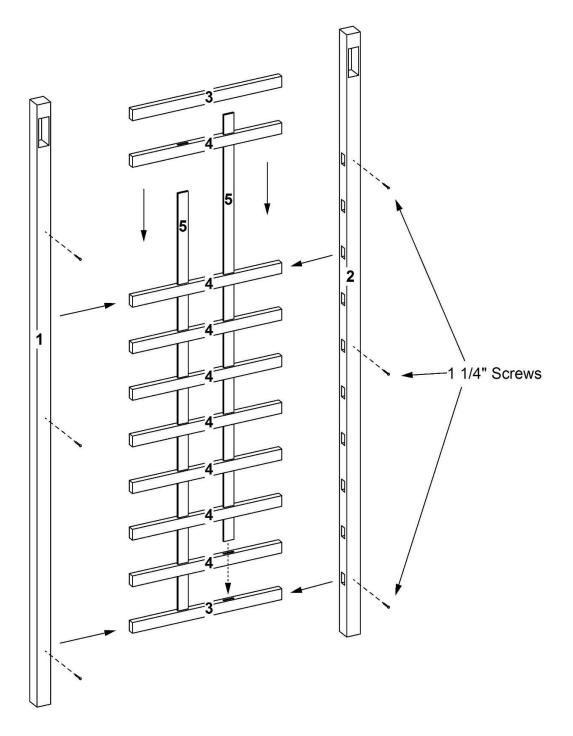

Starting at bottom of 84" left post (part 1) insert one 22" top/bottom cross rail (part 3) and eight 22" center cross rails (part 4) into holes. DO NOT insert remaining top/bottom cross rail into top hole at this time. Insert free ends of cross rails into 84" right post (part 2). Slide two 59½" vertical slats (part 5) through each center cross rail and into bottom cross rail. Separate top of posts just enough to insert remaining 22" top/bottom cross rail (part 3) into top hole of each post, inserting free end of vertical slats into top cross rail. Using three 1¼" screws per post, fasten together arbor side. Be sure all parts are fully inserted into posts before securing.

REPEAT using remaining posts and cross rails to make second arbor panel.



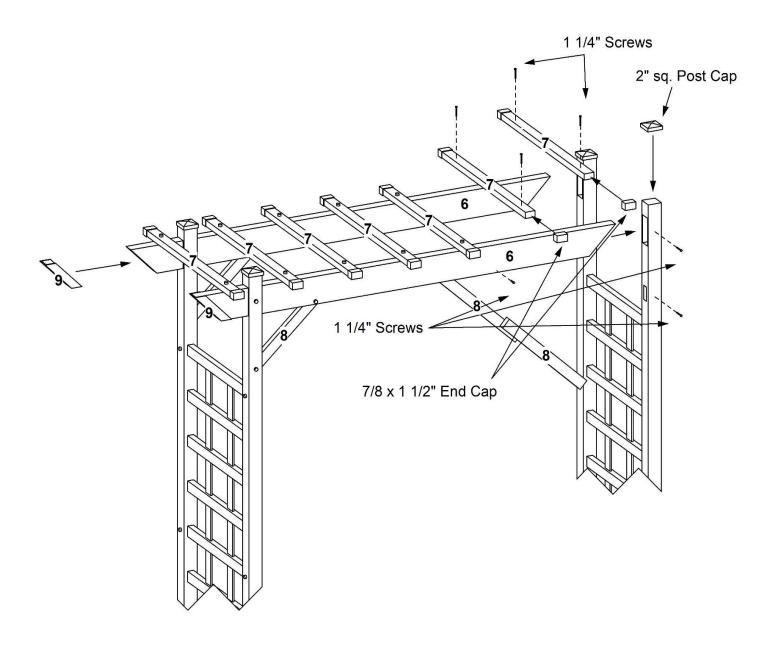

Insert two 16" corner braces (part 8) into each 64" arbor top (part 6). Slide ends of arbor top rail through holes at top of post, inserting corner braces into posts. Measure 9 inches from tips of arbor top rails and slide posts so outside of post in 9 inches from end of arbor top rails. Using three 1¼" screws per post, fasten together posts, arbor top rails and corner braces.

Using two 1¼" screws per part, fasten all seven arbor top cross rails (part 7) to arbor top rails, using small pilot holes to line up screws.

Using included super glue tube, glue ½ x 1½" end caps onto ends of each arbor top cross rail. Glue four 5¾" arbor top end caps (part 9) onto ends of arbor top rails. Glue four 2" sq. post caps onto tops of post.



11178	Providence Arbor	
1	2" sq. x 84" PVA Left Post	2.00
2	2" sq. x 84" PVA Right Post	2.00
3	% x 1½ x 22" PVT Top/Bottom	4.00
4	% x 1½ x 22" PVT Center Rai	16.00
5	¼ x 1½ x 59½" Slat	4.00
6	1½ x 4 x 64" PVA Arbor Top	2.00
7	% x 1½ x 28" PVA Top Cross	7.00
8	% x 1½ x 16" Rail -Thin	4.00
9	5 %" CMA Angled End Cap	4.00
10	Hardware Bag	1.00
	2" sq." Post Cap	2.00
	% x 1½" End Cap	14.00
	1¼" Painted Screw	38.00
	Super Glue Tube	1.00
	Grnd Anch - Arbor (2 x 2)	1.00
	#8 - 1" Self Tapping White He	8.00