




SEA MILLS / LANCASTER / DOVER

ENTRYWAY STORAGE BENCH

MODEL # INT-AXCSM-BNCH-EB

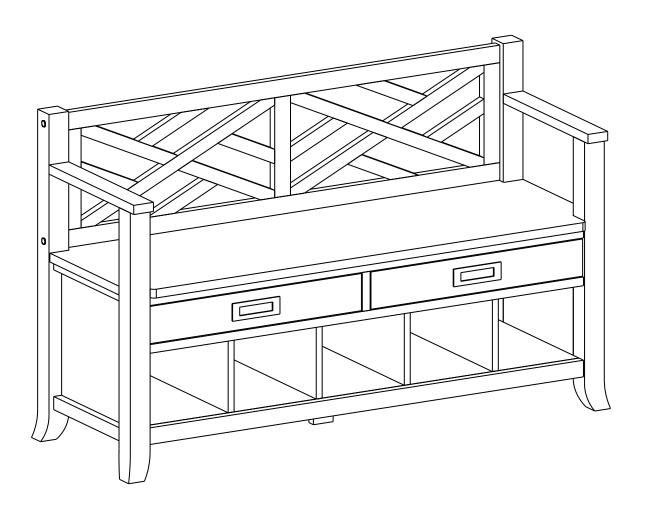



FOR REPLACEMENT PARTS OR HELP WITH ASSEMBLY PLEASE CONTACT US AT:

simpli-home.com/customer-support

PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT:

PLEASE CONTACT THE RETAILER

WHERE THE ITEM WAS PURCHASED FROM





ENTER TO WIN

Upload an image of our furniture in your home with a short review to our facebook page for a chance to

Win up to \$3000 of **Simpli Home** furniture!!!

www.facebook.com/simplihomefurnishings



IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.


Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.


To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

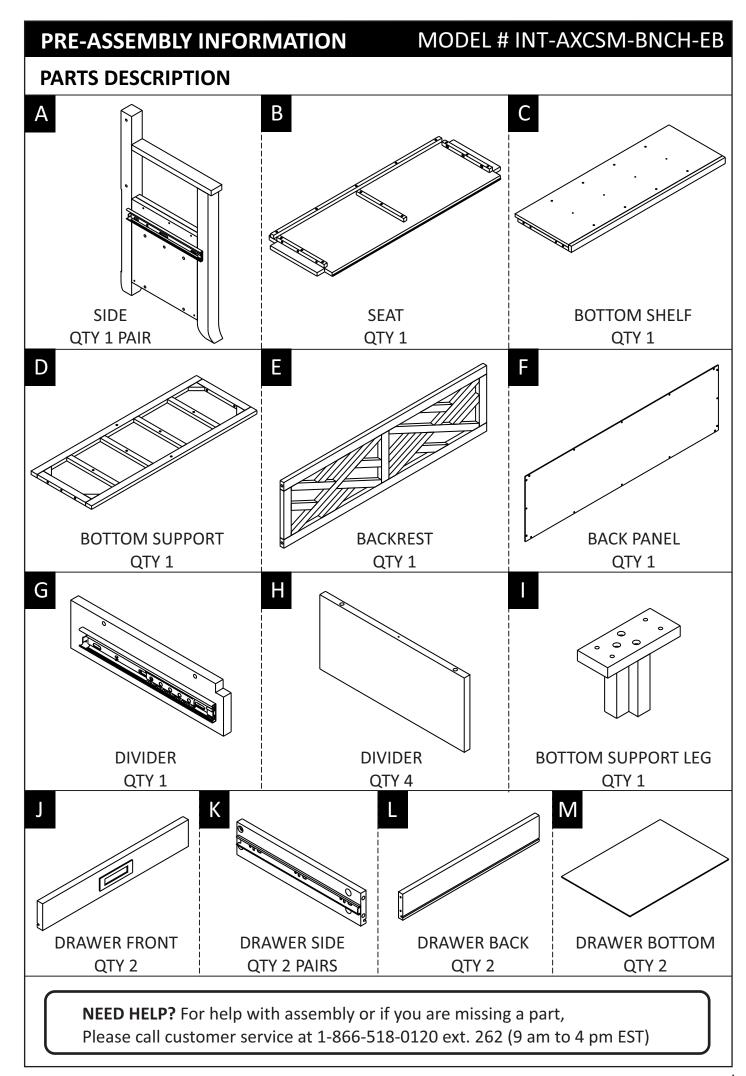

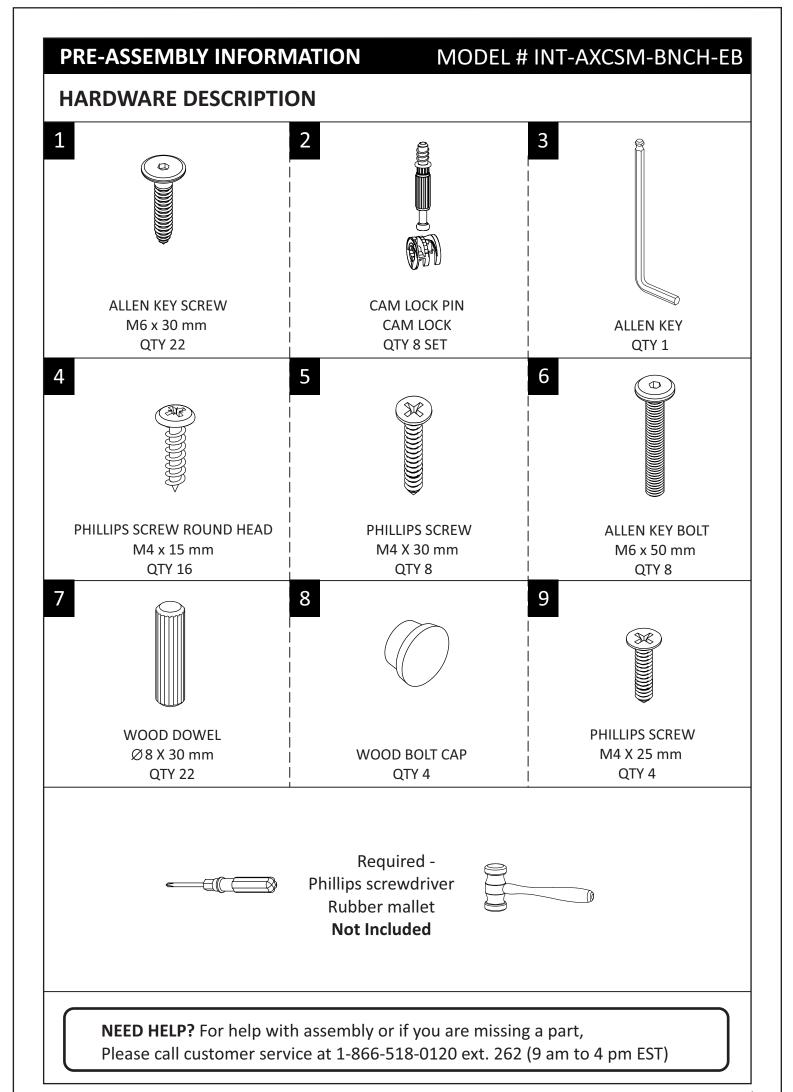


6/18

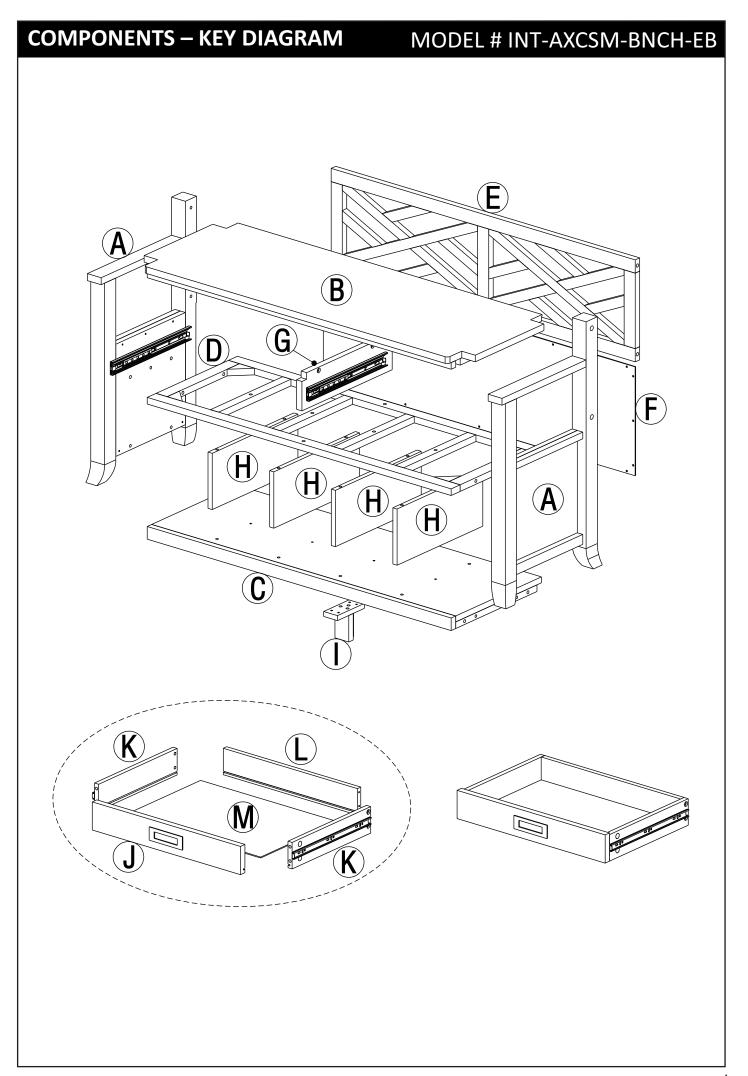

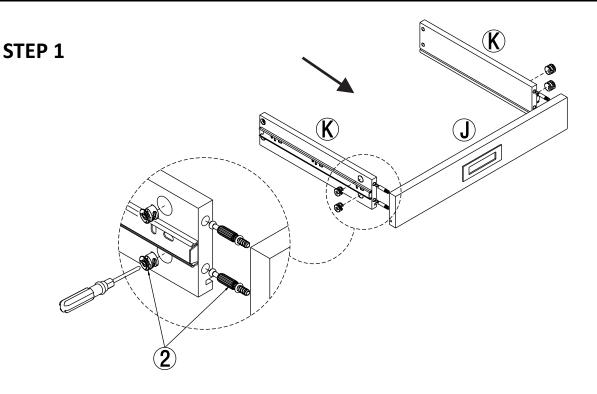


- 1. Attach 4 Cam Lock Pins (2) to back of Drawer Front (J).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (K).
- 3. Insert 2 Cam Locks (2) into pre-drilled holes on each Drawer Side (K).
- 4. Use flathead screwdriver secure Cam Locks.



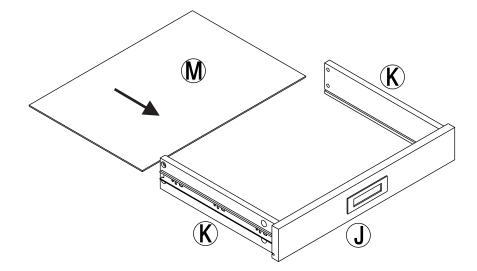


1. Slide Drawer Bottom (M) firmly into slots on Drawer Sides (K) and Drawer Front (J).

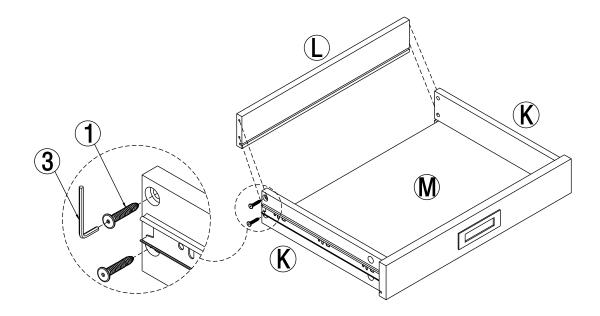


- 1. Align Drawer Back(L) with Drawer Sides(K).
- 2. Attach back using 2 Allen Key Screws 1 through pre-drilled holes on each Side (K).
- 2. Use Allen Key 3 to tighten screws. Do not over-tighten.


Repeat Step 1-3 for the second drawer.

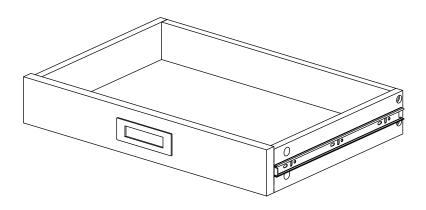


STEP 4

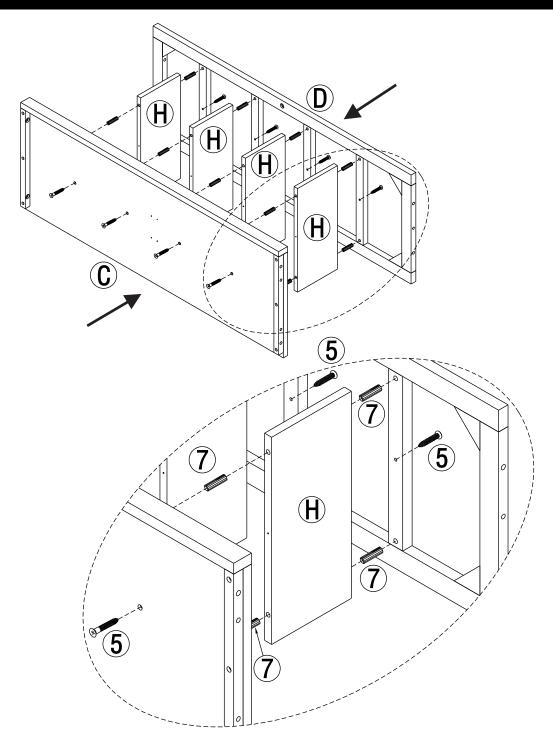


- 1. Insert 16 Wood Dowels 7 into 4 Dividers (H) (4 Dowels per each Divider).
- 2. Use rubber mallet to tap Dowels 7 into bottom of holes securely. ½ length of dowels should be exposed.
- 3. Hold Bottom Shelf © upright and attach 4 Dividers H by inserting exposed dowel ends into matching pre-drilled holes on Bottom Shelf ©.
- 4. Insert 4 Phillips Screws 5 into pre-drilled holes through centre of Bottom Shelf C into Dividers (H) and use Phillips screwdriver to snugly tighten. Do not over-tighten.
- 5. Align exposed dowels of Dividers (H) to holes on Bottom Support (D).
- 6. Insert 4 Phillips Screw 5 into pre-drilled holes in centre of Bottom Support D and use Phillips screwdriver to snugly tighten. Do not over-tighten.

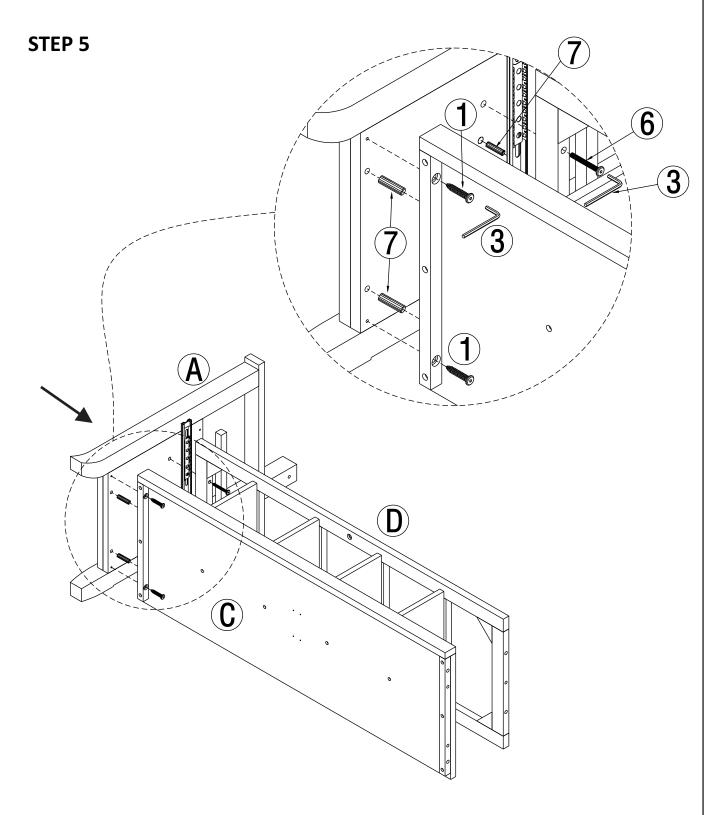

- 1. Insert 2 Dowels 7 into Bottom Shelf © and one Dowel 7 into Bottom Support D.
- 2. Use rubber mallet to tap Dowels 7 into bottom of holes securely. ½ length of dowels should be exposed.
- 3. Attach Side (A) to Bottom Shelf (C) using 2 Allen Key Bolts (1).
- 4. Attach Side (A) to Bottom Support (D) using 2 Allen Key Bolts (6).
- 5. Use Allen Key(3) to tighten Bolts. Do not over-tighten.

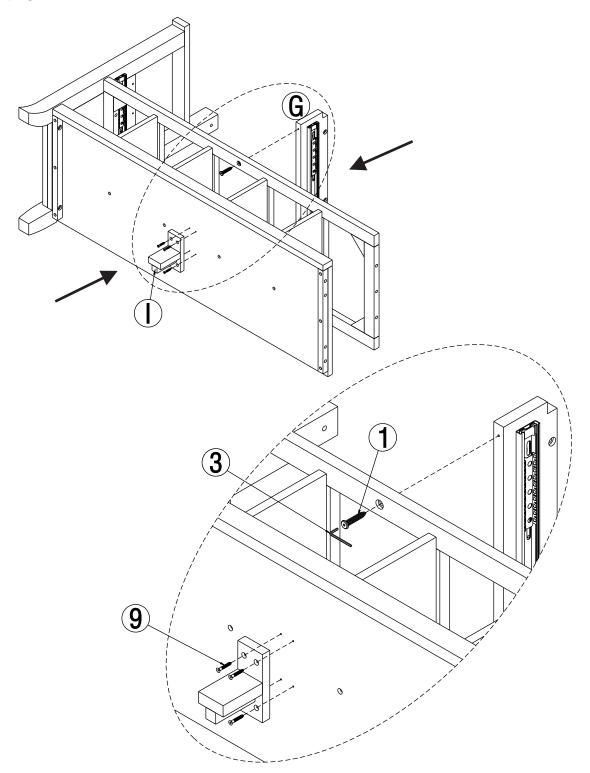


- 1. Attach Divider (G) to Bottom Support (D) using 2 Allen Key Screws (1).
- 2. Use Allen Key 3 to tighten screws. Do not over-tighten.
- 3. Attach Bottom Support Leg(1) to Bottom Shelf (C) using 4 Phillips Screws (9) into predrilled guide holes.
- 4. Use Phillips screwdriver to tighten screws. Do not over-tighten.

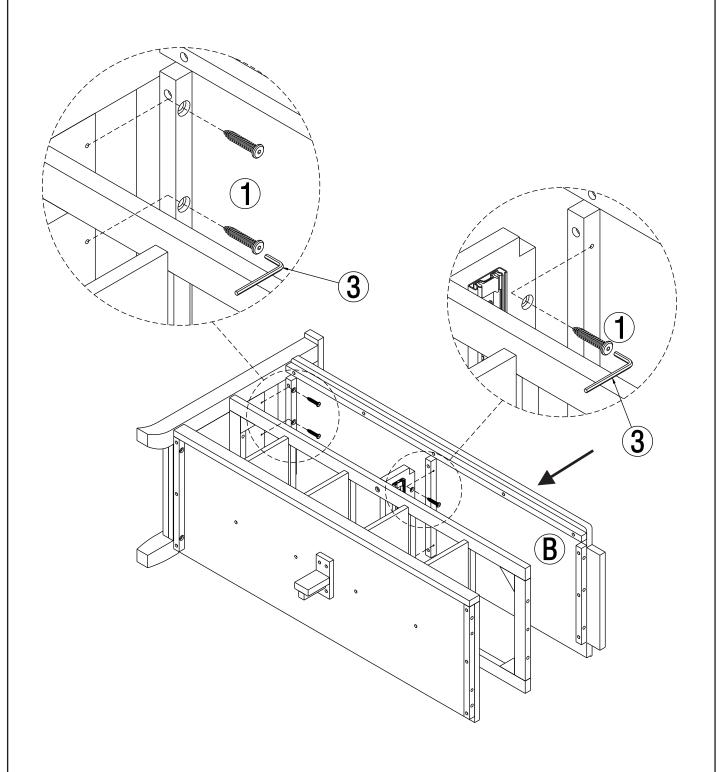


- 1. Attach Seat B to Side A and Divider G using 5 Allen Key Bolts 1.
- 2. Use Allen Key (3) to tighten Screws. Do not over-tighten.


STEP 8

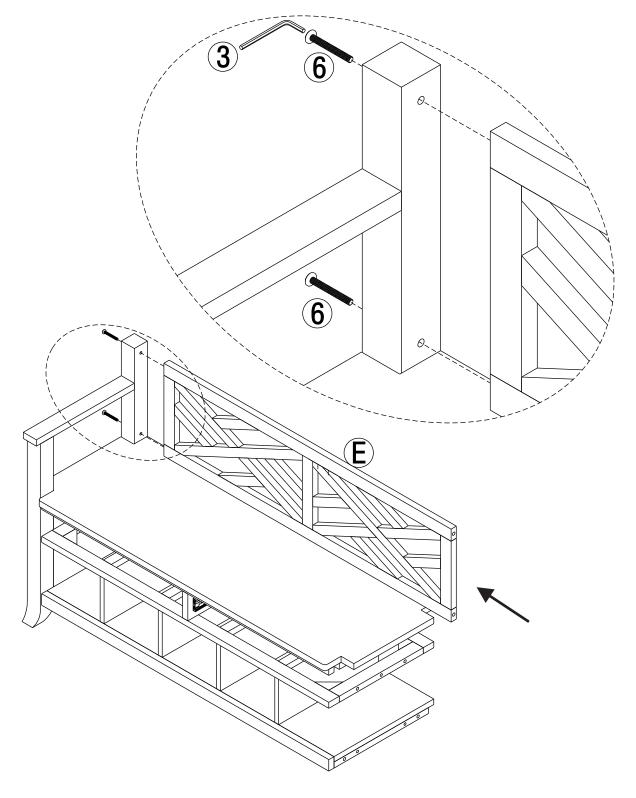

- 1. Attach Backrest (E) to Side (A) using 2 Allen Key Bolts (6).
- 2. Use Allen Key 3 to tighten Bolts. Do not over-tighten.

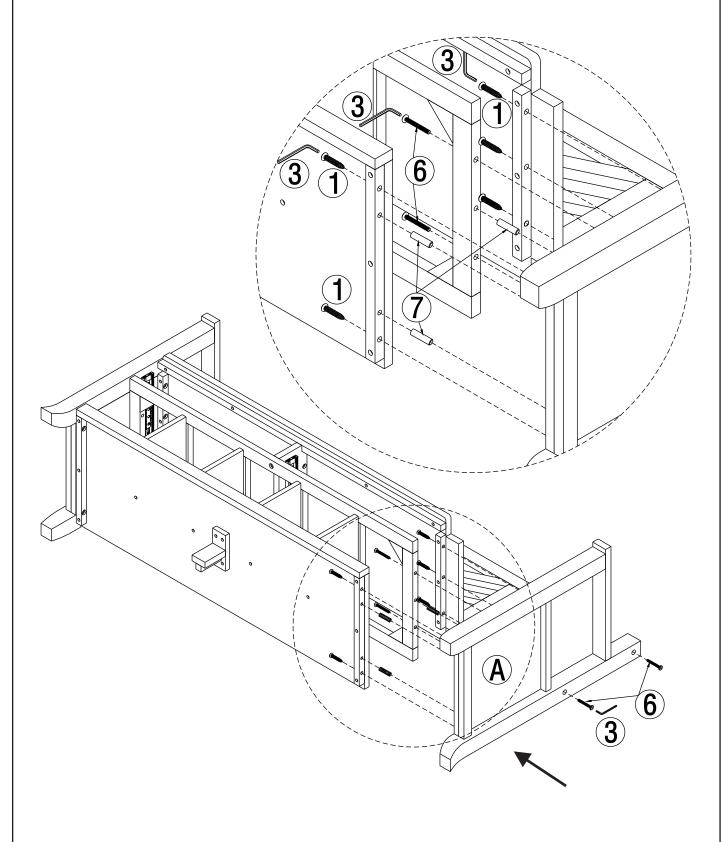


1. Repeat Step 5, Step 7 & Step 8 for the second Side (A).

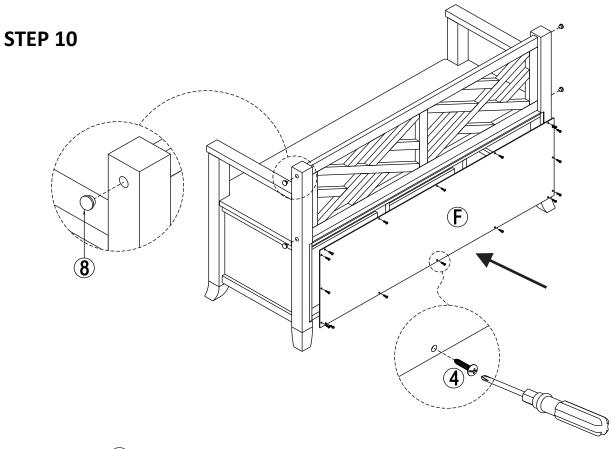

- 1. Attach Back F to back frame using 16 Phillips Screw Round Heads 4.
- 2. Use Phillips screwdriver to snugly tighten screws.
- 3. Insert 4 Wood Bolt Caps 8 into exposed bolt holes on side of bench.



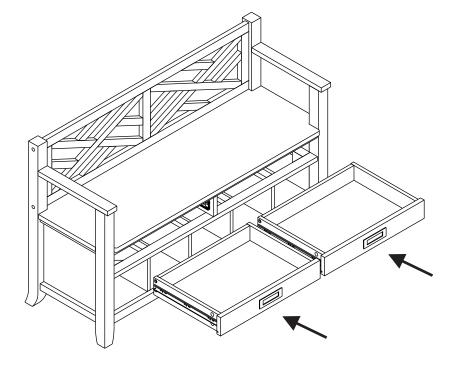

- 1. Insert assembled drawers into slots on assembled bench.
- 2. Drawer can be inserted into either side of bench opening.
- 3. Drawer will lock into place with plastic locks on drawer glides.
- 4. To remove drawer, locks need to be spueezed simultaneously.





WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.





Question, problems, missing parts?

Before returning your product please email Customer Support at

simpli-home.com/customer-support

or call
Customer Support at 1-866-518-0120 ext. 262
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website www.simpli-home.com

Like us on facebook www.facebook.com/simplihomefurnishings