

Follow This Step-By-Step Guide To Using Your Generator

1 Remove generator from package

2 Mix 2-Cycle Oil with Gas

Mix unleaded gasoline with 2-cycle oil for outdoor power equipment with 50:1 mix. (1 gal/2.5 oz)

3 Add Fuel

Remove cap from top of generator and add maximum 1 gallon into fuel tank

4 Start The Generator

- Use the generator OUTDOORS in a WELL VENTILATED AREA.
- DO NOT CONNECT electrical devices until AFTER the generator is started.
- Turn Power Switch to ON
- Turn FUEL PETCOCK to ON (Figure A)
- Adjust the CHOKE to CLOSED TO START position
- Start the generator manually with the Recoil (Pull) Start.
- Once the engine has started and runs for about a minute, move the choke lever slowly towards the "Open To Run" position.
- You can now connect electrical devices. DO NOT CONNECT electrical devices until AFTER the generator is started.



Fuel Petcock (Figure A)

GENMAX1500

1,500 Surge / 900 Running Watts

Unleaded Gas & Mixed 2-Cycle Oil (50:1)


GENERATOR SPECIFICATIONS:

- 2 - 120V A/C Outlet
- 1 - 12V D/C Outlet
- Recoil Start
- 2 HP 2-Cycle Fuel Engine
- Displacement: 72cc
- Phase: Single
- AC Voltage: 120V @ 60Hz
- Decibel Rating <65 db @ 24 Feet
- Complies with EPA emissions
- Engine Run Time: 8 Hours @ 50% Load
- Fuel Tank Capacity: 1 Gallon
- Fuel: Unleaded Gas & 2-Cycle Oil Mix (50:1)
- High Altitude Use: This generator is not recommended for high altitude use above 3,000 feet.
- If you are using a generator above sea level, the generator may not function properly because of air flow getting through the mixer.
- Warranty: 2 YEAR Limited Emissions
- Warranty: 1 YEAR Limited

2-CYCLE OIL IS NOT INCLUDED WITH THIS GENERATOR. IT IS SOLD SEPARATELY.

Read and understand instruction manual before using generator.

Add 2-Cycle Fuel

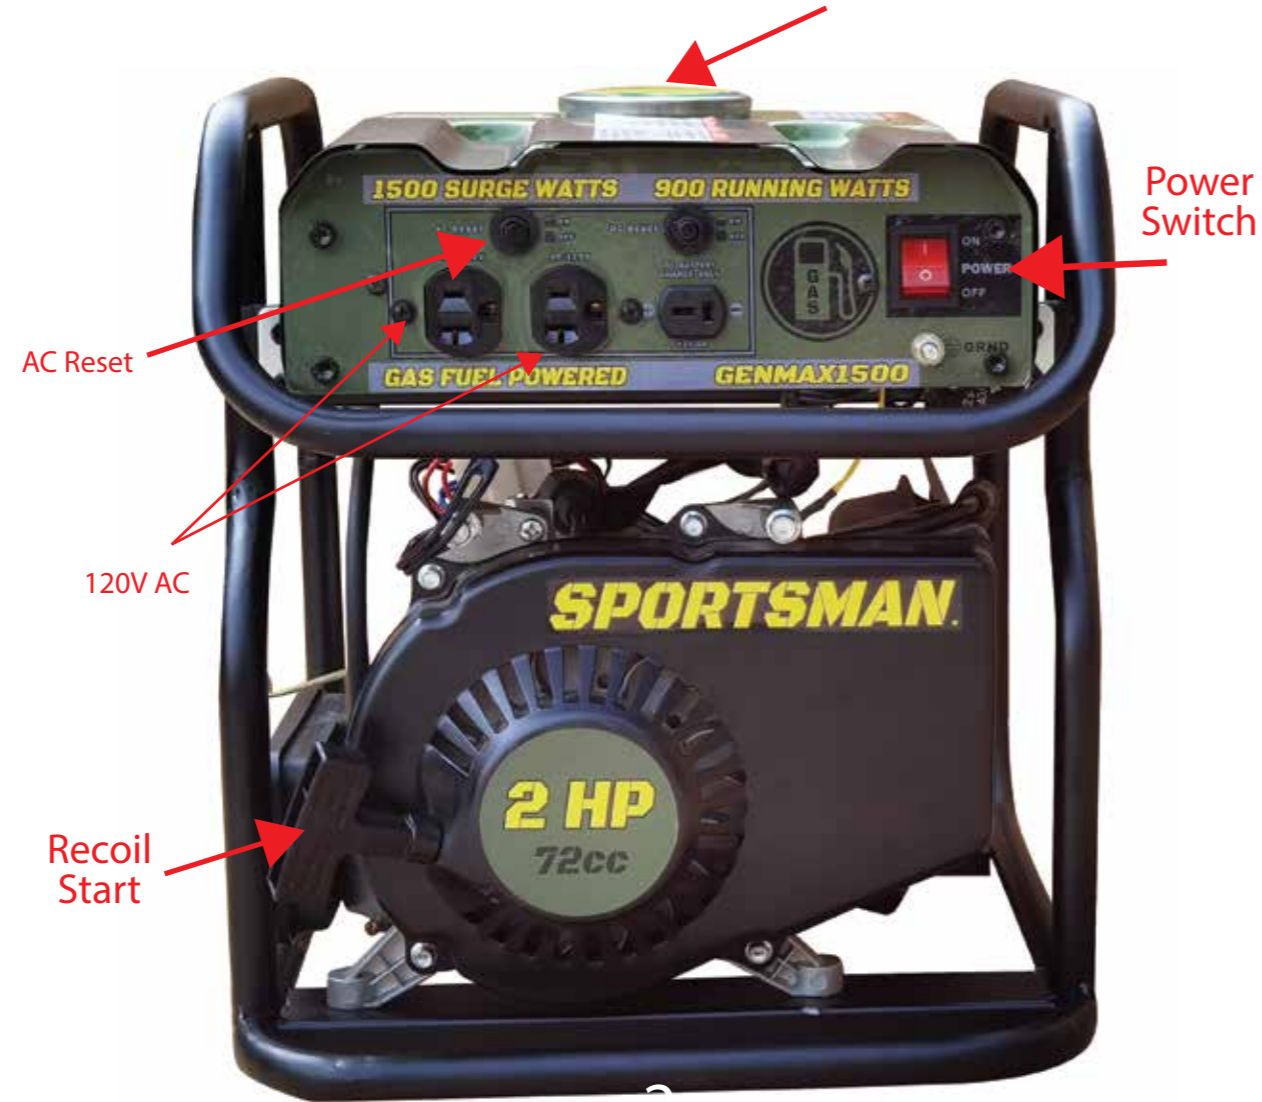

WARNING

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

Always follow Warning labels placed on the generator, and read and follow all Warning labels included inside the Product Manual.

WARNING: NEVER use a generator inside a home or a garage, EVEN IF the doors and windows are open.

ONLY USE OUTSIDE and far way from windows, doors and vents leading into an enclosed area.

Using a generator indoors can kill you in minutes. The generator produces an exhaust that contains carbon monoxide. This is a poison you cannot see or smell.


Do not attach a chain or rope to secure the generator to a post as this can be difficult to remove in the event of an emergency.

GENMAX1500

1,500 Surge / 900 Running Watts

Unleaded Gas & Mixed 2-Cycle Oil (50:1)

CONTROL PANEL FEATURES

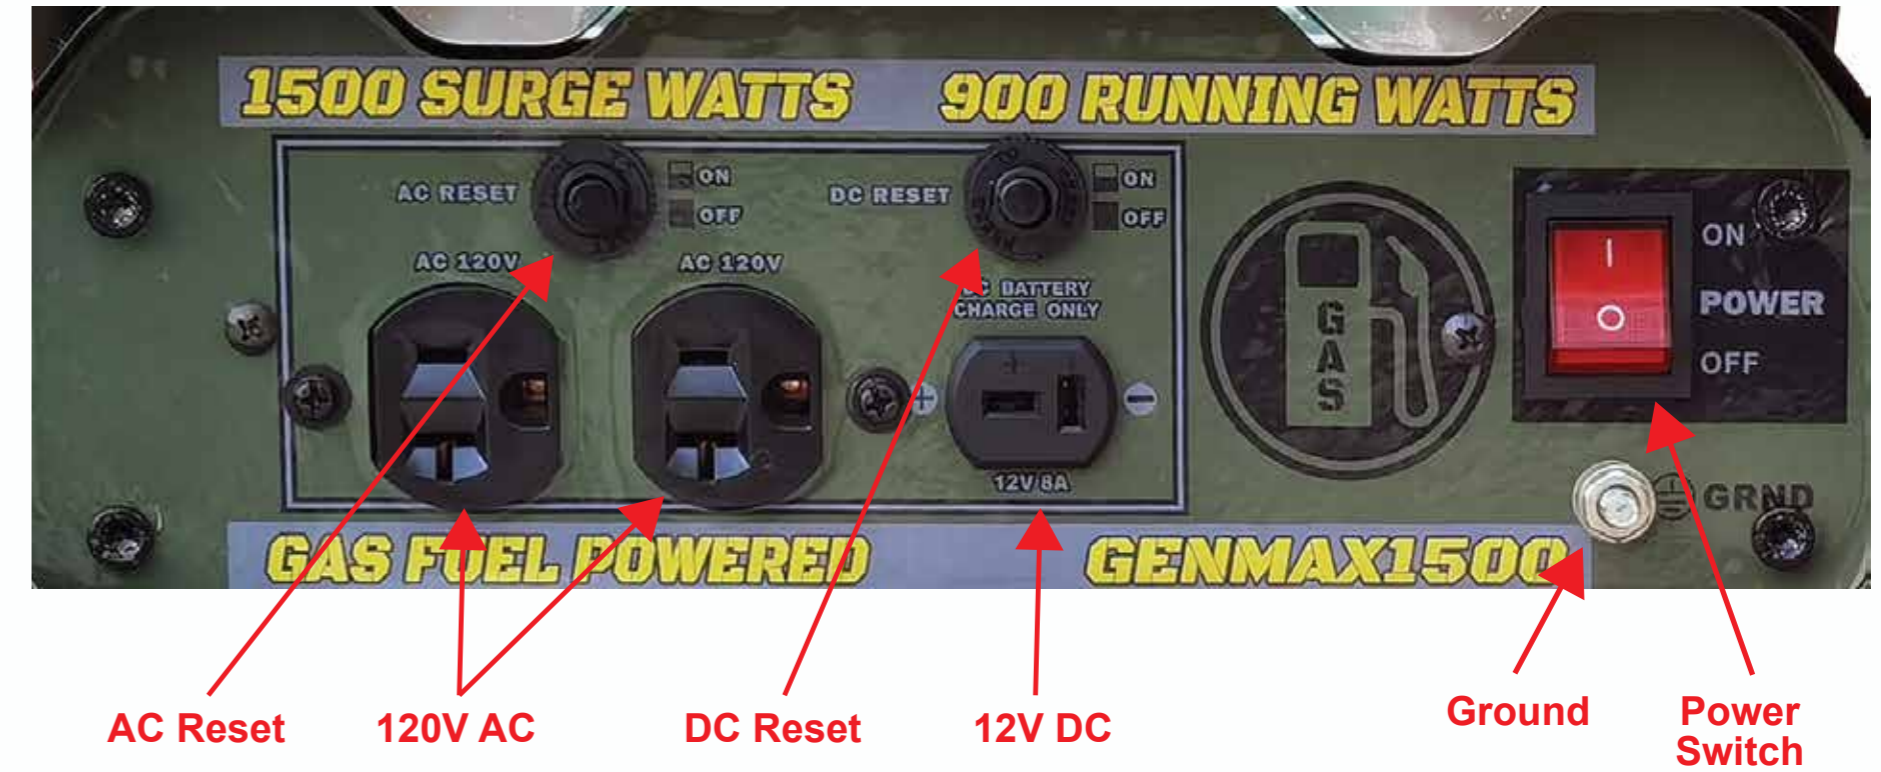

DO NOT CONNECT electrical devices until AFTER the generator is started.

WARNING

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

Always follow Warning labels placed on the generator, and read and follow all Warning labels included inside the Product Manual.

WARNING: NEVER use a generator inside a home or a garage, EVEN IF the doors and windows are open.

ONLY USE OUTSIDE and far away from windows, doors and vents leading into an enclosed area.

Using a generator indoors can kill you in minutes. The generator produces an exhaust that contains carbon monoxide. This is a poison you cannot see or smell.

Do not attach a chain or rope to secure the generator to a post as this can be difficult to remove in the event of an emergency.

NOTES

Outlets available on this generator, from left to right:

- 2 x 120 Volt A/C Outlet
- 1 x 12 Volt D/C Outlet

TOLL-FREE NATIONWIDE HELP LINE! 866-460-9436

Need Help? Call Us First!
Monday-Friday 8:00-4:00 Central Time

Visit our website for Troubleshooting & Frequently Asked Questions

SPORTSMAN

www.sportsmanseriesbrand.com/generators

TOLL-FREE NATIONWIDE HELP LINE! 866-460-9436

Need Help? Call Us First!
Monday-Friday 8:00-4:00 Central Time

Visit our website for Troubleshooting & Frequently Asked Questions

SPORTSMAN

www.sportsmanseriesbrand.com/generators