

LA CROSSE®
TECHNOLOGY

Atomic Digital Wall Clock with Indoor Temperature & Perpetual Calendar



Model: WS-8008U-IT
Instruction Manual
DC: 081617


Welcome to the La Crosse Technology® family!
We hope you enjoy your new Atomic Clock.

Table of Contents

2	<u>Let's Get Started</u>
3	<u>Buttons</u>
3	<u>Basic Settings</u>
4	<u>Time Zone</u>
5	<u>Fahrenheit Celsius</u>
5	<u>Alarm Time</u>
6	<u>Activate Deactivate Alarm</u>
6	<u>Snooze</u>
6	<u>Reset Button</u>
7	<u>Help Us, Help You</u>
7	<u>Let's Get Social</u>
7	<u>Care and Maintenance</u>
8	<u>Specifications</u>
8	<u>Warranty and Support</u>
9	<u>FCC Statement</u>

Lets Get Started

 1. Insert 2 AA batteries into your clock.
2. Configure basic settings.

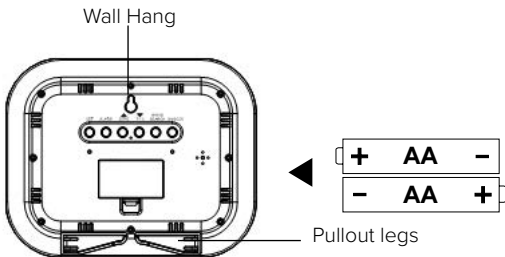


Important:

The clock will look for the Atomic time signal for 7 minutes when batteries are first installed. Buttons will not function during the Atomic time signal search.

Options:

- Press the WWVB SEARCH button once to stop the Atomic time signal search.
- Manually set the time, date, and time zone.
- The clock will search for the Atomic time signal again after midnight.
- Press WWVB SEARCH button anytime, to start an Atomic signal search.
- For information about WWVB visit: <http://bit.ly/AtomicTime>

 Buttons

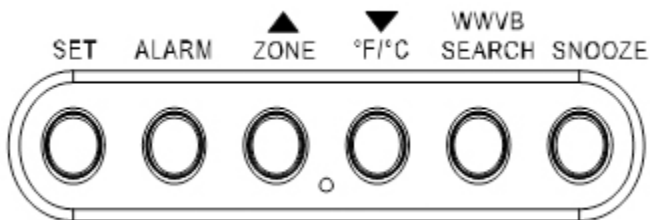

Basic Settings

 
- Hold the SET button to enter time set mode.
- Press the ARROW buttons to adjust values.
- Press SET to confirm adjustments and move to next item.

Settings order:


1. 12/24 Hour Format
2. Hour
3. Minutes
4. Year
5. Month,
6. Date
7. Daylight Saving Indicator (ON to automatically change)

Press SET to exit, or wait 30 seconds without pressing buttons to return to the normal time display.

12/24 Hour Time

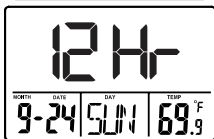


Hour

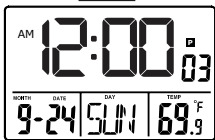 

Minutes



 Year

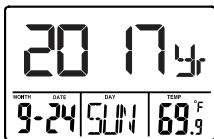

Month



Date



DST Indicator





Time Zone

- This clock has four time zones to choose from.
- The default time zone is Pacific (P)
- Press the ZONE button to select your time zone.
 - P = Pacific
 - M = Mountain
 - C = Central
 - E = Eastern





Fahrenheit | Celsius

  - Press the °F/°C button to switch from Fahrenheit to Celsius temperature display.

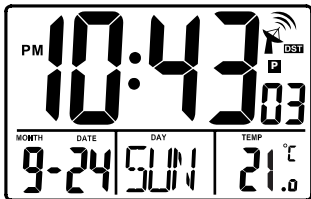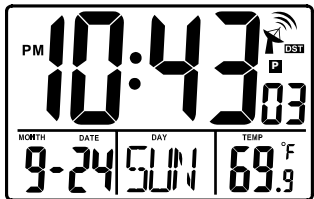

Alarm Time

  1. Hold the ALARM button for 3 seconds until the seconds are replaced by the letters "AL".
2. The alarm hour will flash.
3. Use the ARROW buttons to set the hour.
4. Press the ALARM button once. The alarm minutes will flash,
5. Use the ARROW buttons the set the minutes.
6. Press the ALARM button to confirm and exit.

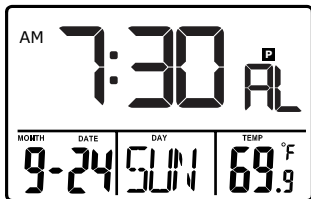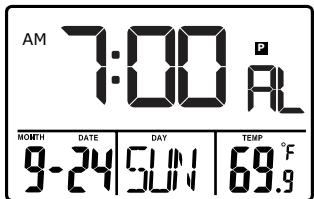

Activate/Deactivate Alarm

Setting the alarm time and activating the alarm are separate steps.

1. Press the ALARM button to activate the alarm.
2. Press the ALARM button again to deactivate the alarm.
3. The alarm icon (bell) will appear when active.
4. The alarm icon (bell) will disappear when inactive.



Snooze

- Press SNOOZE to silence an active alarm for 5 minutes.
- The alarm icon will flash.
- This is a crescendo alarm that will sound for 120 seconds unless deactivated.
- Press any button to stop the alarm for 24 hours.

Reset Button

- If the atomic clock display appears distorted or is not responding to buttons, use a pen or paper clip to press RESET one time.
- This will reset the atomic clock to default settings.

Help Us, Help You!

If you have ideas for features or support solutions you'd like to see us make, please let us know! We truly want to make owning a La Crosse Technology product not only a practical experience, but also a fun one.

So email us at: store@lacrossetechnology.com

Let's Get Social

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



Care and Maintenance

- Do not mix old and new batteries
- Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+ and -).
- Remove batteries from equipment when it is not to be used for an extended period of time.
- Promptly remove expired batteries.

Specifications

Temperature

Indoor Range: 14.1°F to 139.9°F
(-9.9°C to 59.9°C)

Power

Clock: 2 AA, LR6, IEC batteries
Batteries not included

Battery Life: Up to 24 months with reputable batteries

Dimensions

Clock: 9.22" L x 1.10" W x 7.38" H
(23.44 L x 18.74 H x 2.81 W cm)

Warranty and Support

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

Before returning a product, please contact our friendly customer support or visit our online help:

Phone: 1-608-782-1610

Online: www.lacrossetechnology.com/support

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.