



# INFLATABLE INSTRUCTIONS

## Safety Information

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
- c. Do not use products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- d. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- e. **Adults Note:** Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.
- f. **DANGER** – To prevent electric shock, do not immerse in water; wipe clean with damp cloth. Immersing this product can result in an electric shock.
- g. This product is not intended for permanent installation or use.
- h. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- i. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
- j. Do not let lamps rest on the supply cord or on any wire.
- k. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- l. Do not use this product for other than its intended purpose.
- m. Do not hang ornaments or other objects from cord, wire, or light string.
- n. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
- o. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
- p. Do not place the product against carpeting, furniture, or any other fabric when in use.
- q. Read and follow all instructions that are on the product or provided with the product.

### SAVE THESE INSTRUCTIONS

## Package Contents

Part	Description	Quantity
A	Inflatable unit	1
B	Tethers	2
C	Stakes	4
D	UL - listed Power supply	1

POWER SUPPLY:

Input: 120V ~ 60Hz Output: 12.0V = 0.67A




## Installation

### Preparing for Installation

- Step 1. Remove contents from packaging.
- Step 2. Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.
- Step 3. Connect adapter into connection of fan

### Securing the unit to the ground

- Step 1. Zip zipper at base of fan. Inflatable unit (A) will then fully inflate.
- Step 2. Using the loops attached at the bottom of the Inflatable unit (A), insert stakes (C) into the ground.

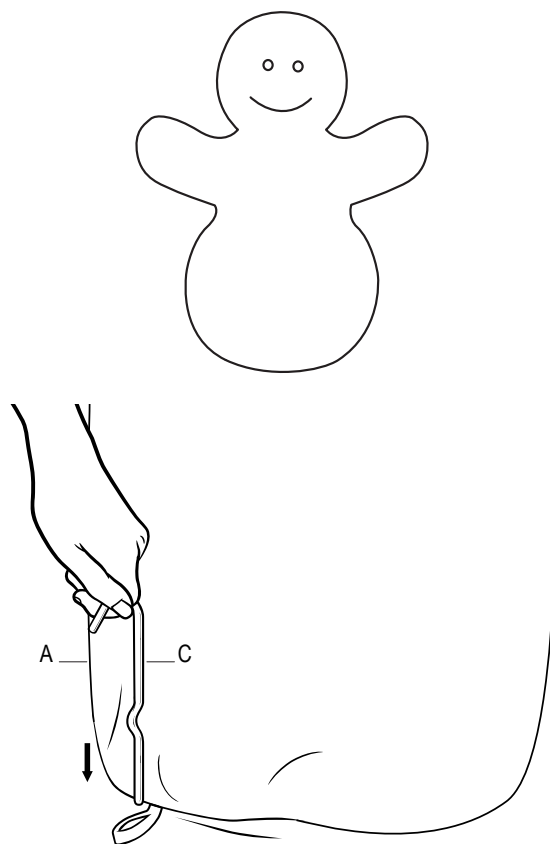

## Pre-Operation

**This power unit is intended to be correctly orientated in a vertical or floor mount position.**

When using electrical products, basic precautions should always be practiced including the following:

- a. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
- b. Read and follow all instructions that are on the product or provided with the product.
- c. For a cord-connected or direct plug-in power unit, do not use an extension cord.
- d. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
- e. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- f. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.
- g. For a cord-connected or direct plug-in unit, do not use in a bathroom.
- h. For a direct plug-in or cord-connected power unit marked in accordance with 65.2:

**WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

## Pre-Operation (continued)

i. For a permanently connected power unit marked in accordance with 65.2:

**WARNING:** Risk of Electric Shock. When used outdoors, install only on a circuit protected by a Class A GFCI.

j. **WARNING:** Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

k. For a unit intended to be mounted greater than 0.30 m (1 foot) from the ground surface:

**WARNING:** Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.

## SAVE THESE INSTRUCTIONS

■ This manual contains important safety and operating instructions for power units.

## Operation


### Inflating the unit

Step 1. Attach tethers (B) to the inflatable unit (A).

Step 2. Insert the stakes (C) into the ground so the tethers (B) are taut.

Step 3. Your inflatable unit (A) is weighted at the base with a sealed weight-bag. Adjust weight-bag to position your inflatable unit (A) as desired.

Step 4. Drive stake into ground at a 45 degree angle from the inflatable unit (A).

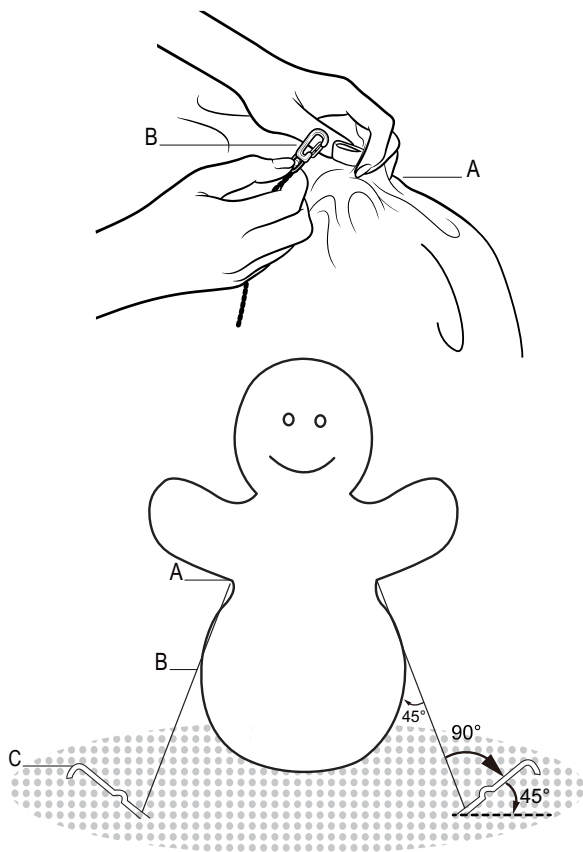

**NOTE:** To deflate, unplug the unit. For faster deflation, unzip the zipper on the unit after you unplug it. For indoor and outdoor use.

**WARNING:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant

## Operation (continued)

to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and Used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Care and Cleaning

- Wipe the unit with a damp cloth and allow the unit to dry before storing. If necessary, you can use a mild detergent.
- Store the product neatly in a cool, dry location protected from sunlight.
- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product conductors, connections, and wires.

## Troubleshooting

### Problem: The unit is not inflating.

- Ensure that the zipper on the unit is completely closed.
- The power source is disabled or the cord may be unplugged.
- Something may be blocking the fan's air intake.

### Problem: The unit is torn.

- You can hand sew tears with any type of thread or use clear packing tape to cover the tear.

### Problem: There is a delay after plugging in the adapter.

- This is a protective feature built in to these adapters to protect your electrical circuit and the product. A 2-3 seconds start-up delay is normal.

**SKU#** 1002404557 1002404563 1001261488  
1001261490 1001261491

**Model #:** 75075 95064 (73796 58758 70384 70387)

MADE IN CHINA  
PRINTED IN CHINA

DISTRIBUTED BY:  
HOME DEPOT  
2455 PACES FERRY RD., N.W.  
ATLANTA, GA 30339  
FOR ASSISTANCE, CALL:  
1-877-527-0313  
HOMEACCENTSHOLIDAY.COM