

OVENTE®

Electric Grinder with Stainless Steel Blades CG225 Series



Before using please read the instruction manual and keep it for future.

Electric Grinder with Stainless Steel Blades for Coffee Beans, Spices, Nuts, Grains

The **Ovente** electric grinder reinvigorates luscious flavors and aroma from ground coffee, tea leaves, herbs, spices, nuts grains and so much more. Equipped with a 150-Watt motor power the **Ovente** electric grinder can pulverize and grind a coarse ground coffee withing seconds of use. With the use of the ergonomically designed pulse button which paves way for a better and smoother grind. 2.5oz stainless steel capacity that yields to about 70grams of aromatic and flavorful ground products. The structure of the body was well designed for easy gripping and less likely to slip. Uses stainless steel blades that turns coarse coffee beans into freshly ground coffee.

FEATURES

- 120V, 150 Watt motor for **fast** grinding whilst preserving aromatic flavors from **coffee beans, herbs, spices, grains**
- Ergonomic pulse action button for a smooth grind; Transparent and easy to open lid **with cord storage**
- 2.5oz Stainless steel capacity; Ergonomic body structure that for easy grip, **oval design**
- **Stainless steel** blades that pulverizes with precision from coarse to fine grounds
- Perfect for coffee, tea, herbs, spices, nuts, grains and more..



IMPORTANT SAFEGUARDS

When using coffee grinder, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS.**

- To protect against electrical shock, do not put the motor body, cord or electrical plug of this coffee grinder in water or other liquids.
- This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is not intended for use by children.
- Do not remove the blade until the blade has stopped completely. After releasing the PULSE button, the blade will come to a stop after 2-3 seconds.
- Make sure the appliance is off, the motor has stopped completely and the appliance is unplugged from outlet before putting on or taking off attachments, and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- To reduce the risk of injury, do not drape cord over the countertop or tabletop where it can be pulled on by children.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- To disconnect, remove plug from wall outlet. Do not yank cord, instead grasp plug and pull to disconnect.
- Do not use the appliance for other than intended use.
- Check grinding chamber for presence of foreign objects before using
- Blades are sharp. Handle them carefully.
- Make certain the voltage of the appliance is in accordance with your domestic supply.
- Do not immerse appliance in water.
- To reduce the risk of fire or electric shock, do not dismantle the appliance.

SHORT CORD INSTRUCTIONS


Regarding your Cord Set :

- Short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cords should be used with caution.
- If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be of a grounded type and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



COFFEE GRINDER PARTS

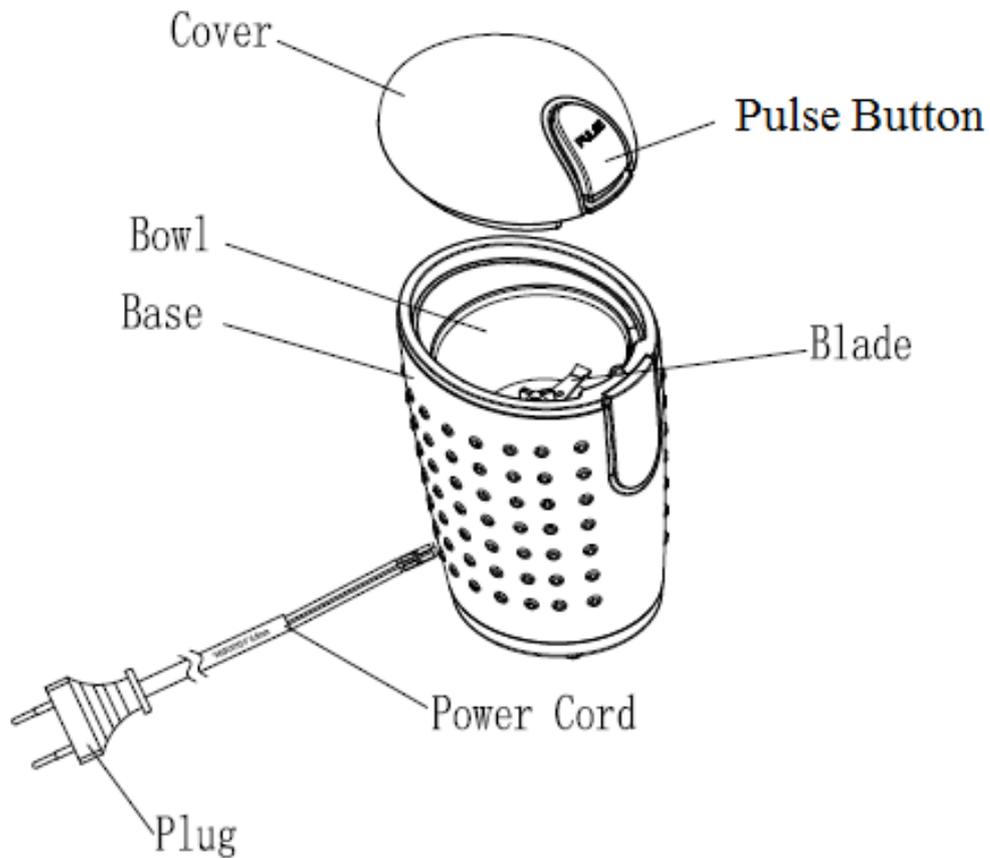

BEFORE FIRST USE

Clean the cover, bowl, and blade as described in the "Care and Maintenance" section.

USING THE COFFEE GRINDER

- Place the unit on a sturdy countertop.
- Remove the cover by lifting it up. Fill the grinding chamber with the amount of coffee needed for the number of cups you plan to brew.
- Place the lid on the grinder base.

- Plug in the grinder.
- To start grinding, press and hold the PULSE button. Release the PULSE button to stop grinding.

NOTICE: Do not operate for more than 30 seconds at a time. After 30 seconds of continuous operation, allow the unit to rest for 30 seconds.

NOTE: *The Coffee Grinder will not operate unless the cover is in place.*

- The coffee will be ground fine or coarse depending on the amount of grinding time. For example, a coarse grind would require less grinding time than a fine grind.
- When grinding is complete, unplug the unit. Carefully remove the lid and pour the ground coffee into a bowl or canister, or directly into your coffee machine filter basket.



COFFEE GRINDER MAINTENANCE

WARNING:

- Always make sure the Coffee Grinder is unplugged from the electrical outlet before cleaning it.
- This product was permanently lubricated at the factory before shipping and will not require further lubrication for the life of the product. Additional lubrication of motor parts could increase the risk of a fire hazard.

NOTICE: Do not use harsh or abrasive cleaners or pads (metal scouring pads) on the Coffee Grinder.

- Hand wash the cover with soapy water or place it on the upper rack of a dishwasher for cleaning.
- Clean the bowl and blade with a clean, wet, soapy sponge. Rinse the bowl and blade, but do not immerse the base in water. Gently pat the bowl and base dry using a clean, dry cloth.

CAUTION: Clean the bowl and blade carefully to avoid personal injury.

- Wipe the base with a damp cloth to clean.
- Replace the cover once all parts are dry.
- Store in a cool, dry place.



ELECTRICAL REQUIREMENTS

Voltage	Frequency	Wattage
120VAC	60Hz	150W



WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)
Visit us at [ovente.com](https://www.ovente.com)**



Facebook.com/ovente



@OventeTweets



@Ovente