

Use and Care Manual

All of our products are packaged and shipped with manuals.

Eucalyptus wood maintenance:

Wipe all wood surfaces clean with a damp cloth.

Application:

Apply marine teak oil (made from linseed oil combined with multi UV block) at regular intervals to retain the rich wood look and ensure maximum wood life. The frequency can range from once per year if the furniture is under shade and up to four times per year under extreme conditions.

Methods of application:

Liberally apply teak oil on wood with a paint brush or spray bottle. A cloth is only recommended for minor touch-ups. Allow teak oil to absorb into wood for about 45-55 minutes in shade or 20-30 minutes in direct sun. Lightly wipe off any excess teak oil with a soft cloth. Allow 24-36 hours drying time.

Notes:

Non-maintenance will result in a "graying" effect over time which will cause the wood to splinter and reduce the wood life to around 5 to 10 years.

Unless otherwise directed wipe furniture down with a damp cloth to clean.